




# ***MFX-1330/ F-300***

*Plain-paper digital Fax/Copier/Printer/Scanner*

## **User Manual**

---

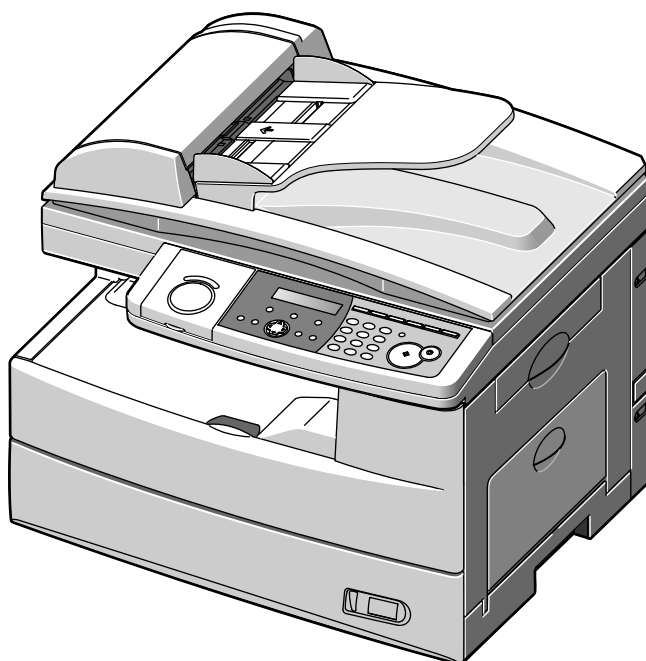



As an **Energy Star**® partner, Muratec has determined that this product meets the Energy Star® guidelines for energy efficiency.



**Super G3** is an extension of Group 3 fax technology standards, allowing the use of high-speed ITU-T V.34 modems for 33.6 Kbps transmission and high-speed protocols for rapid handshaking.

**JBIG** — Joint Bi-level Image experts Group, the new ITU-T standard image data compression method. As JBIG compresses the data more efficiently than MMR, it is especially effective when transmitting halftone (grayscale) image document.



### **QuadAccess**

QuadAccess is a more powerful version of what already is a pretty powerful feature, called dual access. While a fax with normal dual access allows you to do two things at once, QuadAccess allows you to do four operations at once. For example, even if the machine is (1) printing a copy, (2) transmitting from memory and (3) scanning documents for a different memory transmission, you can still (4) program the machine.

### **Trademarks**

Muratec, the Muratec logo and all Muratec product names contained herein are trademarks of Murata machinery, Ltd and Muratec America, Inc.

QuadAccess is registered trademark of Muratec America Inc.

All other products referenced are registered trademarks or trademarks of their respective companies.

This manual and any updates to it can be found online at **[www.muratec.com](http://www.muratec.com)**

Go to the "Products" section of this site, then click on "MFX-1330" or "F-300".

# Welcome

Thank you for choosing the Muratec MFX-1330 and F-300.

This User Manual describes the functions, operating procedures, precautions, and basic troubleshooting for the Muratec MFX-1330 and F-300.

Before using this machine, be sure to read the User Manual thoroughly in order to ensure that you use the machine efficiently. After you have gone through the manual, keep it handy at all times.

Note that some of the illustrations of the machine used in the User Manual may be different from what you actually see on your machine.

## The Manual

We supply two manuals for this machine, Printed and Digital. Select the manual according to your needs. Main description for each manual is as follows:

### **Printed Manual (This operation manual)**

Precautions  
Setting the machine  
Sending & receiving faxes  
Copying  
Maintenance  
Troubleshooting  
Including many useful functions related to fax and copy

### **Digital Manual (on the Printer & Scanner driver CD)**

Installing the printer and scanner driver  
PC printing  
Scanning  
Including many useful functions related to PC printing and scanning

### LAYOUT & INSTALLATION

### GETTING STARTED

### AUTO DIALER

### SENDING FAXES

### RECEIVING FAXES

### USING F-CODE BOX FEATURE

### COPYING

### SPECIAL FEATURES

### RESTRICTING USE OF THE MACHINE

### USER SETTINGS

### REPORT & LISTS

### MAINTENANCE & TROUBLESHOOTING

### APPENDIX AND INDEX

1

2

3

4

5

6

7

8

9

10

11

12

AI

# Contents

Welcome.....	I
The Manual .....	I
Regulatory information .....	VII
United States of America .....	VII
Canada .....	VIII
Limited warranty.....	IX
Precautions .....	XI
Installation Precautions.....	XI
Power requirements.....	XII
Space Requirements .....	XIII
General Precautions .....	XIII
Storing and handling the toner and drum cartridges .....	XIV
Legal Restrictions on Copying .....	XV
Symbols and terms .....	XVI
 <b>Chapter 1</b>	
<b>Layout &amp; Installation .....</b>	<b>1.1</b>
Packing contents.....	1.2
Machine layout .....	1.3
Control Panel Overview .....	1.4
Setup your machine.....	1.7
Unlocking the mirror carriage .....	1.7
Attaching the document tray .....	1.7
Making connection.....	1.8
Installing the Drum and Toner cartridges .....	1.9
Plug in and power up.....	1.11
Turning off the transport mode .....	1.11
Adjusting the speaker volume .....	1.12
Initial Setup .....	1.13
Clearing stored settings .....	1.13
Getting started.....	1.13
Entering Initial settings.....	1.14
Using the Energy save mode.....	1.17
 <b>Chapter 2</b>	
<b>Getting started.....</b>	<b>2.1</b>
Operating tips .....	2.2
Switching the machine mode .....	2.2
Entering character.....	2.2
Memory back-up .....	2.3
How to select the function.....	2.4
Function table.....	2.5
Document and Paper handling .....	2.10
Document handling .....	2.10
Paper handling.....	2.12
 <b>Chapter 3</b>	
<b>Autodialer .....</b>	<b>3.1</b>
Autodialer basics .....	3.2
Autodialers.....	3.2
Call groups .....	3.2
Destination names and the phone directory dialing .....	3.2
Special dialing characters .....	3.2
One-touch keys.....	3.4
Entering or changing a one-touch number.....	3.4



Quick access to one-touch registration .....	3.5
Erasing a one-touch number .....	3.5
How to dial using one-touch key .....	3.6
Speed-dial numbers .....	3.7
Entering or changing a speed-dial number .....	3.7
Erasing a speed-dial number .....	3.7
How to dial using Speed-dial number .....	3.8
Call group dialing .....	3.9
Entering or changing a call group .....	3.9
Erasing a call group .....	3.10
How to dial using a call group .....	3.10
Phone directory dialing .....	3.11
How to dial using phone directory .....	3.11
If the phone directory dialing call fails .....	3.12

## **Chapter 4**

<b>Sending faxes .....</b>	<b>4.1</b>
Before sending .....	4.2
Document handling .....	4.2
Scanning resolution .....	4.2
Scanning contrast .....	4.2
Mixing document resolution and contrast in a multiple page .....	4.2
Sending method .....	4.3
Memory overflow message .....	4.3
Sending a fax .....	4.4
Memory transmission .....	4.4
Real time transmission (Non memory transmission) .....	4.6
Redialing .....	4.7
Automatically fax redialing .....	4.7
Redialing manually .....	4.7
Reviewing or canceling commands .....	4.8
To review or cancel the commands .....	4.8
Reviewing or canceling parts of a broadcast .....	4.9
Printing a delayed command list .....	4.9
Printing a stored document .....	4.9
View or print the results of fax transactions .....	4.10
Advanced fax functions .....	4.11
Broadcasting .....	4.12
Delayed transmission .....	4.13
Batch transmission .....	4.14
Selecting the TTI .....	4.17
Polling transmission .....	4.18
Fax & Copy .....	4.19
Cover page .....	4.20
Using alternative telephone network service providers .....	4.21

## **Chapter 5**

<b>Receiving faxes .....</b>	<b>5.1</b>
Receiving a fax .....	5.2
Selecting the reception mode .....	5.2
Manual reception mode .....	5.2
Automatic reception mode .....	5.2
Answering calls manually .....	5.4
Switch the Automatic or Manual reception mode .....	5.4
If the paper runs out while fax reception .....	5.5
Settings for fax reception .....	5.6
Setting the number of rings .....	5.6
Print settings .....	5.6

Advanced receiving functions .....	5.8
Block Junk Fax .....	5.9
Polling receiving .....	5.11
Fax forwarding.....	5.12
Separator page.....	5.14
<b>Chapter 6</b>	
<b>Using F-code box features.....</b>	<b>6.1</b>
F-code: an introduction.....	6.2
Creating or modifying a F-code box .....	6.2
Printing a list of F-code boxes .....	6.7
Printing a list of documents stored in your F-code boxes.....	6.7
Erasing an empty F-code box.....	6.7
Storing a document in a bulletin box for being polled .....	6.8
Printing a document stored in a bulletin box .....	6.9
Erasing a document stored in a bulletin box .....	6.9
Printing a document you received in the security box .....	6.10
Sending a document with a subaddress and password.....	6.11
Polling a document with a subaddress and password .....	6.12
<b>Chapter 7</b>	
<b>Copying.....</b>	<b>7.1</b>
Before copying.....	7.2
Document and paper handling .....	7.2
Changing your machine to the Copy mode .....	7.2
Display in the copy standby mode .....	7.2
Memory overflow message .....	7.2
Making copies .....	7.3
Making copies using the ADF .....	7.3
Making copies using the Document glass .....	7.3
Basic copy settings.....	7.4
Selecting document type .....	7.4
Scanning contrast.....	7.4
Zoom ratio .....	7.4
Number of copies .....	7.5
Sorting copies.....	7.5
Selecting paper size .....	7.5
Selecting document size .....	7.6
Advanced copy functions .....	7.7
Combine .....	7.8
Duplex copy.....	7.9
Copy resolution .....	7.10
<b>Chapter 8</b>	
<b>Special features .....</b>	<b>8.1</b>
Soft keys .....	8.2
Functions you can assign to the soft key.....	8.2
Programming the Soft key .....	8.3
Macro keys .....	8.4
Steps you can program into a macro key .....	8.4
Creating or modifying a Macro .....	8.5
Erasing a Macro key .....	8.6
Setting the speed for Macro .....	8.6
Fax dialing with the Macro key .....	8.7
Copying with the Macro key .....	8.7
Printing lists using the Macro key .....	8.7
Storing fax documents with the Macro key.....	8.7
Viewing counters .....	8.8

<b>Chapter 9</b>	
<b>Restricting use of the machine .....</b>	<b>9.1</b>
Security features.....	9.2
The protection passcode .....	9.2
Security reception .....	9.3
Masking the PIN.....	9.5
Using department codes.....	9.8
Turning department code protection on and off .....	9.8
Entering a department code.....	9.8
Erasing a department code .....	9.9
Turning the department code setting on and off .....	9.9
Fax charge setting .....	9.10
Copy charge setting .....	9.10
Sending a fax using a department code .....	9.11
Making a copy using a department code .....	9.11
Printing the department code list.....	9.12
Resetting the counter for department code list .....	9.12
Copy protection .....	9.13
<b>Chapter 10</b>	
<b>User settings .....</b>	<b>10.1</b>
Machine settings.....	10.2
Accessing the machine setting .....	10.2
Fax settings.....	10.4
Accessing the fax setting .....	10.4
Copy settings.....	10.6
Accessing the copy setting.....	10.6
Scanner settings .....	10.8
Accessing the scanner setting .....	10.8
<b>Chapter 11</b>	
<b>Report &amp; Lists .....</b>	<b>11.1</b>
Table of the lists and journal .....	11.2
Activity journal .....	11.4
Setting the activity journal .....	11.4
Printing an activity journal manually.....	11.4
Setting the printing order of the activity journal .....	11.5
Transmission confirmation report .....	11.5
Setting the Transmission Confirmation Report.....	11.5
Stored document list.....	11.6
Documents erased notification.....	11.6
<b>Chapter 12</b>	
<b>Maintenance and Troubleshooting .....</b>	<b>12.1</b>
Maintenance.....	12.2
Cleaning tips.....	12.2
Cleaning the scanning area .....	12.2
Cleaning the ADF rollers .....	12.3
Cleaning the drum charge wire and LED print head.....	12.3
Replace the toner cartridge.....	12.4
Replace the drum cartridge.....	12.6
Troubleshooting .....	12.8
Document jams .....	12.8
Paper jams.....	12.11
LCD error messages .....	12.14
“Check Message” printouts .....	12.17
Error code.....	12.18

Machine problems.....	12.20
Faxing problems.....	12.20
Copying problems .....	12.21
Problems printing from your computer .....	12.21
Scanner problems .....	12.21
Print quality problems .....	12.22
If you cannot solve the problem .....	12.24
<b>Appendix &amp; Index.....</b>	<b>AI.1</b>
Specifications .....	AI.2
General.....	AI.2
Fax .....	AI.3
Copy .....	AI.3
Printer .....	AI.3
Scanner.....	AI.4
Consumable items .....	AI.4
Index.....	AI.5

# Regulatory information

## Customer information

### United States of America

---

This equipment complies with Part 68 of FCC rules and the requirements adopted by the ACTA. On the rear panel of this equipment is a label that contains, among other information, a product identifier in the format **US:AAAEQ##TXXXX**. If required, this number must be provided to the telephone company.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format **US:AAAEQ##TXXXX**. The digits represented by **##** are the REN without a decimal point.

Your fax is designed for use on standard-device telephone lines. The fax connects to the telephone line with a standard line called the USOC RJ-11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

If the equipment MFX-1330 and F-300 causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with the equipment MFX-1330 and F-300, see operating instructions for details. For further repair or warranty information, please contact Muratec Customer Support Center at 800-347-3296 (from the U.S. only). If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of the MFX-1330 and F-300 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment is hearing aid compatible.

When programming emergency numbers and/or making test calls to emergency numbers:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

To protect your product against power surges, we recommend the use of a power protection device (Surge arrester).

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including FAX machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)

For instructions on programming this information into your FAX machine, see “Initial Setup” on pages 1.13 to 1.17 of this manual.

### ***FCC Part 15***

This equipment has been tested and found to comply with the limits for a Class A digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **Canada**

---

### **NOTICE:**

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications.

### **NOTICE:**

The Ringer Equivalence Number (REN) for this terminal equipment is **XX**. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

### ***Canadian ICES-003***

This Class **A** digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe **A** est conforme à la norme NMB-003 du Canada.

# Limited warranty

This warranty is made by Muratec America, Inc. (hereafter referred to as “Muratec”). This warranty is valid only on Muratec products purchased and used in the United States of America. This warranty applies to the product only while owned and used by the original purchaser (“Customer”). If ownership of the product is transferred, this warranty terminates. This warranty does not apply to any product in use for rental purposes.

This Muratec product is warranted against defects in material and workmanship for ninety (90) days commencing the date of original Customer purchase. If the product is defective in material and/or workmanship (normal wear and tear excepted) during the warranty period, Muratec or its authorized representative will, during Muratec’s established service availability hours, make necessary adjustments and repairs, including, at Muratec’s option, installation of replacement parts. Muratec’s service availability hours are 8:30 am to 5:00 pm (Central time) Monday through Friday, excluding Muratec-recognized holidays. Muratec will complete the necessary adjustments and repairs within a reasonable time period, as dictated by the nature of the problem and by Muratec’s service schedule. Replacement parts may have been used and/or reconditioned. Parts that have been replaced will remain the property of Muratec. This warranty is subject to the obligations and exclusions set forth.

## ***Obligations***

1. This warranty will be honored only on presentation of the original dated authorized Muratec bill of sale or Muratec dealer bill of sale or sales slip to an authorized Muratec service representative or service center. For the name of your authorized service center, contact Muratec (from the United States, call 1-469-429-3350; from Canada, check your in-box materials for the number to call).
2. During the warranty period, the Customer must notify Muratec by telephone of any defective product material and/or workmanship.
3. Transportation (including prepayment of freight and insurance charges) of the product to and from an authorized service center, designated by Muratec, is the responsibility of the Customer.
4. If Muratec provides maintenance or responds to a call which is outside the scope of this warranty, such maintenance shall be billed to the Customer at Muratec’s then-current rates for maintenance and parts and shall be due and payable in full upon receipt of invoice.

## ***Exclusions***

1. This warranty shall not cover a product with missing or altered original identification marks.
2. This warranty applies only to products that the purchaser has properly installed, adjusted and operated in accordance with the instructions set forth in or provided with product literature. This warranty does not apply to any product which has been subjected to tampering, alteration, misuse, abuse, neglect, improper installation or transportation damage. Nor does it apply to costs for any service requested for demonstration or to confirm proper operation of this product.
3. The warranty shall not apply to adjustments, repairs or replacements necessitated by any cause beyond the control of Muratec (whether foreseeable or not) including, but not limited to, any malfunction, defects or failure caused by or resulting from any of the following: improper unpacking or installation, unauthorized service or parts, or improper maintenance or cleaning, modification or repair by the Customer, accident (including, without limitation, unavoidable accidents), fire, flood or other Acts of God, improper telephone or electrical power or surges thereof, interconnection with or use of non-compatible equipment or supplies (including paper), or placement of the product in an area which does not conform to Muratec space, electrical and/or environmental requirements.

4. Muratec will not be required to make adjustments, repairs or replacements if the product is installed or used at a location deemed by Muratec to be hazardous to health or safety, or if Muratec is not provided with free and reasonable access to the product and a telephone during service availability hours, or if the product location is not accessible by an authorized Muratec service vehicle.

EXCEPT AS EXPRESSLY SET FORTH ABOVE, AND EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, MURATEC MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ANY WARRANTY ARISING FROM COURSE OF DEALING OR USAGE OF TRADE), AND MURATEC EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN. IN THE EVENT THE PRODUCT IS NOT FREE FROM DEFECTS AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. UNDER NO CIRCUMSTANCES SHALL MURATEC BE LIABLE TO THE CUSTOMER, OR TO ANY USER, FOR ANY DAMAGES, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOST PROFITS, LOST SAVINGS OR ANY OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE MURATEC PRODUCT, EVEN IF MURATEC OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow the exclusion or limitation of incidental or consequential damages, and some States do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.




# Precautions

## Installation Precautions

---


### *Clean*

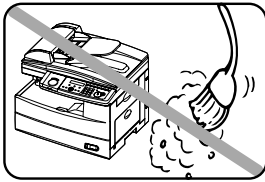

Dust buildup can damage your machine. However, do not use a dust cover, which can cause damaging overheating.


Periodically clean your machine as described in this manual.

### *Away from direct sunlight*

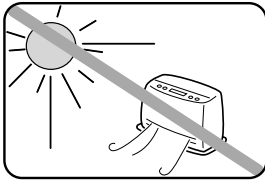


To avoid overheating, set up the machine away from direct sunlight or a heater.

### *Level, and vibration-free*

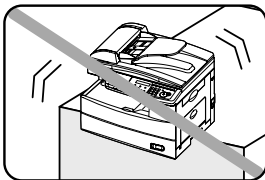

To avoid damage to the machine or injuries, set the machine up in a level, vibration-free location.


### *Near a phone jack & an AC power outlet*

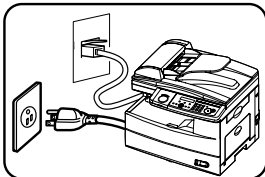

Your machine uses a standard (modular) telephone jack.


The power cord is about 2 meters long when stretched to its limit, and the power cord should never be stretched to its limit.

### *Away from a television or radio*

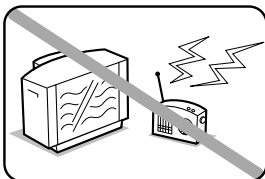

Many appliances and office equipment, including televisions, radios, copy machines, air conditioners and computers, can generate electronic noise that can interfere with the operation of your machine.

### *Avoid extreme high / low temperature*

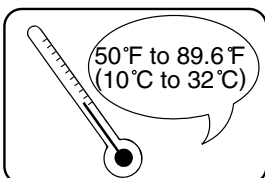


Use your machine within the temperature range of 10 °C to 32 °C (50 °F to 89.6 °F).

## Power requirements


---

### ***Use a standard AC 120 V outlet***

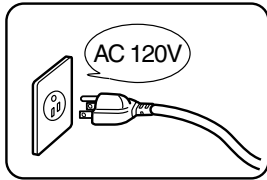


Use a standard three-pronged 120 V electrical outlet to power your machine. Using any other electrical outlet will damage to your machine.

### ***Do not share an extension cord connector with other plugs***

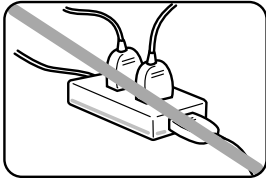


It can cause electrical shock.

### ***Do not share an outlet with a large appliance***

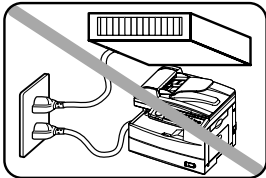

High-consumption appliances such as a refrigerator or air conditioner can cause “draw-downs” which could damage your machine.

### ***Plug in the power cord***

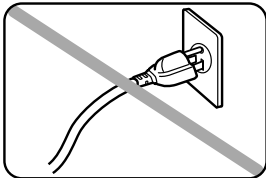

Plug the power cord carefully and completely into a wall outlet. Do not leave any portion of the electrical cord's metal plugs exposed. Doing so could cause a fire and increases the risk of electrical shock.

### ***Make sure the outlet is not controlled by a wall switch***


If it is, you will risk occasional shutoffs to the machine, causing you to lose fax messages.

***Use an electrical surge suppressor***, preferably one which guards both telephone and electrical lines. This device helps to shield your machine from damaging high-voltage electrical surges.

## Space Requirements

---

To ensure proper ventilation and easy operation, set up the machine in an area that meets the minimum requirements for clearance as illustrated below.

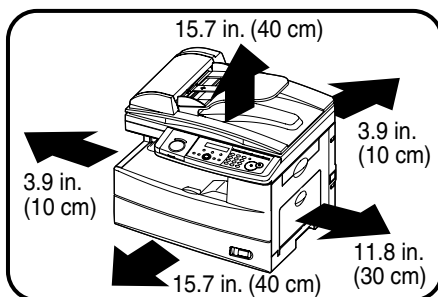


**NOTE:** In order to enable easy machine maintenance and replacement of consumables, maintain an adequate amount of space around the machine.

When lifting the machine, be sure to grab the handles on the left and right sides.

## General Precautions


---

### ***Never disassemble your machine***

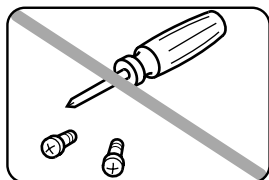


Disassembling your machine can cause serious injury to you and damage to your machine. If service is required, contact your Muratec dealer.

### ***Never handle your machine or power cord with wet hands***

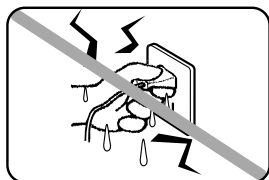


Never touch your machine or power cord if your hands are wet.

### ***During electrical storms, disconnect the plug from the outlet***

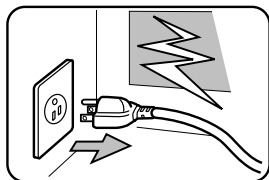


Electrical storms can cause electrical shock or damage to the machine.

### ***Keep away from liquids***

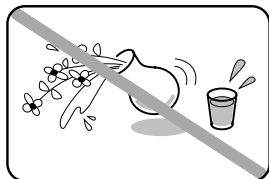


Keep liquids and metal pins or other objects away from your machine. If something falls into the machine, remove the plug from the outlet, and contact your Muratec dealer.

### ***Do not put furniture or equipment on the power cord***

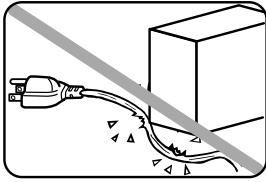

Do not put anything on or over the electrical power cord, and do not route the power cord under rugs or carpets. Doing so can damage the power cord or machine, and can cause fire or electrical shock.

### ***Allow clearance around the outlet***

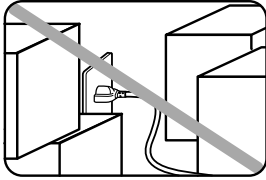

Do not stack boxes or furniture around the outlet.

## ***Transporting the Machine***

If you need to transport the machine over a long distance, consult your Muratec dealer.

## **Storing and handling the toner and drum cartridges**

---

To avoid damage to your machine and to assure the best performance possible, follow these guidelines when storing and handling toner and drum cartridges:

### ***Use supplies manufactured specifically for Muratec machines***

Using toner and drum cartridges and other supplies that are not manufactured specifically for your machine may affect the operation of your unit.

### ***Storing the cartridges***

Store the cartridges in a location that meets the following requirements:

- Free from direct sunlight
- Away from dusty conditions
- Away from a floppy disk or other computer media, computer screens, or any other materials sensitive to magnetic fields.
- Not subjected to high humidity Not extremely dusty
- Do not stand the cartridge on its end and do not store it upside down.
- Do not open the protective bag of the cartridge until you are ready to install the cartridge.

### ***Handling the cartridges***

#### **• Do not burn toner cartridges**

The toner powder is extremely flammable. Exposure to flame can cause the toner cartridges to burn or explode, causing serious injury.

- Keep cartridges away from water and oil.
- Do not expose the cartridges to direct sunlight.
- Do not subject the cartridges to static or other electrical shock.

---

**⚠CAUTION:** Be careful not to get the toner powder in your eyes. If the toner powder gets in your eyes, immediately flush your eyes with water and seek medical assistance.

---

# Legal Restrictions on Copying

---

Certain types of documents must not be copied with the purpose or intent to pass copies of such documents off as the originals.

The following is not a complete list, but is meant to be used as a guide to responsible copying.

## ***Financial Instruments***

- Personal checks
- Travelers checks
- Money orders
- Certificates of deposit
- Bonds or other certificates of indebtedness
- Stock certificates

## ***Legal Documents***

- Food stamps
- Postage stamps (canceled or uncanceled)
- Checks or drafts drawn by government agencies
- Internal revenue stamps (canceled or uncanceled)
- Passports
- Immigration papers
- Motor vehicle licenses and titles
- House and property titles and deeds

## ***General***


- Identification cards, badges, or insignias
- Copyrighted works without permission of the copyright owner

In addition, it is prohibited under any circumstances to copy domestic or foreign currencies, or works of art, without permission of the copyright owner.

When in doubt about the nature of a document, consult with legal counsel.

# Symbols and terms

In this manual, the following symbols, terms and abbreviation are used. Please familiarize yourself with these.

 **CAUTION** This symbol indicates how to avoid personal injury.

**IMPORTANT:** This instruction describes conditions or incorrect operations that could cause damage to your machine.

**NOTE:** A note describes helpful hints, restrictions and how to avoid problems.

**BOLD SMALL CAPS** Bold small capital typeface identifies specific keys on the control panel.

LCD The Liquid Crystal Display. It shows messages and selections, and prompts during operation.



“XXXX” Items that appear on the LCD.


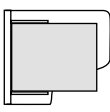
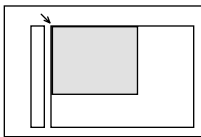
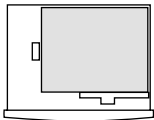





Document Original sheet(s) of paper you send, copy and scan on your machine.

Paper Paper to be printed on.

Tx Denotes sending.

Rx Denotes receiving.

,  Shows the direction of the document and paper.

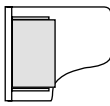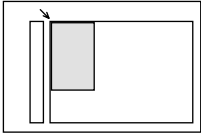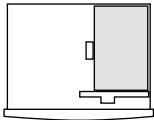Direction mark	Document placed on the ADF or document glass*		Paper loaded in the paper cassette
 or Nothing Ex.) Letter			
 Ex.) Half-letter 			

\* The document glass is available only for MFX-1330 model.

# Chapter

# 1


## Layout & Installation

---


Packing contents.....	1.2
Machine layout .....	1.3
Control Panel Overview .....	1.4
Setup your machine .....	1.7
Unlocking the mirror carriage.....	1.7
Attaching the document tray.....	1.7
Making connection .....	1.8
Installing the Drum and Toner cartridges.....	1.9
Plug in and power up .....	1.11
Turning off the transport mode .....	1.11
Adjusting the speaker volume .....	1.12
Initial Setup .....	1.13
Clearing stored settings.....	1.13
Getting started .....	1.13
Entering Initial settings .....	1.14
Using the Energy save mode .....	1.17

## Packing contents


---

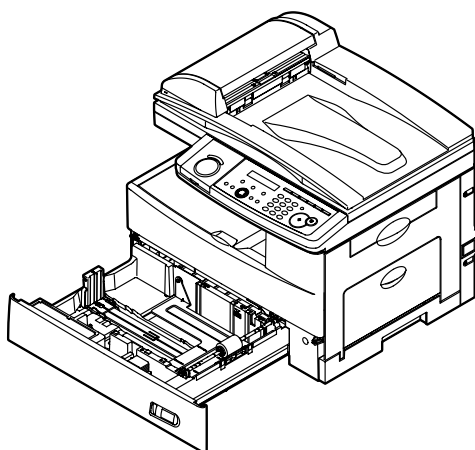


**Main unit with 500-sheet paper cassette**

 

**Drum cartridge**

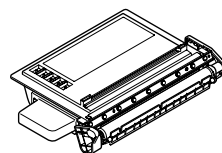


**Toner cartridge**

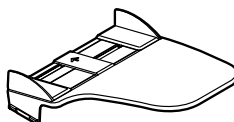


**Document tray**



**Printer & Scanner  
driver CD-ROM**

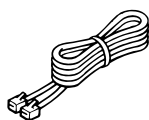

**Telephone line cable**

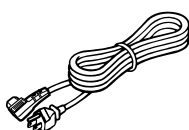

**AC power cable**



**Documentation & labels**

- User's guide (this book)
- Paper size label
- One-touch key label
- Soft key label



**Ferrite core**

---

**NOTE:**


- The appearance of the AC power cord and Telephone line cable vary according to countries.
- The toner cartridge supplied with your machine is starter toner cartridge, which yields 3,000 printouts. Please purchase regular, full-yield toner cartridge from your Muratec dealer.

---




# Machine layout

The following illustration is MFX-1330 model. The illustrations used in this manual are of the MFX-1330 model in case any special notes are not shown.

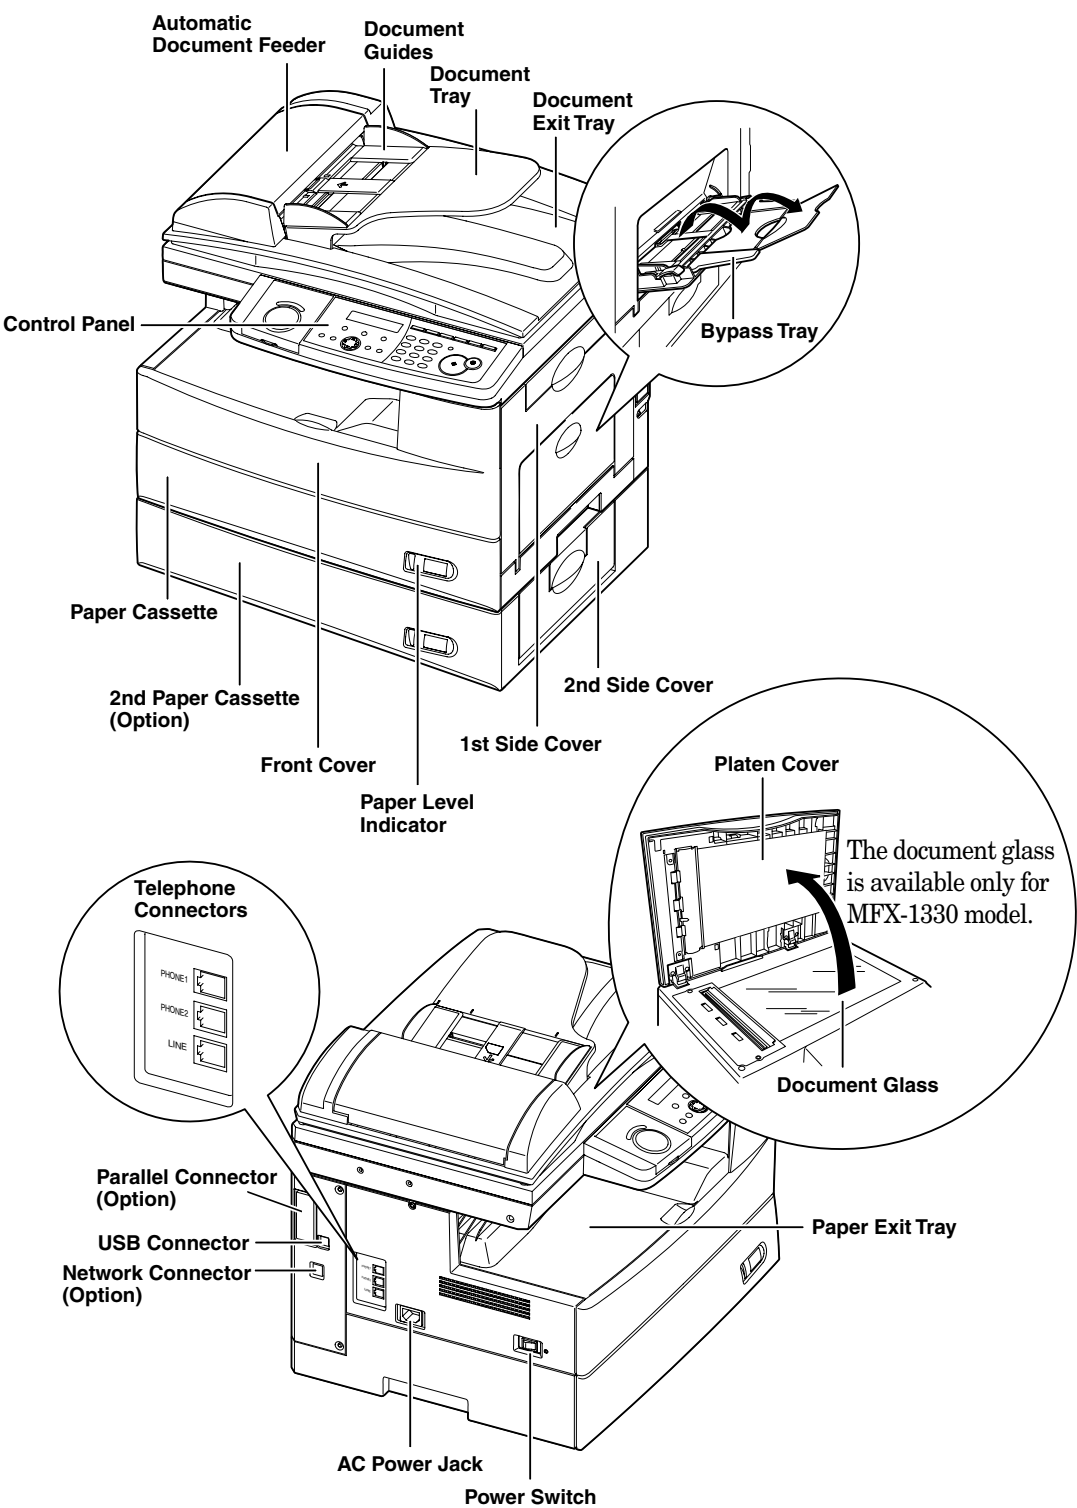


# Control Panel Overview

## *MFX-1330 model*

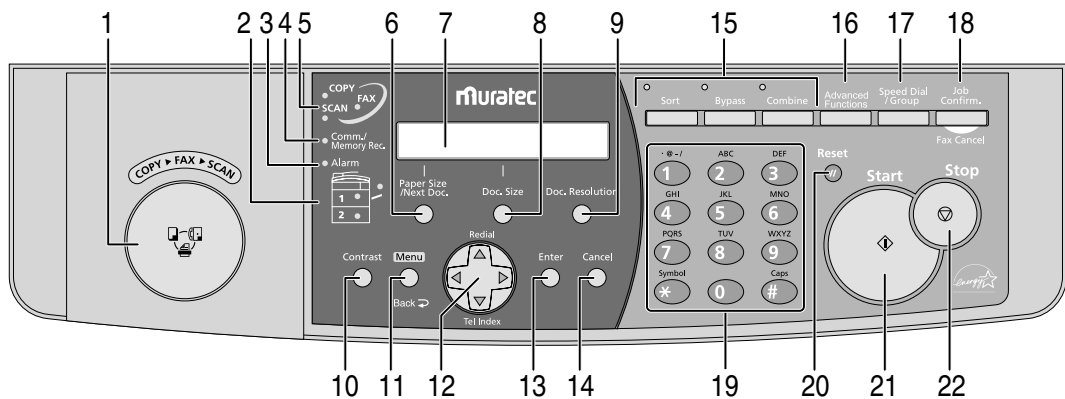

## *F-300 model*

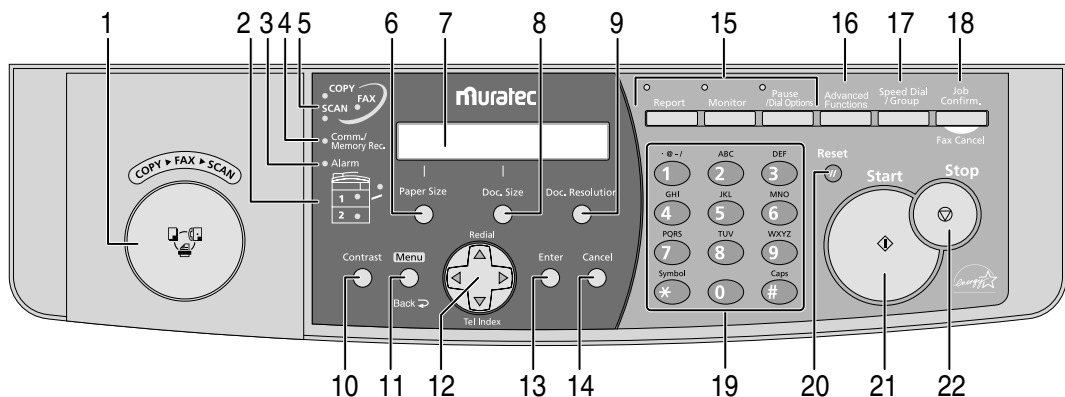

### **1 Mode switch button**

Pressing this button to switch the machine's mode.

### **2 Paper source light**

Indicates the selected paper source.

### **3 Alarm light**

Glow when a problem occurs.

### **4 Comm. /Memory Rec. light**

Blinks when the machine is communicating with another machine.  
Glow when the machine has the received document in its memory.

### **5 Machine mode light**

Indicates what mode the machine is in.

### **6 Paper Size /Next Doc. (MFX-1330 model)**

Selects the paper you want to use for copying.  
Also, if you press this key while the machine is scanning the current documents, the machine will be put on standby for scanning the additional documents even after the current scanning ends.


#### **Paper Size (F-300 model)**

Selects the paper you want to use for copying.


### **7 LCD (Liquid crystal display)**

Shows messages and selections, and prompts during operation.

**8 Doc. Size**

When you use the ADF: Instructs the machine to scan Auto\*, Letter, Half-letter  or Legal size documents.

\*When you select Auto, the custom size documents (up to 35.43 in. (900 mm) in length) can be automatically scanned.

When you use the document glass\*: Instructs the machine to scan Letter, Half-letter  or Legal size documents.

\*The document glass is available only for MFX-1330 model.

**9 Doc. Resolution**

Selects the fax resolution and copy resolution.


**10 Contrast**


Adjusts the scanning contrast level.

**11 Menu /Back**



Access the settings to customize operation of your machine. Also, it allows you to go back to the previous menu level.

**12 Cursor keys**

Scrolls thro  (**Redial**): Redials the numbers you have dialed. (Page 4.7.)

 (**Tel Index**): Displays one-touch and speed-dial entries sorted alphanumerically, as in a phone directory. (Page 3.11.)

In copy and scan mode —

 : Chooses the zoom ratio.

**13 Enter**

Selects or confirms settings.

**14 Cancel**

Deletes characters on the LCD and cancel commands you have entered into the machine.

**15 Soft keys**

The function you frequently use can be assigned into the following keys.

In default setting, these keys are programmed to turn the following functions on or off:

	MFX-1330	F-300
Soft key 1	Sort Copy	Report
Soft key 2	Bypass	Monitor
Soft key 3	Combine	Pause /Dial Opt.

(See “Soft keys” on page 8.2 for more informations.)

**16 Advanced Functions**

You can choose any functions that are not assigned into the soft keys. Displayed function items may vary according to the mode the machine is in.

**17 Speed Dial /Group**

Press this key once and enter a three-digit number to dial a pre-registered fax or phone number. Also, press this key twice and enter a group number to perform a group dialing.

**18 Job Confirm. /Fax Cancel**

Cancels or reviews the fax jobs, or reviews the result of fax transaction.

**19 Numeric keys**

Enter numerical values as well as fax/phone numbers and characters.

**20 Reset**

Reset the settings to their defaults, or press this key to return to standby mode.

**21 Start**

Starts operations.

**22 Stop**


Stops the machine's operation. However, to stop the faxing, press **JOB CONFIRM. /FAX CANCEL** key.

## 23 Macro keys

Programming the Macro keys can reduce many steps of the operation to a simple press of a key. (See “Macro keys” on page 8.4 for more information.)

## 24 One-Touch keys

Dials a pre-registered fax or phone number.

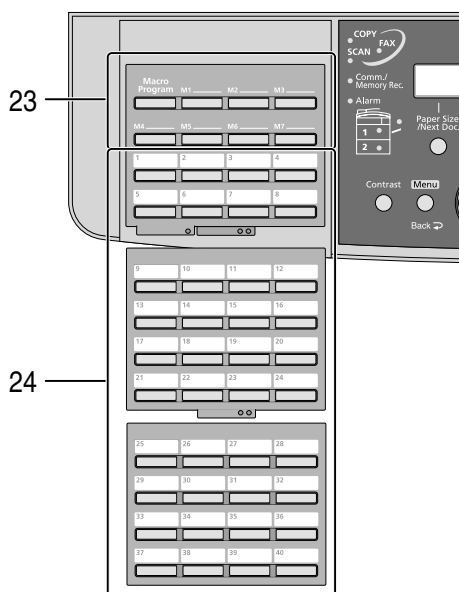


# Setup your machine

## Unlocking the mirror carriage

**IMPORTANT:** Do not turn the power on until after you have unlocked the scanner unit. Otherwise, damage could result.


- 1 Slide the scanner unit lock switch to the unlock position as shown below.

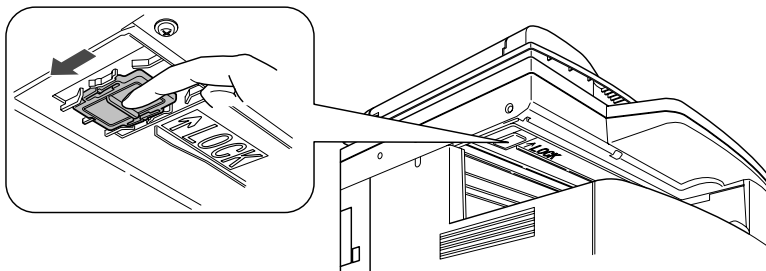

- 2 After you have unlocked the scanner unit, turn the transport mode off. (See page 1.11.)  
The transport mode doesn't appear in F-300 model.

## Attaching the document tray

Attach the document tray by inserting it into the appropriate holes, as shown below.

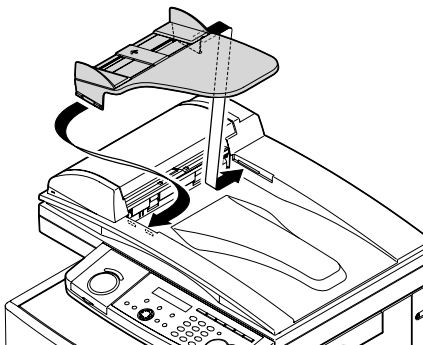


## Making connection

---

### *Telephone line connection*


Attach the supplied ferrite core to the telephone line cord as illustrated below.  
Plug the telephone line cord to the **LINE** jack and the other end to the wall jack.

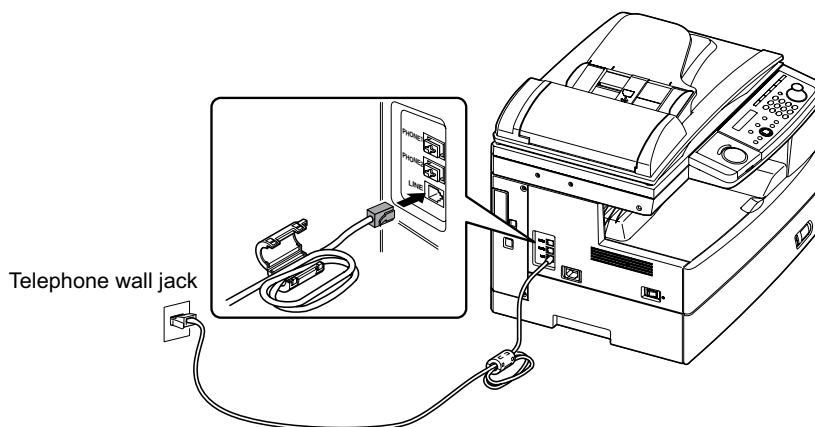

If you want to use your machine for receiving both faxes and voice calls, connect the optional handset or an external telephone to your machine.


### *Connecting the optional handset*

Attach the handset cradle and the spacer using the screws supplied with the cradle.  
Then plug the handset cord into the **PHONE 1** jack of your machine.

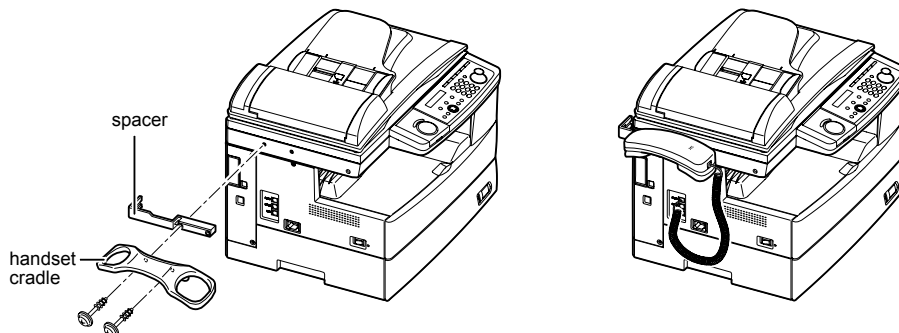

### *Connecting an external phone*


Plug the external phone's line into the **PHONE 2** jack of your machine.

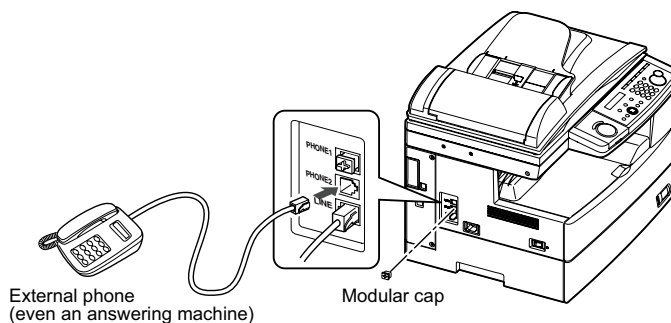


# Installing the Drum and Toner cartridges

---


- 1 Pull the release lever to open the side cover.

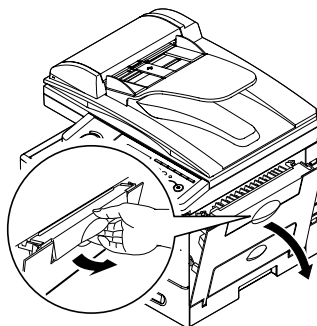


- 2 Open the front cover.

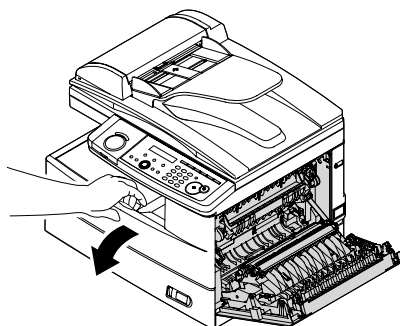

- 3 Turn the toner cartridge locking lever to the leftward (unlock position).

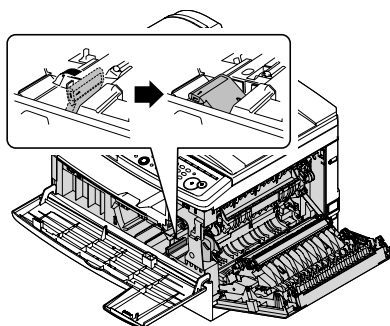

- 4 Unpack the drum cartridge from its carton and slide it into the machine firmly until it locks into place completely.

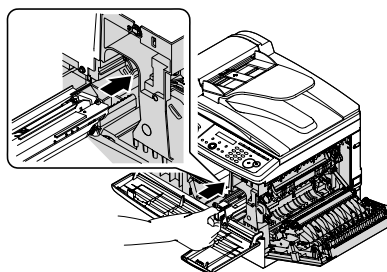

---

**NOTE:** Shield the drum cartridge from light, especially strong light.


---

- 5** Unpack the starter toner cartridge from its carton. Then, holding the toner cartridge with both hands, gently shake it to distribute the toner evenly inside the cartridge.


---

**NOTE:** Do not touch the roller of the toner cartridge.


---

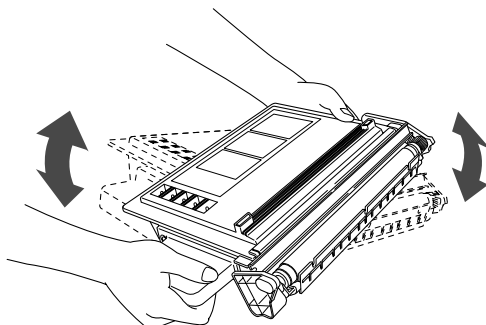


- 6** Slide the toner cartridge into the machine firmly until it locks into place completely.

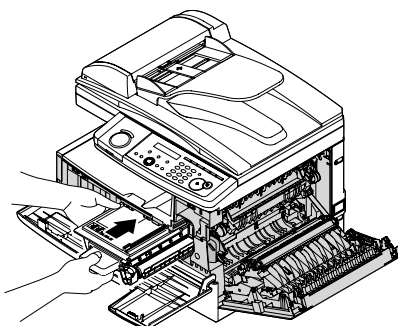

- 7** Turn the cartridge locking lever rightward until it locks into place completely.

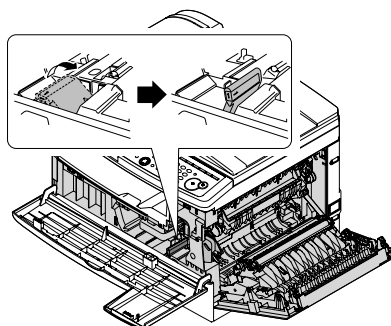

- 8** Close the front cover and side cover.

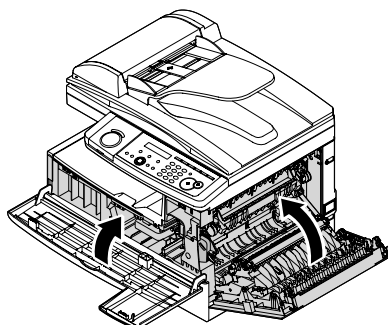

---

**NOTE:** The machine will not work if the covers are not closed properly.


---



## Plug in and power up

- 1 Plug the non-pronged end of the supplied AC power cord into the AC socket on the machine and the pronged end into a properly grounded AC outlet.

**IMPORTANT:** Be sure not to turn the power on until after you unlocked the scanner unit locking switch. (See page 1.7.)

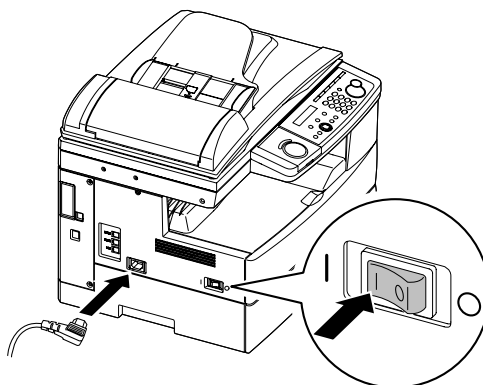

- 2 Turn on the power switch. The markings are international standards: **I** means on, **O** means off.

It will take a few seconds for the machine to warm up. The machine shows:

**Warming up**

Then the machine shows:

The following display doesn't appear in F-300 model.

**Mirror Locked**

To use the machine, turn off the transport mode.

**NOTE:** While the power is on, the scanner lamp will always light, but this is not machine failure, it is needed to prolong the life of your machine's scanner lamp.

## Turning off the transport mode

When the machine is in the transport mode, the machine shows:

**Mirror Locked**

To turn off the transport mode:

- 1 Press **MENU**, **✱**, **1**, **4**.

**Mirror Locked :On**  
**▼/▲/Enter**

- 2 Press **⏏** or **⏏** to select "Off" and press **ENTER**.  
The scanner unit will move to home position and the machine is ready to use.

**IMPORTANT:**

- The transport mode doesn't appear in F-300 model.
- If you must reship the machine, turn this mode to on, then power off and lock the scanner unit by sliding the lock switch.

---

## Loading paper and paper size setting

---

Please see “Paper handling” on pages 2.12–2.16.

---

## Adjusting the speaker volume

---

- 1 Press COPY ▶ FAX ▶ SCAN to switch the machine to fax mode.

**Fax Ready**  
Nov 27 2004 2:15pm

- 2 Press ADVANCED FUNCTIONS repeatedly until “**Monitor**” is displayed.  
For F-300 model, press MONITOR.

**Monitor**  
▼/▲/Enter

- 3 Press ENTER. You will hear a dial tone.

- 4 Press ◀ or ▶ to adjust the volume.

\*\* Tel Mode \*\*  
Volume :■■■■■

- 5 Press ADVANCED FUNCTIONS repeatedly to select “**Monitor**” and press ENTER to hang up.  
For F-300, press MONITOR to hang up.

# Initial Setup

## Clearing stored settings

Before using your machine, clear the built-in user data memory. This ensures the memory will hold only your settings.

**IMPORTANT:** After you set the initial settings, do not clear the memory again without an authorized technician's advice.

To clear the memory:

- 1 Press MENU, \*, 0, 2.

<b>Clear User Settings</b> Yes → Enter
---

<b>Clear User Settings</b> No → Cancel
---

- 2 If you do want to clear the memory, press ENTER.  
If you do not want to clear the memory, just press CANCEL.

## Getting started

In some countries you are required by law to indicate your name and fax number on every fax you send.

**YOU MUST THEREFORE STORE YOUR NAME (OR COMPANY NAME) AND FAX NUMBER IN YOUR MACHINE BEFORE USING IT.**

Every fax page you send arrives at the receiving machine with a single line of text at the very top of the page. This text lists a name, called the Transmit Terminal Identifier (TTI), and a fax number.

In “Entering initial settings” below, you can stored the following items includes your name and fax number registration.

- Language on the LCD and lists
- Current date and time
- Automatically daylight saving time
- Fax reception mode
- Dial tone detection
- Phone dialing type
- Your fax number
- TTI 1 / TTI 2 / TTI 3
- Usual TTI
- Idle time for switching to the Energy save mode

These settings you make here can always be changed later.

## Entering Initial settings

---

If you press **RESET** during Initial setup, your machine returns to standby mode. But it will keep the settings you saved by pressing **ENTER** as described in these instructions.

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.

### *Language*

- 2 Press **MENU, 9, ENTER**.  
The machine shows the current language setting.

**Language :English**  
▼/▲/Enter

- 3 Press ◀ or ▶ until your desired language appears.  
Then press **ENTER** to save the setting and continue.

### *Date & Time*

- 4 The machine shows the current calendar/clock setting.

**Enter Time**  
01/01 '04 00:00

Month   Day   Year   Time

- 5 Use the numeric keys to enter the correct date and time, using a MMDDYY format for the date and 24-hour format for the time.  
For instance, to set 2:15 PM on November 27, 2004, press  
**1 1 2 7 0 4 1 4 1 5**:

To change a digit, press ◀ to move the cursor left, or ▶ to move it right. Then enter the correct digit.

- 6 Press **ENTER** to save the clock setting and continue.

### *Daylight saving*

- 7 The machine now asks if you want to set the calendar/clock to automatically recognize daylight saving time (DST).

**Daylight Saving :Off**  
▼/▲/Enter

When the setting is “On,” your machine automatically recognizes DST at 2 AM on the appropriate switchover Sundays each year.  
When the setting is “Off,” no automatic change will occur.

- 8 Press ◀ or ▶ to select “On” or “Off”, then press enter to save the setting.

### *Fax reception mode*

- 9 The machine now shows the machine’s current reception mode.

**Fax Ready**  
▼/▲/Enter

- 10 For now, select Fax Ready. (For description of the reception mode, see “Selecting the reception mode” on page 5.2.)
- 11 Press **ENTER** to save the setting and continue.

## Dial tone detection

- 12** The machine asks you to set whether the machine should detect a dial tone before dialing.


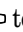
```
DialTone Detect :Off
▼/▲/Enter
```

- 13** Normally select “Off”. If you need to detect a dial tone, select “On”, however you cannot send a fax when there is no dial tone.
- 14** Press **ENTER** to save the setting and continue.

## Phone dial type

- 15** The machine asks you to set the dialing type needed for the fax machine, either tone or pulse.


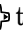
```
Phone Type :Tone
▼/▲/Enter
```

- 16** Press  or  to select the dialing type of your phone line, then press **ENTER** to save the setting.

## Your fax number

- 17** The machine now asks you to enter your fax number shown on other fax machines’s displays or printouts.

```
Your Fax Number
+1-972-364-3350_
```

- 18** Use the numeric keys to enter your fax number. The number can contain up to 20 characters.
- To enter a “+” symbol before your country code:  
For MFX-1330 model — Press **ADVANCED FUNCTIONS** repeatedly until “**Pause /Dial Opt.**” is displayed on the LCD then press **ENTER**.  
For F-300 model — Press **PAUSE /DIAL OPTIONS**.
  - To enter the hyphen “-” to make long numbers easier to read:  
For MFX-1330 model — Press **ADVANCED FUNCTIONS** repeatedly until “**Pause /Dial Opt.**” is displayed, then press **ENTER**. Repeat this procedure again to enter a “-” character on the LCD.  
For F-300 model — Press **PAUSE /DIAL OPTIONS** twice.
  - If you make a mistake, press **CANCEL** to erase to the left.
  - To change just one number, press  or  to move the cursor, press **CANCEL** to erase the number. Then re-enter the fax number correctly.

- 19** Press **ENTER** to save the number.

## TTI (Your name)

- 20** The machine now asks you to enter your name (or company name) shown at the top of faxes you send. You can enter three different names. Each name can be stored up to 22 characters.

```
TTI 1 ;Upper
_
```

Use the numeric keys to enter characters. (Refer to “Entering character,” on page 2.2.)

If you make a mistake, press CANCEL to erase to the left.  
To change just one character, press ⬅ or ➡ to move the cursor, press CANCEL to erase it. Then re-enter the correct character.

- 21** Press ENTER.

TTI 2	;Upper
—	

If you do not want to enter TTI 2, skip to step 15.

- 22** Use the numeric keys to enter the name for TTI 2.

- 23** Press ENTER.

TTI 3	;Upper
—	

If you do not want to enter TTI 3, skip to step 17.

- 24** Use the numeric keys to enter the name for TTI 3.

- 25** Press ENTER to save the setting and continue.

### ***Usual TTI selection***

- 26** The machine now asks you to set the usual TTI usually shown at the top of faxes you send.

Usual TTI	:TTI 1
▼/▲/Enter	

- 27** Press ⬅ or ➡ to select TTI 1, TTI 2 or TTI 3.

- 28** Press ENTER to save the setting and continue.

### ***Idle time setting for switching to the Energy save mode***

- 29** The machine now asks you to enter the time for the energy save mode.  
Your machine will automatically enter the Energy save mode after your entered time elapsed.

The default value is 15 minutes for MFX-1330 model, and 5 minutes for F-300 model.

Energy Save Timing
(001-240) 005 min.

- 30** Enter the time (in minutes) using the numeric keys.

- 31** Press ENTER to save the setting.

- 32** Press RESET to return to the standby mode.

## Using the Energy save mode

---

In order to conserve energy, your machine is initially set to be in the Energy save mode automatically when the machine is idle for a certain period.

MFX-1330 model automatically enters the Energy save mode in approx. 15 minutes idle time, and F-300 model does in approx. 5 minutes.

In Energy save mode, the machine stops pre-heating for printing and displays “**Energy Save Mode**” on the LCD. However, the LED lamps in the control panel and scanner lamp will not be off even when the machine is in the Energy save mode.



To recover from Energy save mode, press any key in the control panel.

When your machine receives a fax message during energy save mode, the machine will wake up automatically.

To change the Energy save mode setting:

- 1 Press **MENU**, **2**, **1**, **0**, **5**, **ENTER**.

**Energy Save Mode:On**  
 ▼/▲/Enter

- 2 Press  or  to select on or off.
- 3 Press **ENTER** to save the setting.
- 4 Press **RESET** to exit and return to the standby mode.

---

**NOTE:** The setting specifying the time until the machine enters Energy save mode can be changed. Refer to “Idle time setting for switching to the Energy save mode” of “Entering Initial settings” on page 1.14.

---



---

**NOTE:** If you assign “**Energy Saving**” to the soft key, you can switch your machine to the Energy save mode immediately by pressing the soft key, regardless of the on/off setting and time setting. For details of the soft key, see page 8.2.

---





# Chapter

# 2

## Getting started

---


Operating tips .....	2.2
Switching the machine mode.....	2.2
Entering character .....	2.2
Memory back-up .....	2.3
How to select the function .....	2.4
Function table.....	2.5
Document and Paper handling.....	2.10
Document handling .....	2.10
Paper handling .....	2.12

# Operating tips

## Switching the machine mode

To switch the machine mode, press **COPY ▶ FAX ▶ SCAN**.

The mode light indicates the current mode machine is in.

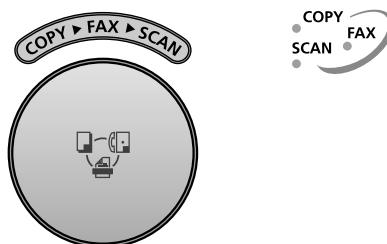

**NOTE:** You cannot switch the mode in any of the following cases:






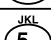
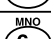
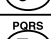
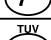

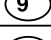


- When scanning a document.
- During the real time transmission.
- When programming any function settings.

## Entering character


Some settings give you a chance to enter characters; for your TTI (your name), remote fax's name or others. To enter letters or other characters, use the following guidelines:

By pressing the numeric key repeatedly, you can access the following characters as shown in the table below.


**Character Table**

Numeric keypad	Character
	1 . @ - _ , / : & '  ! ?
	A B C 2
	D E F 3
	G H I 4
	J K L 5
	M N O 6
	P Q R S 7
	T U V 8
	W X Y Z 9
	0
	Special Characters
	Caps Lock

Note:  means space.

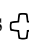When you want to enter the character that shares the same numeric key, press  to move the cursor to the right.

## To change upper and lower case

Press  key to toggle upper case and lower case.

Your Name ;Upper  
\_


Your Name ;Lower  
\_

The word “Upper” means the machine will enter only upper-case letters.




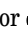
The word “Lower” means the machine will enter only lower-case letters.

## Entering the symbol

You can also enter special characters or symbols.


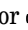
- 1 When the machine prompts you to enter a name, press  key.  
The LCD changes to:

!@-\_,/:&'!?"#\$(%)\*+  
▼/▲/◀/▶/Enter

- 2 Select the character you want to enter using , ,  or  key.
- 3 To enter the character, press ENTER key.
- 4 If you want to enter other character, repeat steps 1 to 3.  
Otherwise, go to next step.
- 5 Press ENTER to save it.

## Correct the character

If you entered an incorrect letter or digit, press CANCEL to erase to the left.

To change just one character or digit, press  or  to move the cursor to that character or digit. Then press CANCEL to erase it. Re-enter the correct character or digit.

## Memory back-up

User data and auto-dialing settings are backed-up.

However, the documents stored in memory will be lost in 72 hours after there is a power failure or if you disconnect the power cord. (See “Specifications,” page AI.2.)

## How to select the function

---

The setting of the function starts by pressing the **MENU** key first.  
There are two ways for function selecting, as below.  
In this manual, we explain the operation with short-cut operations.


### *Short-cut operation with the numeric keys*



Press **ENTER**, then press three- or four-digit numbers to select the function.  
For example, “Press **MENU**, **2**, **1**, **0**, **1**, **ENTER**”...

... you'd press    **MENU** key  
... then        **2**  
... then        **1**  
... then        **0** (the numeric key zero)  
... then        **1**  
... and then    **ENTER**

### *Searching the function using the cursor key*

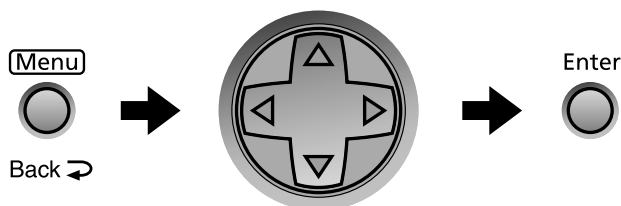

Even if you don't remember the exact commands needed for an operation, you can search for and enter the function using the cursor key (⬅, ➡, ⬆, ⬇).

To search function:

- 1 Press the **MENU** key.
- 2 Search the function using ⬅, ➡, ⬆ or ⬇ key.  
The function table is useful for your search (see next page).  
For example, if you want to set the “Cassette Size,” press ⬅, ➡, ⬆, ⬇.
- 3 Press **ENTER** when you find the function you want to set.

### *Go back to the previous screen by pressing **BACK** key*


Press **BACK**, you can go back to previous menu level.



# Function table

You can search for any function with the function table below.

(The underlined settings are the factory defaults.)

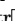Level one function menu	Level two function menu	Level three function menu	Description	Setting	Page
1.Autodial Entries	1.One-Touch Dial	1. Enter One-Touch	Register the one-touch dialing.	—	3.4
		2. Erase One-Touch	Erase the registration in a one-touch number.	—	3.5
	2.Speed Dial	1. Enter Speed-Dial	Register the speed-dial dialing.	—	3.7
		2. Erase Speed-Dial	Erase the registration in a speed-dial number.	—	3.7
	3.Group Dial	1. Enter Group Dial	Register the group dialing.	—	3.9
		2. Erase Group Dial	Erase the registration in a group number.	—	3.10
2.User Settings	1.Machine Settings	01.Cassette Size	Set the size of paper in the paper cassette.	<u>Ltr</u> <u>Legl</u> <u>HLtr</u> 	2.16
		02.Protect Passcode	Set the protect passcode for using the security features.	—	9.2
		03.Soft Key	Assign the function, so you can turn on or off the function by pressing this key.  Default setting MFX-1330: Soft key 1: Sort Copy Soft key 2: Bypass Soft key 3: Combine F-300: Soft key 1: Report Soft key 2: Monitor Soft key 3: Pause /Dial Options	Sort Copy Combine Zoom Broadcast Address Entry <sup>*1</sup> Report Monitor Pause /Dial Opt. Delayed Batch Tx Select TTI Select Line <sup>*2</sup> Cover Page Fax Forward Fax & Copy Security Separator page Memory Tx Auto Rx F-code Tx F-code Polling Polling Dial Prefix Bypass Duplex Copy <sup>*3</sup> Page Counter Energy Save Online Mode Switch	8.2
		04.Silent Mode	Mute your machine.	<u>Off</u> <u>On</u>	10.2
		05.Energy Save Mode	Conserve power.	<u>Off</u> <u>On</u>	1.16 10.3
		06.Fax & Copy	Make a copy of your document each time it transmit.	<u>Off</u> <u>On</u>	4.19

\*1 The optional NIC is required.

\*2 The optional 2nd phone kit is required.

\*3 The optional duplex unit is required. (MFX-1330 model only)

Level one function menu	Level two function menu	Level three function menu	Description	Setting	Page
2.User Settings	1.Machine Settings	07.Primary Mode	You can set the primary standby mode.	Scan Copy Fax	10.3
		08.Service Mode	For technical support. Do not turn this setting to on unless an authorized technician asks you to do so.	Off On	10.3
		09.Date & Time	Enter the current date and time	—	10.3
		10.Paper Source	Select the paper source for faxing or copying.	Fax Copy Fax/Copy Not Used	10.3
		11.Page Counter	Displays the total number of pages you have printed and scanned.	—	8.8
	2.Fax Settings	01.Scan Parameters	You can set the following settings for fax sending. • Primary fax resolution  • Primary scanning contrast  • Super fine resolution	Normal, Fine, S-Fine, Gray Lightest, Light, Normal, Dark, Darkest 400dpi, 600dpi	10.4
		02.Print Parameters	You can set the following settings for fax reception. • Reduction rate • Reduction margin • Half-page reception* * When the optional duplex unit is installed in MFX-1330 model, the following menu is displayed. • Paper save function	Auto, 100% 40 mm (0-85 mm) Off, On  Off, H. Page Rx, Duplex Rx	5.7 10.4
		03.# of Rings	Set the number of rings before your machine answers.	2 times (1-10 times)	5.6 10.5
		04.Redial	Set the number of times and interval for automatic fax redialing.	2 times (2-15 times) 1 min. (1-5 min.)	10.5
		05.Dialing Pause	Set dialing pause length.	2 sec. (2-10 sec.)	10.5
		06.Memory Tx	On/Off setting of Memory transmission.	Off On	4.3 10.5
		07.Quick Tx	On/Off setting of Quick Memory transmission.	Off On	4.3 10.5
		08.Select TTI	Select TTI you want to send.	Default TTI1 TTI2 TTI3 Off	4.17
		09.ECM Mode	On/Off setting of ECM mode.	Off On	10.5
		10.Block Junk Fax	Reject the fax reception from unauthorized incoming faxes.	Off Mode1 Mode2 Mode3	5.9
		11.Security Rx	Keep all received fax messages in memory and after print them manually.	Off On	11.3
		12.Separator Page	Partition each received documents by inserting the separator page.	Off On	5.14

Level one function menu	Level two function menu	Level three function menu	Description	Setting	Page
2.User Settings	2.Fax Settings	13.Receive TimeStamp	Prints the received date and on the top of each received documents	Off On	10.5
		14.PIN Mode	Prevent unauthorized long-distance calls.	Off Mode1 Mode2	9.5
		15.Fax Charge	Set the print charge of fax reception.	\$00.00 (\$00.00-99.99)	9.10
		16.Dial Prefix	Store the appropriate access number to access the alternative telephone service provider.	—	4.21
	3.Copy Settings	1. Scan Parameters	You can set the following settings for copying. • Primary document type • Primary scanning contrast	Text, Photo&Text, Photo Lightest, Light, Normal, Dark, Darkest	10.6
		2. Auto Reset Time	Set the time (minutes) for auto resetting of copy parameter.	3 min. (1-10 min.)	10.6
		3. Copy Auto	Select item for auto selection.	Paper size Reduction Doc. size	10.6
		4. Copy Protect	On/Off setting for the copy protection.	Off On	9.13
		5. Sort Copy	On/Off setting for the sorting copy.	Off On	10.6
		6. Combine	On/Off setting to the combine copy.	Off On	7.8 10.6
		7. Resolution	Set copy resolution.	600 dpi 300 dpi	7.10 10.7
		8. Copy Charge	Set the copy charge per page.	\$00.00 (\$00.00-99.99)	9.10
	4.Scanner Settings	1. Scan Parameters	Set the followings. •Document type  •Scanning resolution •Scanning contrast	Text, Photo&Text, Photo 200, 300, 600 dpi Lightest, Light, Normal, Dark, Darkest	*
		2. Auto Reset	Set the time (minutes) for the scan parameters return to their initial condition.	3 min. (1-10 min.)	*
3.Other Settings	1.Journal & Reports	1. Journal AutoPrt.	Print the activity journal automatically after 100 transactions.	Off On	11.4
		2. Journal Line Up	Change the printing order of the activity journal.	Off On	11.5
		3. Report Auto Print	Print the Transmit Confirmation Report(TCR) automatically at every transmission.	Off On	11.5
	2.Cover Page	1. Set Cover Page	On/Off setting for sending cover page.	Off On	4.20
		2. Enter Cover Page	Enter your message for the cover page.	—	4.20
	3.Department Code	1. Set Dept. Protect	Protection for the department code settings.	Off On	9.8

\* For details of scanner settings, refer to the PDF manual on the Printer & Scanner driver CD.

Level one function menu	Level two function menu	Level three function menu	Description	Setting	Page
3.Other Settings	3.Department Code	2. Enter Dept. Code	Store the department code.	—	9.8
		3. Erase Dept. Code	Erase the stored document code.	—	9.9
		4. Set Dept. Setting	On/Off setting for department code activation.	Off On	9.9
		5. Reset Dept.Count	Clear the total counts of department code.	—	9.12
	4.F-Code Box	1. Set F-Code Box	Setup a F-code box.	—	6.2
		2. Erase F-Code Box	Erase an empty F-code box.	—	6.7
	5.Batch Tx	1. Set Batch Box	Setup a batch box.	—	4.14
		2. Erase Batch Box	Erase an empty batch box.	—	4.16
	6.Fax Forward	1. Set Fax Forward	On/Off setting for fax forwarding.	Off On	5.12
		2. Enter Fax Forward	Set the forwarding rule.	—	5.12
		3. Erase Fax Forward	Erase the forwarding rule.	—	5.13
	7.Scan Box	1. Set Scan Box	Setup a scan box.	—	*
4.Doc. Management	1.Store Document	1. Polling Document	Store the document to be retrieved by other fax machine.	—	4.18
		2. F-Code Document	Store the document to be retrieved by other F-code compatible machine.	—	6.8
	2.Erase Document	1. Polling Document	Erase a stored document for polling transmission.	—	4.18
		2. F-Code Document	Erase a stored document in a F-code box.	—	6.9
		3. Batch Document	Erase a stored document in a batch box.	—	4.16
		4. Scan Box Document	Erase a stored document in a scan box.	—	*
	3.Print Document	1. Polling Document	Prints stored document for polling transmission.	—	4.18
		2. F-Code Document	Prints stored document in the F-code box.	—	6.9
		3. Batch Document	Prints stored document in the batch box.	—	4.15
		4. Security Rx Doc.	Prints the fax received document during security reception.	—	9.4
		5. Com. Stored Doc.	Prints stored document for delayed transmission.	—	4.9
5.Print	1.List Print	01.Function List	Prints the list of functions.	—	11.2
		02.Machine Settings	Prints the list of the machine settings.	—	11.2

\* For details of scanner settings, refer to the PDF manual on the Printer & Scanner driver CD.



Level one function menu	Level two function menu	Level three function menu	Description	Setting	Page
5.Print	1.List Print	03.Fax Settings	Prints the list of the fax settings.	—	11.2
		04.Copy Settings	Prints the list of the copy settings.	—	11.2
		05.Journal	Prints the activity journal manually. You can print Tx report, Rx report, Tx/Rx report individually.	—	11.2
		06.Commands List	Prints the list of delayed commands.	—	11.2
		07.One-Touch List	Prints the list of the one-touch dial keys.	—	11.2
		08.Speed-Dial List	Prints the list of the speed-dial numbers.	—	11.2
		09.Group List	Prints the list of group numbers.	—	11.2
		10.Block Junk Dial List	Prints the list of the blocked phone numbers.	—	11.2
		11.Cover Page	Prints the cover page.	—	11.2
		12.Department List	Prints a total communication time and printed pages of each department code.	—	11.2
		13.F-Code Box List	Prints the list of F-code boxes.	—	11.3
		14.F-Code Doc. List	Prints the list of the documents stored in the F-code boxes.	—	11.3
		15.Batch Box List	Prints the list of batch boxes.	—	11.3
		16.Batch Doc. List	Prints the list of the documents stored in the batch boxes.	—	11.3
		17.Fax Forward List	Prints the list of forwarding rules.	—	11.3
		18.Macros List	Prints the list of Macro keys.	—	11.3
		19.Scanner Settings	Prints the list of the scanner settings.	—	11.3
		20.Store Doc. List	Prints the list of documents stored in memory.	—	11.3
9. User Install	—	—	<p>You can set-up the following settings continuously.</p> <ul style="list-style-type: none"> <li>•Language on the display and lists.</li> <li>•Current date and time.</li> <li>•Automatically daylight saving time</li> <li>•Fax reception mode</li> <li>•Dial tone detection</li> <li>•Phone dialing type</li> <li>•Your fax number</li> <li>•Your TTI 1 (your name)</li> <li>•Your TTI 2 (your name)</li> <li>•Your TTI 3 (your name)</li> <li>•Usual TTI</li> <li>•Idle time for entering the Energy save mode</li> </ul>	<p>English, French, German, Spanish</p> <p>—</p> <p>Off, On</p> <p>Tel ready, Fax ready, Fax/Tel ready, Tel/Fax ready, Ans/Fax ready</p> <p>Off, On</p> <p>Tone, Pulse</p> <p>—</p> <p>—</p> <p>—</p> <p>—</p> <p>TTI 1, TTI 2, TTI 3</p> <p>*For MFX-1330 model; 15 min. (1-240 min.)</p> <p>*For F-300 model; 5 min. (1-240 min.)</p>	1.14

# Document and Paper handling


## Document handling

---

Before you begin the sending, copying or scanning, please read the following guidelines.

### *Acceptable document*

ADF

	Single-sheet	Multiple-sheet
Size (W × L)	Max. 8.5 × 35.43 in. (216 × 900 mm) Min. 4.72 × 3.94 in. (120 × 100 mm)	Max. 8.5 × 14 in. (216 × 356 mm) Min. 8.5 × 5.49 in. (216 × 139.5 mm)
Quantity	1 sheet	Max. 80 sheets of Letter-, Legal-, or Half-letter  - size sheets (75 g/m <sup>2</sup> or 20lb. paper)
Weight	35.0 to 128.0 g/m <sup>2</sup>	52.0 to 105.0 g/m <sup>2</sup>
Thickness	0.05 to 0.15 mm	0.07 to 0.12 mm
Document type	Plain paper	Plain paper

Document glass

The document glass is available only for MFX-1330 model.

Size (W × L)	Max. 8.5 × 14 in. (216 × 356 mm)
Quantity	1 sheet
Weight	—
Thickness	—
Document type	Plain paper and other types of documents.


### *Things not to put in your machine*

To prevent jams and damage in the ADF, **do not** insert:

- Folded, curled, torn, wrinkled or very thin pages
- Documents with staples, glue, tape, paper clips or still-wet correction fluid
- “Sticky notes” (or documents with “sticky notes” attached)
- Cardboard, newspaper or fabric
- Pages with duplicating carbon on either side
- Credit cards or any small, thick items
- OHP transparency film


## Scanned area

The scanned area is shown below.

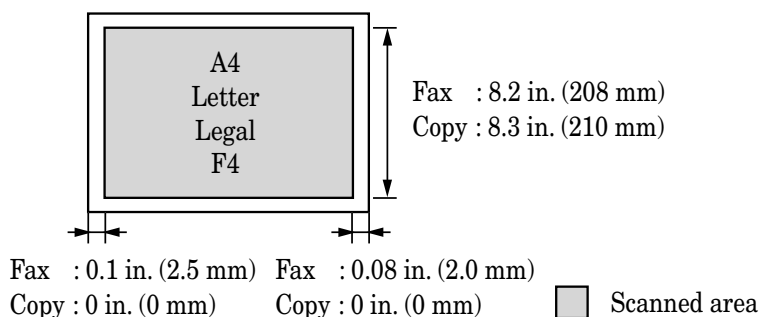

## Loading the documents in the ADF


- 1 Insert the documents, **face up**, top edge first.
- 2 Adjust the document guides to the document size.

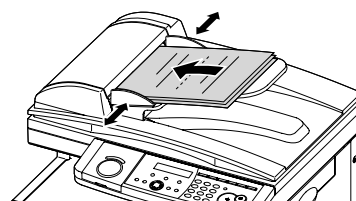

## Loading the document on the document glass

The document glass is available only for MFX-1330 model.

- 1 Make sure there is no documents in the ADF.
- 2 Lift the platen cover.
- 3 Place the document **face down** on the document glass. The document should be aligned to the **upper left corner**.
- 4 Gently close the platen cover.

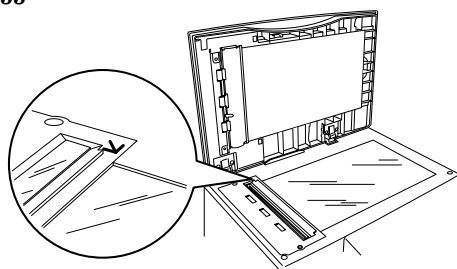


---


**IMPORTANT:** When copying a bound document, such as a book, the copied image may contain some black areas. To reduce this effect, hold down the document to prevent its bound part from rising. However, do not press too strongly. This may break the document glass and cause an injury.

---



## Paper handling

### Acceptable paper size

Paper cassette

Paper type	Paper size	Quantity
Plain paper (weight: 20–24 lb)	Letter, Legal, Half-letter 	500 sheets (weight: 20 lb)


Bypass tray

Paper type	Paper size	Quantity
Plain paper (weight: 20–24 lb)	Letter, Legal, Half-letter  , Executive A4, A5, A5  , A6, F4,	50 sheets (weight: 20 lb)
	Custom size • Width: 3.82 to 8.5 in. (97 to 216 mm) • Length: 5.51 to 14.02 in. (140 to 356 mm)	1 sheet
Envelopes	DL: 4.33 × 8.66 in. (110 × 220 mm) Com#10: 4.125 × 9.5 in. (105 × 241 mm) Monarch: 3.875 × 7.5 in. (98.4 × 190.5 mm)	1 envelope
Postcard	3.94 × 5.83 in. (100 × 148 mm)	20 sheets
Transparency	Letter	20 sheets

Duplex printing

When the optional duplex unit is installed in MFX-1330 model.

Paper type	Paper size
Plain paper (weight: 20–24 lb)	Letter, Legal, A4, F4

- Custom-sized paper can be used for PC printing only.
- A5-sized paper cannot use for PC printing, but A5  is available.
- Do not use envelopes with double flaps or pressure seals as these do not feed properly.
- If using a transparency (OHP) film, be sure that the film does not have a paper backing and/or a leading strip. If it does, remove the paper backing and/or strip before loading. Only film should go in, not film with any backing or strip.


### Paper you cannot use:

To prevent jams and damage in your machine, **do not** use the following paper:

- Creased paper
- Wrinkled paper
- Folded paper
- Curled paper
- Torn paper
- Carbon paper
- Moist paper
- Very thin paper
- Very thick paper
- Previously printed by a printer
- Paper with holes
- Envelopes with pressure seals
- Extremely shiny or highly textured

## Printable area


The printable area is shown below.

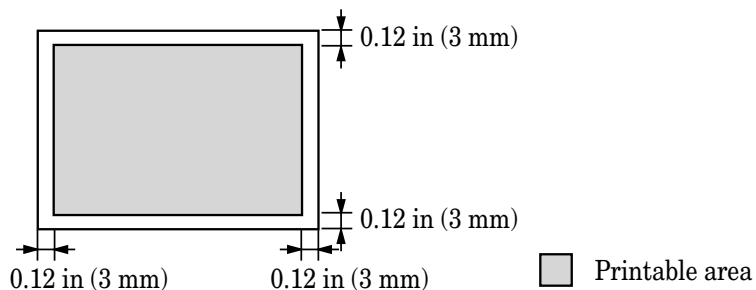


## Loading paper in the paper cassette

**NOTE:** After you load the paper in paper cassette, you need to set the paper size you loaded. See “Setting of the Paper Size” on page 2.16.


- 1 Pull to open the paper cassette.

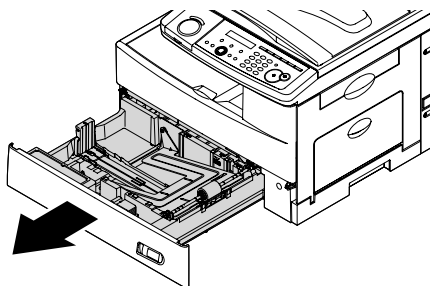

- 2 Press down the paper lifting plate until it locks in position.

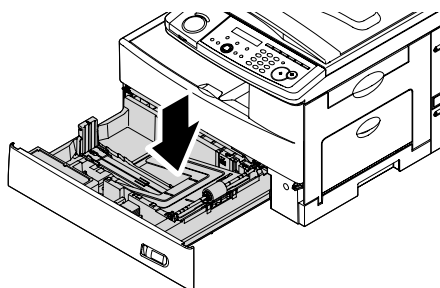

- 3 Adjust the rear paper guide to the desired paper length.

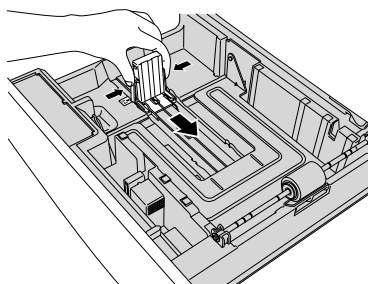


- 4 Load the paper into the cassette.
  - Before you insert paper in the cassette, stack it so the leading edge and sides of the paper are even.
  - Do not stack the paper over the limit mark inside of the cassette.


---

**NOTE:** To prevent paper jams, do not refill this paper cassette without first removing all of any paper which may remain in it. In other words, do not just add sheets to an already-loaded stack.

---

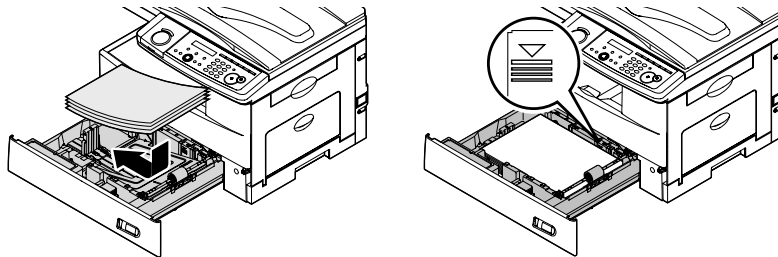

- 5 Pinch the side paper guide and adjust to the width of the stack.

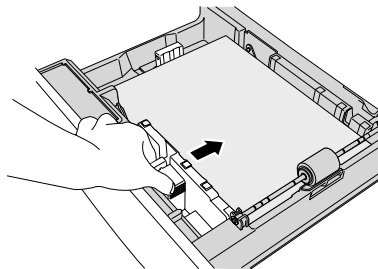

- 6 Close the paper cassette.
- 7 After loading paper in the paper cassette, you need to set the paper size.  
(See “Setting of the Paper Size” on page 2.16.)
- 8 Attach the paper size sticker supplied with your machine on the cassette’s front.

## Loading paper in bypass tray


When you need to use a size of paper not currently loaded in the paper cassette, or when you want to print on an envelope, transparency film or custom sized paper, use the bypass tray.

---


**NOTE:** Always load only use print media specified in “Acceptable paper size” on page 2.12 to avoid paper jams and print quality problems.

---


- 1 Open the bypass tray on the right side of your machine. Spread the paper support extension.

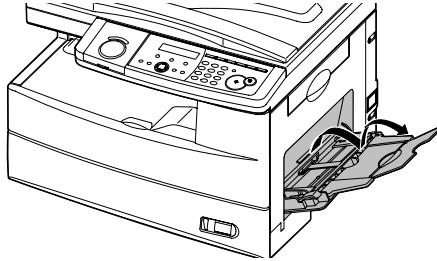

- 2 To set the paper, 1) raise the flapper release lever 2) load the paper until it comes to a stop.

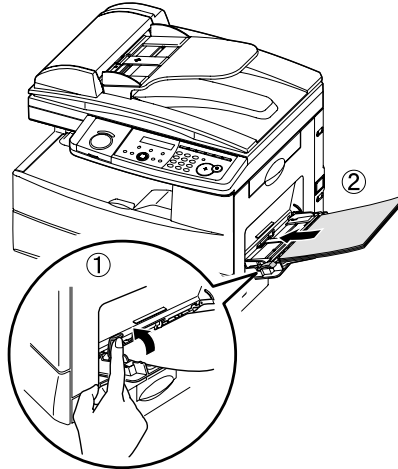

- 3 1) Adjust the paper guides to fit the paper, 2) then lower the flapper release lever.

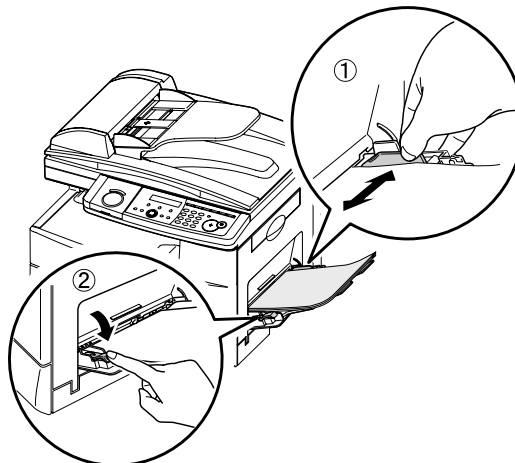

- 4 After loading paper on the bypass tray, you need to set the correct paper size by pressing **BYPASS**.  
(For F-300 model, press **ADVANCED FUNCTIONS** repeatedly until “**Bypass**” is displayed on the LCD then press **ENTER**.)

<b>Bypass Tray</b>	<b>:Ltr</b>
▼/▲/Enter	

- 5 Press ◀ or ▶ to select the paper size you want to use.

<b>Bypass Tray</b>	<b>:Ltr</b>
▼/▲/Enter	

- 6 Press **ENTER**.

---

**NOTE:** You can set the default paper size for the bypass tray. See step 6 of “Setting of the Paper Size” below.

---

## Setting of the Paper Size

Default setting: *1st cassette: Letter, 2nd cassette (option): Letter, Bypass Tray: Letter*

After loading paper in the paper cassette, you need to set the correct paper size by following procedure.

- 1 Press **MENU**, **2**, **1**, **0**, **1**, **ENTER**.

<b>1st Cassette</b>	<b>:Ltr</b>
▼/▲/Enter	

- 2 Press ◀ or ▶ to select the paper size you are using in the first cassette.

- 3 Press **ENTER**.

If you have the optional second cassette, proceed to step 4.  
Otherwise, skip to step 6.

- 4 Press ◀ or ▶ to select the paper size you are using in the second cassette.

<b>2nd Cassette</b>	<b>:Ltr</b>
▼/▲/Enter	

- 5 Press **ENTER**.

- 6 Also, you can set the default paper size for the bypass tray. Press ◀ or ▶ to select the paper size for the bypass tray. After, you load the different size of paper on the bypass tray, you need to set the correct paper size by pressing **BYPASS**.

<b>Bypass Tray</b>	<b>:Ltr</b>
▼/▲/Enter	

- 7 Press **ENTER**.

- 8 Press **RESET** to exit and return to the standby mode.



# Chapter

# 3

## Autodialer

---

Autodialer basics.....	3.2
Autodialers .....	3.2
Call groups.....	3.2
Destination names and the phone directory dialing .....	3.2
Special dialing characters.....	3.2
One-touch keys.....	3.4
Entering or changing a one-touch number .....	3.4
Quick access to one-touch registration.....	3.5
Erasing a one-touch number .....	3.5
How to dial using one-touch key .....	3.6
Speed-dial numbers .....	3.7
Entering or changing a speed-dial number .....	3.7
Erasing a speed-dial number.....	3.7
How to dial using Speed-dial number .....	3.8
Call group dialing .....	3.9
Entering or changing a call group .....	3.9
Erasing a call group .....	3.10
How to dial using a call group .....	3.10
Phone directory dialing.....	3.11
How to dial using phone directory.....	3.11
If the phone directory dialing call fails .....	3.12

# Autodialer basics

Your machine's autodialer stores your most frequently called phone and fax numbers for instant recall.

## Autodialers

There are two kinds of autodialer numbers. The difference between the two is how you dial them:

Type	How to dial	Amount stored
One-touch key	Press one of the keys, marked 1 to 40 on the left side of the control panel	<b>40</b>
Speed-dial number	Press <b>SPEED DIAL /GROUP</b> followed by a three-digit identifier, from 001 to 160.	<b>160</b>

## Call groups

Call groups are sets of fax numbers that make it easy to send the same fax message to many different locations.

Your machine can store as many as 200 numbers in up to 32 call groups.

See also "Call group dialing" on page 3.9.

## Destination names and the phone directory dialing

When you store numbers in your autodialer, you can give these numbers descriptive names, such as "Chicago office" or "Billing department".

The phone directory sorts these names alphabetically. Using the phone directory dialing, you can look up these numbers by their descriptive names, just as if you were using a phone book.

See also "Phone directory dialing" on page 3.11.

## Special dialing characters

Your machine allows you to enter special dialing characters when registering the autodialer. The chart below briefly describes each of these characters. It also tells you what keys to press on your machine to store those characters in your autodialer.

Character	Description	Keystroke
/P	Each pause lasts two seconds. If you must wait for another dial tone or signal at any point in the dialing sequence, enter a pause there in the number. (You can change the pause length. See page 10.5.)	Press <b>ADVANCED FUNCTIONS</b> repeatedly until " <b>Pause /Dial Opt.</b> " appears, then press <b>ENTER</b> . – or – Press a soft key which is assigned " <b>Pause /Dial Opt.</b> " once.

Character	Description	Keystroke
–	Makes long numbers easier to be read.	Press <b>ADVANCED FUNCTIONS</b> repeatedly until <b>“Pause /Dial Opt.”</b> appears, then press <b>ENTER</b> . Repeat this procedure until a “–” character appears on the LCD. – or – Press a soft key to which <b>“Pause /Dial Opt.”</b> is assigned twice.
/T	Switches from pulse-dialing to tone-dialing. No need to use this character on a tone line.	Press <b>ADVANCED FUNCTIONS</b> repeatedly until <b>“Pause /Dial Opt.”</b> appears, then press <b>ENTER</b> . Repeat this procedure until a <b>“/T”</b> character appears on the LCD. – or – Press a soft key to which <b>“Pause /Dial Opt.”</b> is assigned until a <b>“/T”</b> is appeared.
/N	Enters a “Dial prefix code” to access to alternative telephone network. “/N” must be entered to the first of number.	Press <b>ADVANCED FUNCTIONS</b> repeatedly until <b>“Dial Prefix (/N)”</b> appears and press <b>ENTER</b> . Repeat this procedure until an <b>“/N”</b> character appears on the LCD. – or – Press a soft key to which <b>“Pause /Dial Opt.”</b> is assigned until an <b>“/N”</b> is appeared.

**NOTE:** How to assign the **“Pause /Dial Opt.”** to a soft key, see page 8.2.

**“Pause/Dial Opt.”** is assigned to a soft key in F-300 model in the default setting.

# One-touch keys



## Entering or changing a one-touch number

---

Your machine can store up to 40 one-touch numbers using the keys marked 1 to 40.

- 1 Press **MENU**, **1**, **1**, **1**, **ENTER**. The empty one-touch number will be shown.


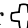
**Select One-Touch**  
**01:No Number Stored**

- 2 Press  or  to select a one-touch number.  
You can also select a one-touch key by pressing that key.

- 3 Press **ENTER**.

**01:Fax Number**  
—

- 4 Use the numeric keys to enter the number exactly as your machine should dial it. The number can be stored up to 40 digits.



To change a number, press  or  to move the cursor, press **CANCEL** to erase the number. Then re-enter the number correctly.

- 5 Press **ENTER**.

**01:Name ;Upper**  
—

- 6 Use the numeric keys to enter the name for the one-touch key.  
The name can be stored up to 24 characters.

(Regarding how to enter the character, see “Entering character” on page 2.2.)

To change a name, press  or  to move the cursor, press **CANCEL** to erase the name. Then re-enter the correct name.

- 7 Press **ENTER** to save the setting.  
The next empty one-touch number will be shown.

- 8 To enter another one-touch number, repeat the procedure from step 2.  
To exit the operation and return to standby mode, press **RESET**.

- 9 Use the one-touch key labels supplied with your machine to label the one-touch keys with the stored names for easy reference.

---

**NOTE:** To print a list of one-touch numbers, press **MENU**, **5**, **1**, **0**, **7**, **ENTER**.

---

## Quick access to one-touch registration

---

- 1 Make sure that the machine is in the fax standby mode.

**Fax Ready**  
**Nov 27 2004 2:15pm**

- 2 Press an empty one-touch key you want to register. The machine will show:

**01:Enter One-Touch**  
**Yes → Enter**



**01:Enter One-Touch**  
**No → Cancel**

To cancel this operation, press CANCEL.

- 3 To store the one-touch number, press ENTER.

**01:Fax Number**  
—

- 4 Use the numeric keys to enter the number exactly as your machine should dial it. The number can be stored up to 40 digits.

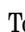
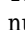
To change a number, press  or  to move the cursor, press CANCEL to erase the number. Then re-enter the correct number.

- 5 Press ENTER.

**01:Name ;Upper**  
—

- 6 Use the numeric keys to enter the name for the one-touch key. The name can be stored up to 24 characters.

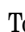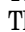

(Regarding how to enter the character, see “Entering character” on page 2.2.)

To change a name, press  or  to move the cursor, press CANCEL to erase the name. Then re-enter the name correctly.

- 7 Press ENTER to save the setting. The machine will return to standby mode.
- 8 Use the one-touch key labels supplied with your machine to label the one-touch keys with the stored names for easy reference.


## Erasing a one-touch number

---

- 1 Press MENU, 1, 1, 2, ENTER.
- 2 Press  or  to select a one-touch number. You can also select a one-touch key by pressing that key.
- 3 Press ENTER twice. If you want to quit without erasing, press CANCEL.
- 4 To erase another one-touch number, repeat the procedure from step 2. Otherwise, press RESET to return to the standby mode.

# How to dial using one-touch key

---

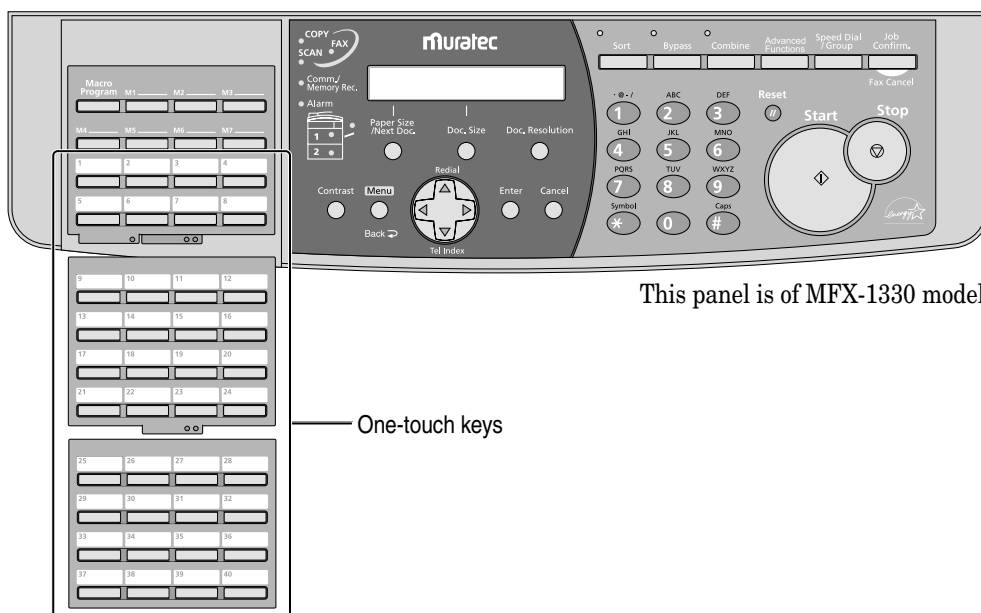

This panel is of MFX-1330 model.

## One-touch fax dialing

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Place the document on the ADF or the document glass.
- 3 When you use the document glass, select the document size by pressing **DOC. SIZE**.
- 4 Adjust document resolution and contrast, if necessary.
- 5 Open the one-touch key panel and press the one-touch key in which you have stored the number.

---

**NOTE:** The document glass is available only for MFX-1330 model.

---

## One-touch phone dialing

---

**NOTE:** Connect an external phone to your machine to make a phone call (see page 1.8).

---

- 1 Lift the telephone handset.
- 2 Press the one-touch key in which you have stored the number.
- 3 Speak to the person that answers.

# Speed-dial numbers

## Entering or changing a speed-dial number

---

Your machine can store up to 160 speed-dial numbers, designated by three-digit identifier codes from 001 through 160.

- 1 Press **MENU**, **1**, **2**, **1**, **ENTER**. The empty speed-dial number will be shown.

**Enter Speed Dial No.**  
**001:No Number Stored**

- 2 Press  $\leftarrow$  or  $\rightarrow$  to select a speed-dial number.  
You can also select a speed-dial number by directly entering that three-digit identifier code (001-160), using the numeric keys.

- 3 Press **ENTER**.

**001:Fax Number**  
—

- 4 Use the numeric keys to enter the number exactly as your machine should dial it. The number can be stored up to 40 characters:

To change a number, press  $\leftarrow$  or  $\rightarrow$  to move the cursor, press **CANCEL** to erase the number. Then re-enter the correct number.

- 5 Press **ENTER**.

**001:Name ;Upper**  
—

- 6 Use the numeric keys to enter the name for the speed-dial number.  
The name can be stored up to 24 characters.

(Regarding how to enter the character, see “Entering character,” on page 2.2.)

To change a name, press  $\leftarrow$  or  $\rightarrow$  to move the cursor, press **CANCEL** to erase the name. Then re-enter the name correctly.

- 7 Press **ENTER** to save the setting.  
The next empty speed-dial number will be shown.
- 8 To enter another speed-dial number, repeat the procedure from step 2.  
To exit the operation and return to standby mode, press **RESET**.

---

**NOTE:** To print a list of speed-dial numbers, press **MENU**, **5**, **1**, **0**, **8**, **ENTER**.


---

## Erasing a speed-dial number

---

- 1 Press **MENU**, **1**, **2**, **2**, **ENTER**.
- 2 Press  $\leftarrow$  or  $\rightarrow$  to select a speed-dial number.  
You can also select a speed-dial number by directly entering that three-digit identifier code.
- 3 Press **ENTER** twice.  
If you want to quit without erasing, press **CANCEL**.
- 4 To erase another speed-dial number, repeat the procedure from step 2.  
Otherwise, press **RESET** to return to the standby mode.

## How to dial using Speed-dial number

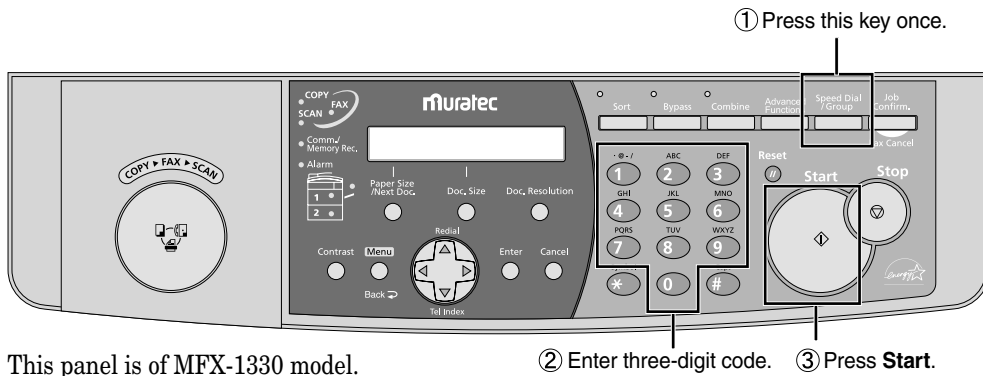

This panel is of MFX-1330 model.

### ***Fax dialing via speed-dial***

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Place the document on the ADF or the document glass.
- 3 When you use the document glass, select the document size by pressing **DOC. SIZE**.
- 4 Adjust document resolution and contrast, if necessary.
- 5 Press **SPEED DIAL /GROUP** once.

Enter Speed Dial No.  
S\_

- 6 Use the numeric keys to enter the three-digit identifier for the speed-dial number you want to dial. The machine shows the name (or fax number) you have stored:

Sales division  
S001\_

- 7 Press **START**.

**NOTE:** The document glass is available only for MFX-1330 model.

### ***Phoning via speed-dial***

**NOTE:** Connect an external phone to your machine to make a phone call (see page 1.8).

- 1 Lift the telephone handset.
- 2 Press **SPEED DIAL /GROUP** once.

\*\* Tel Mode \*\*  
S\_

- 3 Use the numeric keys to enter the three-digit identifier for the speed-dial number you want to dial. As the machine dials, it shows the number on the LCD.
- 4 Speak to the person that answers.



# Call group dialing

If you frequently send the same fax message to many destinations, use the call group dialing. Call group can store many one-touch keys and speed-dial numbers, so you can broadcast the fax message by simply perform the group dialing operation.


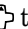
## Entering or changing a call group

---

Your machine can store up to 32 call groups.

- 1 Press **MENU**, **1**, **3**, **1**, **ENTER**. The empty call group number will be shown:

```
Enter Group No.  
01:No Number Stored
```

- 2 Press  or  to select a call group number.  
You can also select a call group by directly entering that two-digit identifier code (01-32).

- 3 Press **ENTER**.

```
01:Enter One-T/Speed  
_
```

- 4 Enter the one-touch numbers and the speed-dial numbers you want to store into the call group by pressing the one-touch key or **SPEED DIAL /GROUP** key followed by three-digit code. A comma will be automatically inserted between each number.

```
01:Enter One-T/Speed  
[01], [03], S001_
```

If you want to enter all the one-touch and speed-dial numbers currently stored in your machine, press **\*** without any characters.


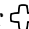
```
01:Enter One-T/Speed  
*_
```

- 5 Press **ENTER**.

```
01:Name      ;Upper  
_
```

- 6 Use the numeric keys to enter the name for the group number.  
The name can be stored up to 24 characters.

(Regarding how to enter the character, refer “Entering character” on page 2.2.)

To change a name, press  or  to move the cursor, press **CANCEL** to erase the name. Then re-enter the correct name.

- 7 Press **ENTER** to save the setting.  
The next empty call group will be shown.

- 8 To enter another call group, repeat the procedure from step 2.  
To exit and return to the standby mode, press **RESET**.



---

**NOTE:** To print a list of call group, press **MENU**, **5**, **1**, **0**, **9**, **ENTER**. Then select group number and press **ENTER**.

---


## Erasing a call group

---

- 1 Press **MENU**, **1**, **3**, **2**, **ENTER**.
- 2 Press  or  to select the call group you want to erase.  
You can also select the call group by directly entering that two-digit identifier code (01-32).
- 3 Press **ENTER** twice.  
If you want to quit without erasing, press **CANCEL**.
- 4 To erase another call group, repeat the procedure from step 2.  
Otherwise, press **RESET** to exit and return to the standby mode.

## How to dial using a call group

---

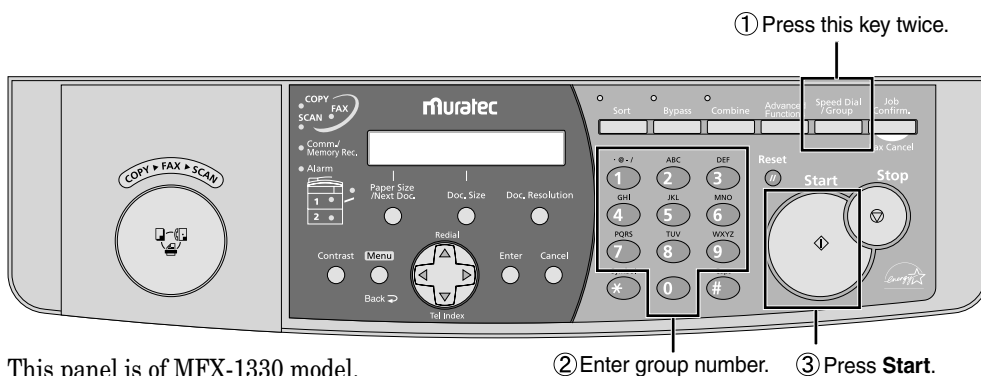

This panel is of MFX-1330 model.

### To perform the call group fax dialing

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Place the document on the ADF or the document glass.
- 3 When you use the document glass, select the document size by pressing **DOC. SIZE**.
- 4 Adjust document resolution and contrast, if necessary.
- 5 Press **SPEED DIAL /GROUP** twice.  

**Enter Group No.**  
G\_
- 6 Use the numeric keys to enter the two-digit call group number.
- 7 Press **START**.
  - The machine will start the call group dialing.

---


**NOTE:** The document glass is available only for MFX-1330 model.

---

# Phone directory dialing

Phone directory dialing makes your autodialer even more like an electronic phone book. Phone directory sorts and displays numbers alphabetically according to their names, so you can find them and dial them easily.

## How to dial using phone directory

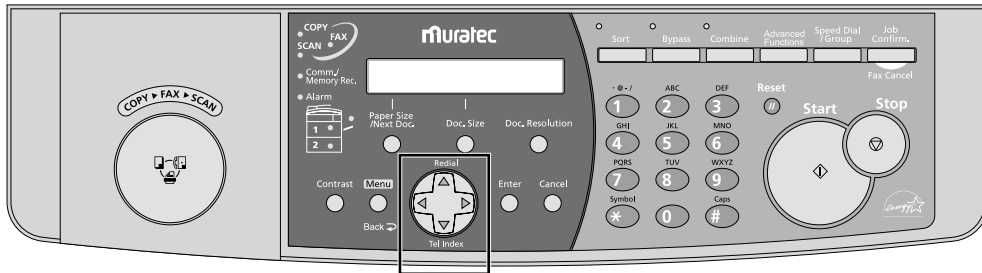

This panel is of MFX-1330 model.

Press then search the name by pressing .

### 1 For a fax call:

Place the document in the ADF and adjust document mode and contrast, if necessary.

*For a regular phone call:*

Lift the telephone handset.

**NOTE:** Connect an external phone to your machine to make a phone call. (See page 1.8.)

### 2 Press (TEL INDEX).

The machine shows the first listing in your phone directory:

<b>Telephone Index</b>	<b>[A]</b>
<b>Asian partner</b>	<b>: [01]</b>

The phone directory sorts entries alphabetically in the following order:  
(1) by alphabet, (2) by number and (3) by symbol.

### 3 Scroll through the listings to find the one you want. You do this by pressing the cursor key:

- or to select the character set — alphabet, number or symbol — for the first character of the name you have stored in the autodialer.
- or to check different listings within that character set.

To quickly search, press capital letter of the name using the numeric key.

### 4 When the name you want to dial is displayed, press **START**.

- If you have set the document in the ADF, your machine will start the fax transmission.
- If you make a regular phone call, speak after a person answers.

## If the phone directory dialing call fails

---

If the phone directory dialing call fails, what happens next depends upon the kind of call it was.

*If it was a fax call...*

...Your machine automatically redials the number. It keeps trying until either of the following occurs:

- It successfully reaches the other number
- It has attempted the number of redials programmed and has still not connected.



*If it was a regular phone call...*

...You will have to redial manually:

**1** Lift the handset.

**2** Press  (REDIAL).

<b>View Redial History</b> <b>01:1234567890</b>
--

**3** Your machine can remember the latest 10 dial numbers.  
Use  or  to select the dial number you want to redial.

**4** Press **START**.

# Chapter

# 4

## Sending faxes

---

Before sending.....	4.2
Document handling.....	4.2
Scanning resolution.....	4.2
Scanning contrast.....	4.2
Mixing document resolution and contrast in a multiple page.....	4.2
Sending method.....	4.3
Memory overflow message.....	4.3
Sending a fax.....	4.4
Memory transmission .....	4.4
Real time transmission (Non memory transmission) .....	4.6
Redialing .....	4.7
Automatically fax redialing .....	4.7
Redialing manually .....	4.7
Reviewing or canceling commands .....	4.8
To review or cancel the commands.....	4.8
Reviewing or canceling parts of a broadcast.....	4.9
Printing a delayed command list.....	4.9
Printing a stored document .....	4.9
View or print the results of fax transactions .....	4.10
Advanced fax functions.....	4.11
Broadcasting.....	4.12
Delayed transmission.....	4.13
Batch transmission .....	4.14
Selecting the TTI .....	4.17
Polling transmission.....	4.18
Fax & Copy .....	4.19
Cover page .....	4.20
Using alternative telephone network service providers .....	4.21

# Before sending

## Document handling

---

Before you begin the sending, please read the information of the document you can send and how to load the document mentioned on pages 2.10 to 2.11.

 
## Scanning resolution



---

- **Normal** is suitable for most typed documents and simple drawings.
- **Fine** is ideal for maps, moderately complicated drawings, floorplans or handwritten documents.
- **Superfine** (“S-Fine” on the LCD) reproduces the detail of extremely complicated drawings or line art.
- **Grayscale** (“Gray” on the LCD) captures shades in photos and drawings.

To change the scanning resolution:

- 1 Press **DOC. RESOLUTION**.



- 2 Press   or **DOC. RESOLUTION** repeatedly to select the resolution.

## Scanning contrast


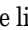
---

Setting the scanning contrast allows you to compensate for any excessive lightness or darkness, as the case may be, of document pages you are sending.

To change the scanning contrast:

- 1 Press **CONTRAST**.



- 2 Press  to be light, press  to be dark, or press **CONTRAST** repeatedly to select the contrast.

To avoid confusing the Light and Dark settings, just remember — “Light lightens” and “Dark darkens” — to keep it straight.

## Mixing document resolution and contrast in a multiple page

---

You can change the document resolution and contrast for each page of your documents.

- 1 Select document resolution and contrast for the first page.
- 2 Start sending.
- 3 Before starting to scan the next page, select document resolution and contrast for the next page.

## Sending method

---

The following three sending methods are available on your machine.

### **Memory transmission:**

For a normal memory transmission, your machine: (1) scans your entire document into memory, (2) dials the other fax machine, then (3) transmits the document.

### **Quick memory transmission:**

For a quick memory transmission, your machine doesn't wait to scan all pages into memory before dialing. After it scans the first page of your document, your machine dials the other fax machine. When it makes contact, your machine transmits the stored document from memory while at the same time scanning the remaining pages of your document into memory.

The quick memory transmission is on for default setting. However, you can turn off it for the default. (See "Fax settings" on page 10.4.)

### **Real time transmission:**

In the following cases, the machine doesn't use its memory for sending a fax:

- When you turned off the memory transmission
- When you are sending a fax with on-hook dialing (by pressing **ADVANCED FUNCTIONS** repeatedly until "**Monitor**" appear, and press **ENTER** or press the soft key in which "**Monitor**" is assigned.<sup>\*1</sup>) or using an external telephone handset.
- When the machine's memory is full

In Real time transmission, the next page is not scanned in while the current page is being transmitted.

Notes that in the real time transmission:

- Only one destination can be dialed
- While the machine is printing, you cannot use the real time transmission.
- The document glass<sup>\*2</sup> cannot be used for real time transmission

\*1 "**Monitor**" is assigned to a soft key in F-300 model in the default setting.

\*2 The document glass is available only for MFX-1330 model.

## Memory overflow message

---

In normal memory transmission, if you are stored too much information in your machine's memory, a "Memory Overflow" message will appear on the LCD:

**Memory Overflow**  
**Start or Cancel**

This appears because (1) too many pages have been stored in the memory, or (2) the pages that are stored have too much information on them for your machine to remember.

If this message appears, press **START** to tell your machine to keep as many pages in memory as possible, or press **CANCEL** to erase from memory all pages stored during the current operation (but not previous operations).

Dividing a large document into smaller batches will help you avoid this error.

The other way, you can transmit the documents without memory. (See "Real time transmission," page 4.3 and 4.6.)

---

**NOTE:** If you don't operate your machine within 3 minutes, the machine automatically erase the document stored in the memory during the current operation.

---

# Sending a fax

## Memory transmission

---

### *Sending a fax using the ADF*

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.

**Fax Ready**  
**Nov 27 2004 2:15pm**

- 2 Place your document on the ADF. (See page 2.11 for details.)
- 3 Adjust the scanning resolution and contrast, if necessary. (See page 4.2.)
- 4 Dial the fax number.
  - Use the numeric keys to dial a number.  
–or–
  - Press a one-touch key. (See page 3.6.)  
–or–
  - Press **SPEED DIAL /GROUP** and three-digit code. (See page 3.8.)  
–or–
  - Use the call group dialing. (See page 3.10.)  
–or–
  - Use the phone directory dialing. (See page 3.11.)

- 5 Press **START**. (If you pressed a one-touch key, no need to press **START**.)

By pressing **START**, you are just given your machine a command.

This command number appears on the first line of the LCD for a few seconds. You will need to know this command number if you later wish to cancel the transmission or to print a stored document (See “Reviewing or canceling commands” on page 4.8).

**== Command:01 ==**

- 6 At the end of the operation, your machine beeps and displays:

**\*\* Complete \*\***

Whenever you transmit a document, what actually appears on the top line of the LCD depends on information stored in the remote fax machine. The line may even be blank.

---

**NOTE:** If you want to cancel a transmission while scanning the document, press **STOP**.  
If you want to cancel a transmission in progress, use the Review Commands feature.  
See “Reviewing or canceling commands” on page 4.8.

---

---

**NOTE:** If the call fails, see “Redialing” on page 4.7.

---




## ***Sending a fax using the Document glass***

The document glass is available only for MFX-1330 model.

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.

**Fax Ready**  
**Nov 27 2004 2:15pm**

- 2 Place your document on the document glass. (See page 2.11 for details.)
- 3 Press **DOC. SIZE** to select the document size, Letter, Half-letter  or Legal.
- 4 Adjust the scanning resolution and contrast, if necessary. (See page 4.2.)

- 5 Dial the fax number.

- Use the numeric keys to dial a number.  
–or–
- Press a one-touch key. (See page 3.6.)  
–or–
- Press **SPEED DIAL /GROUP** and three-digit code. (See page 3.8.)  
–or–
- Use the call group dialing. (See page 3.10.)  
–or–
- Use the phone directory dialing. (See page 3.11.)

- 6 Press **START**. (If you pressed a one-touch key, no need to press **START**.)

By pressing **START**, you are just given your machine a command.

This command number appears on the first line of the LCD for a few seconds. You will need to know this command number if you later wish to cancel the transmission or to print a stored document (See “Reviewing or canceling commands” pages 4.8 to 4.10).

**== Command:01 ==**

- 7 When the scanning is done, the machine will show:

**Start Scan → NextDoc**  
**Tx Start → Start**

- 8 Place the next page, then press **PAPER SIZE /NEXT DOC.**.  
Otherwise, press **START** to start the transmission.

- 9 At the end of the operation, your machine beeps and displays:

**\*\* Complete \*\***

Whenever you transmit a document, what actually appears on the top line of the LCD depends on information stored in the remote fax machine. The line may even be blank.

---

**NOTE:** If you want to cancel a transmission while scanning the document, press **STOP**.  
If you want to cancel a transmission in progress, use the Review Commands feature.  
See “Reviewing or canceling commands” on page 4.8.

---

---

**NOTE:** If the call fails, see “Redialing” on page 4.7.

---

## Real time transmission (Non memory transmission)

---

Your machine simply dials the other fax and when it makes contact, your machine feeds the document through, scanning and transmitting it as it goes.

- With real time transmission, you can watch each page as it is scanned and sent.

To perform the real time transmission:

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Place the document on the ADF.

---

**NOTE:**

- The document glass cannot be used for real time transmission.
- The document glass is available only for MFX-1330 model.

---

- 3 Obtain a dial tone, either:
  - Press **ADVANCED FUNCTIONS** repeatedly until “**Monitor**” appears, then press **ENTER**.  
– or –  
Press the soft key in which “**Monitor**” is assigned.  
–or–
  - Lift the handset if you have connected an external telephone to your machine.

In either case, the machine shows:

<b>** Tel Mode **</b>
—

– or –

Press **ADVANCED FUNCTIONS** repeatedly until “**Memory Tx**” appears and press **ENTER**. Then select “Off” and press **ENTER** to turn off the memory transmission.

– or –

If you assigned “**Memory Tx**” to the soft key (page 8.2), turn off the memory transmission by simply pressing that key.

---

**NOTE:** “**Monitor**” is assigned to a soft key in F-300 model in the default setting.

---

- 4 Dial the fax number.
  - Use the numeric keys to dial a number.  
–or–
  - Press one-touch key. (See page 3.6.)  
–or–
  - Press **SPEED DIAL /GROUP** and three-digit code. (See page 3.8.)  
–or–
  - Use the phone directory dialing. (See page 3.11.)

---

**NOTE:** With real time transmission, only one destination can be dialed.

---

- 5 When you hear fax tones from the remote unit, press **START**.

If a person answers the phone, use the handset to tell that person that you are trying to send a fax. When you hear fax tones, press **START**.

If the call fails and you used “**Monitor**” to dial, press **ADVANCED FUNCTIONS** repeatedly until “**Monitor**” appears, then press **ENTER** or press the soft key to which “**Monitor**” is assigned to hang up.

If you are using the handset, hang up after pressing **START**.

---

**NOTE:** To cancel a transmission, use Review Commands features. (page 4.8)

---

# Redialing

## Automatically fax redialing

---

When using the memory transmission and the line is busy, your machine automatically redials the number up to two times at one minute intervals.

If the last redial attempt fails, your machine prints (and/or display) error messages.

While in the Auto Redial mode, "AutoRedial" appears on the first line of the LCD.


**\*\* Auto Redial \*\***  
**Nov 27 2004 2:15pm**

You can change the redial time and interval settings. (See "Fax settings" on page 10.4.)

If you want to cancel a redialing, delete the command of it from the command list. (See "Reviewing or canceling a command" on next page.)



## Redialing manually

---

Press  (REDIAL) to redial the number entered with the numeric keys.

- 1 Press  (REDIAL).

**View Redial History**  
**01:1234567890**

- 2 Your machine can remember the last 10 dialed numbers.  
Press  or  to select the dial number you want to redial.
- 3 Press START.

# Reviewing or canceling commands

Your machine can store many “Jobs” in its memory. It also keeps track of each command by assigning it a command number, like “C01.”


Delayed commands, redial attempts and current fax transmissions are all stored in your machine’s memory and given a command number.

Your machine can store up to 99 delayed commands. It identifies each by a two-digit command number from 01 to 99.

The Review Commands function gives you the power to check on each job (or command) in your machine’s memory. It also allows you to cancel a command of fax transaction if you decide not to send the document.

## To review or cancel the commands

---

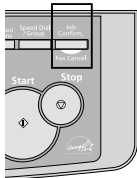

- 1 Press **JOB CONFIRM.**

**Delayed Commands**  
▼/▲/Enter

If your machine is attempting to perform a command now, the machine shows it. If you want to cancel the command, go to step 3.

**C01 : 5552009**  
▼/▲/Cancel

- 2 Press **ENTER.**

The machine shows the first command, indicated by its command number and the phone number it will dial.



Here, you see Command No. : 01, and the number it’s set to dial. If the command is to send a broadcast (see page 4.12), “**Broadcast**” appears instead of the phone number.

If the command is to send a batch transmission (see page 4.14), the machine shows its batch box number (such as “**B01**”) rather than the command number.

If the command is for a Call group dialing (see page 3.9), the group number (such as “**G01**”) appears instead of the phone number.

If the command is for a polling (see page 5.11), the machine shows polling number (such as “**P01**”) rather than the command number.

If there are no stored commands in your machine, the machine shows “**No Command Stored**”. Press **RESET** to return to standby mode.

- 3 Press  or  to scroll through currently stored commands.

- 4 If you want to cancel the command shown, press **CANCEL.**

The following two displays will appear alternately:

**C01 : 5552009**  
**Yes → Cancel**

**C01 : 5552009**  
**No → Back**


- 5 To go ahead with canceling the command, press **CANCEL.**

To keep this command but to continue reviewing the stored commands, press **BACK.**

Each case, the LCD go back to step 2.

- 6 To stop reviewing or canceling commands, press **RESET.**

## Reviewing or canceling parts of a broadcast

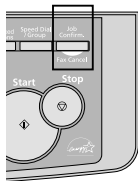

You also can review or cancel certain numbers within a broadcast:

- 1 Press **JOB CONFIRM., ENTER.**
- 2 Press  $\leftarrow$  or  $\rightarrow$  to scroll through currently stored broadcast command.  

**C01:Broadcast**  
 $\nabla/\blacktriangle/\blacktriangleright/\text{Cancel}$
- 3 When the command you want to cancel shown, skip to step 6.  
If you want to review individual numbers within this broadcast, go on to step 4 without pressing **CANCEL**.
- 4 To review individual numbers within this broadcast, press  $\leftarrow$  to see the first number.  
The machine shows:  

**9-5550388**  
 $\nabla/\blacktriangle/\blacktriangleleft/\text{Cancel}$
- 5 Press  $\leftarrow$  or  $\rightarrow$  until you find the number you want to cancel.
- 6 Press **CANCEL, CANCEL.**  
The next number will appear and if you want to cancel this number, press **CANCEL** twice.  
If you want to cancel a different number, go back to step 5.  
If you want to go back to reviewing or canceling other command, press  $\leftarrow$ .  
To stop reviewing or canceling commands, press **RESET**.

## Printing a delayed command list

Your machine can print a command list which tells you:

- The command's identification number
- The phone number, or "Remote location"
- The start time (this appears in a DD,HH:MM format)
- A "note" telling if the command is a polling or F-Code operation.

To print a delayed command list, press **MENU, 5, 1, 0, 6 ENTER.**

## Printing a stored document

Your machine can print out each document stored for delayed transmission.

To print a stored document, you will need to know the document's command number, which you can get by either reviewing the commands or printing a delayed command list (see above).


- 1 Press **MENU, 4, 3, 5 ENTER.**  

**Select Command No.**  
**C01:123-4567**
- 2 Press  $\leftarrow$  or  $\rightarrow$  to select the command number.
- 3 Press **ENTER.**

## View or print the results of fax transactions

---


You can see the results of 70 most recent fax transactions.

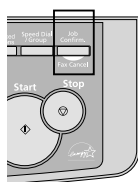

- 1 Press **JOB CONFIRM.** and press  $\leftarrow$  or  $\rightarrow$  to select **“Show History”**.

**Show History**  
 $\nabla/\blacktriangle$ /Enter

- 2 Press **ENTER**. The machine will show the latest fax transaction.

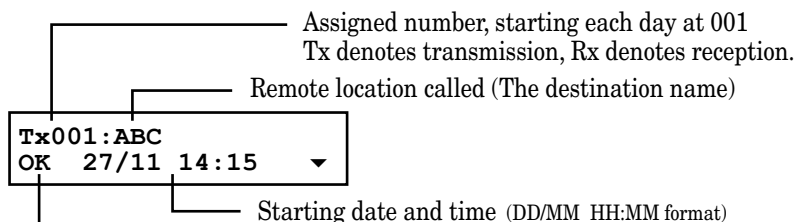

Result of fax transaction

**OK:** Transaction has been completed.

**Error code:** Transaction failed. (Page 12.18.)

---

**NOTE:** You can print a result of the fax transaction appears on the LCD by pressing **ENTER**.

---

- 3 Press  $\leftarrow$  or  $\rightarrow$  to view other result of transactions.

- 4 Press **RESET** to exit.

### ***Printing the result of fax transaction:***



In step 2, you can print a result of fax transaction appears on the LCD by pressing **ENTER**. Furthermore, if you want to print a list of results of transactions, press **MENU, 5, 1, 0, 5, ENTER**. Your machine will print the “Activity Journal.”

For details of Activity journal, see page 11.4.

# Advanced fax functions

The function that are not assigned to the soft key can be selected by using advanced functions key.

To select the fax function using advanced functions key:

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Press **ADVANCED FUNCTIONS**.
- 3 Press  or , or **ADVANCED FUNCTIONS** repeatedly to select the function. Then press **ENTER**.

The table below lists the advanced functions that can be used in fax mode and order of display. Refer to the pages indicated for detail of function.

**NOTE:** You can assign a function that you use frequently in the following table to the soft key to shorten the operation. (See page 8.2.)

Advanced function	Descriptions	Reference
Broadcast	Use this to make a broadcasting.	p. 4.12
Report	Prints the transmit confirmation report for only the next transmission.	p. 11.5
Monitor	Obtains a dial tone to on-hook dialing.	—
Pause/Dial Opt.	Use this to enter a dialing character.	p. 3.2
Delayed	Use this to make a delayed transmission.	p. 4.13
Batch Tx	Stores a document for batch transmission.	p. 4.14
Select TTI	Choose the TTI to be sent. Also it can disable TTI sending.	p. 4.17
Cover Page	Whether or not attach the cover page.	p. 4.20
Fax Forward	Enable or disable the fax forwarding.	p. 5.12
Fax & Copy	Enable or disable the Fax&Copy.	p. 4.19
Security	Enable or disable the security reception.	p. 9.3
Separator Page	Enable or disable the separator page.	p. 5.14
Memory Tx	Enable or disable the memory Tx.	p. 4.3
Auto Rx	Toggle the manual and auto reception mode.	p. 5.2
F-Code Tx	Use this to make a F-code transmission.	p. 6.11
F-Code Polling	Use this to make a F-code polling.	p. 6.12
Polling	Use this to make a polling reception.	p. 5.11
Dial Prefix	Use this to enter a “/N” symbol.	p. 4.21
Bypass	Use this to set the paper size on the bypass tray.	p. 2.16
Page Counter	Display total printed and scanned page.	p. 8.8
Energy Save	Switches to the energy save mode immediately.	p. 1.17
Online	Cancels PC printing.	*
Mode Switch	Switches the machine's mode.	p. 2.2

\* For details of printer settings, refer to the PDF manual on the Printer & Scanner driver CD.

## Broadcasting

---

The fastest way to fax one document to many recipients is to broadcast it.

In an ordinary broadcast, you send the fax as you normally would, except you just add more fax numbers.

You can enter up to 230 numbers:

- One-touch dialing: Up to 40 locations
- Speed dial numbers: Up to 160 locations
- Manually-dialed numbers: Up to 30 locations

**You can broadcast using any function that requires a fax number to be entered.**

To send a broadcast fax:

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Load the document and make any necessary adjustments as you would for a regular fax transmission.
- 3 Press **ADVANCED FUNCTIONS** until **"Broadcast"** appears on the LCD then press **ENTER**.

**Broadcast**  
▼/▲/Enter

– or –

Press the soft key which assigned **"Broadcast"**.

- 4 Enter the first fax number, as usual.  
Use either a one-touch key, a speed-dial number, a call group or a regular number dialed from the numeric keys.

**Press Start**  
1111

- 5 To add more fax numbers, repeat the step 4. If you enter the fax number by using the numeric keys, repeat procedures from step 3 to insert a comma (pressing one-touch key and **SPEED DIAL /GROUP** inserts its own comma).  
You can send up to 230 numbers for a broadcast.

**Press Start**  
[01] , 1111 , 2222 , S001

- 6 Press **START**. Your machine scans the document into memory and then sends it to each number you are entered.

---

**NOTE:**

- For details of the Soft key, see page 8.2.
- If you enter characters by mistake, press **CANCEL** to erase them.
- If you frequently broadcast the documents to the same destinations, use the call group dialing for your convenience. (Page 3.9.)

---

### ***Making changes to broadcast***

If you need to make changes in a broadcast after setting it up, see "Reviewing or canceling parts of a broadcast" on page 4.9.



## Delayed transmission

### Setting up a delayed transmission

Your machine can store up to 99 delayed commands, each of which you can program up to 31 days in advance.

Your machine only remembers the day of the month that it is supposed to send a delayed transmission. It does not remember the month itself. So if you want to send a transmission at 2:15 pm on 27 November, do not program the transmission sooner than 2:16 pm on 26 October.

To set up a delayed transmission:

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Load the document and make any necessary adjustments.
- 3 Press **ADVANCED FUNCTIONS** until **"Delayed"** appears on the LCD then press **ENTER**.

Delayed  
▼/▲/Enter

– or –

Press the soft key which assigned **"Delayed"**.

- 4 The machine shows the current day of the month, followed by the current time (in 24-hour format):

Delayed  
Enter Time: 27,14:15

- 5 Use the numeric keys to enter the day of the month and the time when you want the fax to send the delayed transmission.
- 6 When the date and time are entered, press **ENTER** to save the delayed transmission.

Enter Fax Number

- 7 Enter the fax number.  
You can either press a one-touch key, enter a speed-dial number or use the numeric keys to enter the fax number.

- 8 Press **START**.

Your machine will scan the document into memory, then it returns to the standby mode, while showing this on the LCD:

\*\* Reserved \*\*  
Nov 27 2004 2:15pm

This means your machine is "Reserved" for the delayed transmission you just programmed.

- If you specified the delayed real time transmission (non-memory transmission), do not remove the document in the ADF. If the document is removed from the ADF before a delayed command completes, it cancels the delayed real time transmission.

## Batch transmission

---

Batch transmission allows you to store multiple documents in an electronic “basket” throughout the day and then fax that entire basket to one location.

To do this, just tell the machine when and where the transmission should go. When that date and time arrives, your machine will transmit each document in the batch box to the remote fax machine. You can store up to 40 documents (each document can include one page or many pages) into your machine’s five electronic batch boxes.

### *Creating or modifying a batch box*

Before sending a batch transmission, you have to create batch boxes in your machine. The steps below also let you modify the existing batch boxes.

- 1 Press **MENU**, **3**, **5**, **1**, **ENTER**.

**Select Batch Box**  
**1:No Number Stored**

- 2 Use the numeric keys to enter the batch box number (1–5).

- 3 Press **ENTER**.

**1:Fax Number**  
—

- 4 Use the numeric keys to enter the fax number exactly as your machine should dial it. The number can be up to 40 characters in length.

To change a number, press **⬅** or **➡** to move the cursor, press **CANCEL** to erase the number. Then re-enter the correct number.

- 5 Press **ENTER**.

**1:Transmit Time**  
**Enter Time: 27,14:15**

- 6 Instruct your machine to send from this batch box in one of the following ways:

**Option 1** — Once at a certain time on a certain day of the month (For example: “Do this at 5:05 pm on the 30th.”) — Use the numeric keys to enter the date and time (24-hour format) the machine should send the documents from the batch box:

**1:Transmit Time**  
**Enter Time: 30,17:05**

**Option 2** — At a certain time each day you press the key (For example: “Do this at 5:05 pm today.”) — Use the numeric keys to enter **0, 0**, and then the time when the machine should send the documents from the batch box:



**1:Transmit Time**  
**Enter Time: 00,17:05**

- 7 Press **ENTER**.

**1:Box Name ;Upper**  
—

- 8 Enter the name by using the numeric keys.  
A batch box’s name can be stored up to 24 characters.

(Regarding how to enter the character, see “Entering character,” on page 2.2.)

To change a name, press  or  to move the cursor, press CANCEL to erase the name. Then re-enter the name correctly.

9 Press ENTER to save the batch box information.

10 To create or modify another batch box, repeat procedures from step 2.  
To exit, press RESET.

---

**NOTE:** To print a list of batch boxes, press MENU, **5, 1, 1, 5**, ENTER. (See page 11.3.)

---

### ***Storing a document for batch transmission***

Your machine can store up to 40 documents (each document can include one page or many pages) in each batch box until the date and time you designate the batch transmission to take place. Once the batch documents are transmitted, they are automatically erased from the batch box.

To store a document in a batch box for batch transmission:

- 1 Load the document on the ADF or document glass, and make any necessary adjustments.
- 2 Press ADVANCED FUNCTIONS until “Batch Tx” appears on the LCD then press ENTER.



**Batch Tx**  
▼/▲/Enter

– or –

Press the soft key which assigned “Batch Tx”.

- 3 The machine shows the following display.

**Select Batch Box**  
**1:111-1111**

- 4 Use the  or  to select the batch box you want to use.

- 5 Press ENTER.

**Press Start**  
**Box :5 File :1**

Your machine gives each document in a batch box a file number. You will need to know this file number if you later wish to erase or print the stored document. Each batch box can hold up to 40 files.

- 6 Press START. The machine shows “Reserved” on the top line of the LCD. This means the document is stored in memory.

---

**NOTE:**

- The document glass is available only for MFX-1330 model.
- To print a list of the documents stored in batch boxes, press MENU, **5, 1, 1, 6**, ENTER. (See page 11.3.)

---

### ***Printing a document stored in a batch box:***

- 1 Press MENU, **4, 3, 3**, ENTER.
- 2 Use the numeric key to enter the box number, then press ENTER.
- 3 Use the numeric key to enter the document's file number, then press ENTER. Your machine prints the document, then returns to the standby mode.

### ***Erasing a document stored in a batch box:***

- 1** Press **MENU**, **4**, **2**, **3**, **ENTER**.
- 2** Use the numeric key to enter the box number, then press **ENTER**.
- 3** Use the numeric key to enter the document's file number.
- 4** Press **ENTER** to delete the document.  
If you want to quit the operation without erasing, press **CANCEL**.

### ***Erasing an empty batch box***

Batch boxes must be empty to be erased. If a box has documents stored in it, you first have to erase those documents. (See "Erasing a document stored in a batch box" on page 4.16.)

To erase an empty batch box:

- 1** Press **MENU**, **3**, **5**, **2**, **ENTER**.

**Select Batch Box**  
**1: 9-5551023**

- 2** Use the numeric key to enter the batch box number.
- 3** Press **ENTER**. The following two displays will appear alternately:

**1: Erase Batch Box**  
**Yes → Enter**

**1: Erase Batch Box**  
**No → Cancel**

- 4** Press **ENTER** to erase the batch box.  
If you want to cancel the erasing, press **CANCEL**.
- 5** To erase another batch box, repeat procedures from step 2.  
To exit, press **RESET**.

---

**NOTE:** If you select a batch box which is not empty, the machine beeps and briefly shows:

**Select Batch Box**  
**Document Stored**


Erase any documents stored in the batch box, then repeat this procedure from the beginning to erase the box.

---

## Selecting the TTI

Default setting is “Default”.

Every fax page you send arrives at the receiving machine with a single line of text at the very top of the page. This text lists your name, your fax number, date & time of transmission and page number as below.

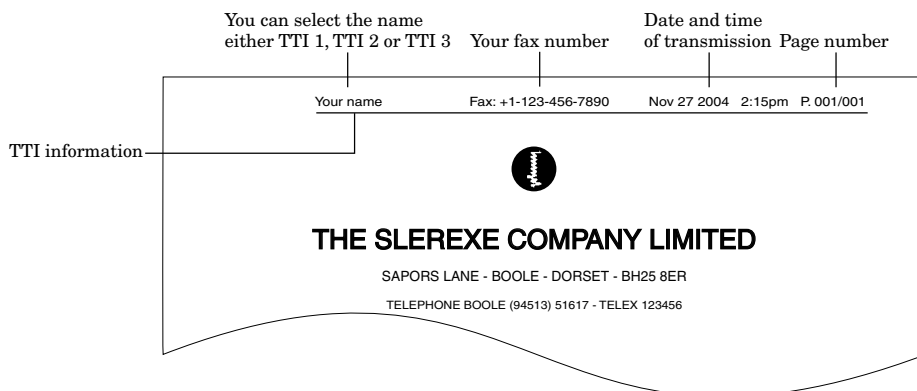

You can select the three types of TTI (your name) stored in the “Entering initial settings” (pages 1.14 to 1.16) can be selected and transmitted for each transmission. Also, you can set the machine whether or not send the TTI information.

**IMPORTANT:** In some countries you are required by law to indicate your name and fax number on every fax you send.

- 1 Press **MENU, 2, 2, 0, 8**.  
– or –  
Press **ADVANCED FUNCTIONS** until “**Select TTI**” appears on the LCD.

**Select TTI**  
▼/▲/Enter

- 2 Press **ENTER**.

**TTI Default**  
▼/▲/Enter

- 3 Press **+** or **-** to select one of following:
  - “**TTI Default**” — The machine send the “Usual TTI” you have set in “Usual TTI selection” of “Entering initial settings” on page 1.14.
  - “**TTI 1:(your entered name)**” — The machine send your TTI 1.
  - “**TTI 2:(your entered name)**” — The machine send your TTI 2.
  - “**TTI 3:(your entered name)**” — The machine send your TTI 3.
  - “**TTI Off**” — The TTI information is not printed on pages you send.
- 4 Press **ENTER** to save the setting.

**NOTE:** If you assigned “**Select TTI**” to the soft key (page 8.2), you can select TTI by simply pressing that key.

## Polling transmission

---

Polling transmission allows someone to retrieve a document you stored in your machine's memory. The stored document will be sent when the other party calls you up.

### *Storing a document for polling transmission*

- 1** Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2** If your machine is set for Tel Ready reception, change it to the reception mode except the Tel Ready. (Refer to page 5.2.)
- 3** Place the document on the ADF or document glass, and adjust fax resolution and contrast if necessary.
- 4** Press **MENU, 4, 1, 1, ENTER**.  
Your machine will scan the document into memory and return to standby mode.

---

**NOTE:**

- The document glass is available only for MFX-1330 model.
- Once the remote fax machine polls the document you stored, your machine automatically erases the document from memory.

---

### *Printing a stored polling document*

To print a document you have stored for polling transmission without erasing it, press **MENU, 4, 3, 1, ENTER**.

### *Erasing a stored polling document:*

To erase a document you have stored for polling transmission from your machine's memory:

- 1** Press **MENU, 4, 2, 1, ENTER**.
- 2** Press **ENTER** to erase the document.  
If you want to quit the operation without erasing, press **CANCEL**.

## Fax & Copy



---

With the Fax & Copy feature turned on, your machine asks if you want to make a copy of a document each time it transmits that document from memory.

Setting the Fax & Copy function

- 1 Press **MENU**, **2**, **1**, **0**, **6**, **ENTER**.  
– or –  
Press **ADVANCED FUNCTIONS** until **Fax & Copy** appears on the LCD then press **ENTER**.

<b>Fax &amp; Copy</b>	<b>: Off</b>
<b>▼/▲/Enter</b>	

- 2 Press  or  to select on or off.
- 3 Press **ENTER** to save the setting.
- 4 Press **RESET** to exit and return to the standby mode.

---

**NOTE:**

- The Fax & Copy function cannot be used for real time transmission
- With this feature, the quick memory transmission (see page 4.3) will be canceled.
- This feature does not work for polling transmission (page 4.18) and F-code bulletin box polling (page 6.8).

---

---

**NOTE:** If you assigned “Fax & Copy” to the soft key (page 8.2), you can turn the Fax & Copy on or off by simply pressing that key.

---

### Using the Fax & Copy feature

- 1 Place the document and select scanning resolution and contrast you require.
- 2 Enter the fax number.  
You may use a one-touch key, speed-dial number, call group or the numeric keys to enter the fax number.
- 3 Press **START**. (If you are using one-touch key, no need to press **START**.)
- 4 The LCD changes copy mode and asks the number of copies you want to make.

<b>Fax &amp; Copy</b>	<b>01</b>
<b>Auto</b>	<b>Ltr 100%</b>

- 5 Use the numeric keys to enter the number of copies you want for each page in the document. Choose from 01 to 99 copies.
- 6 Press **START** to begin the transmission and copying process.

## Cover page

---

Your machine can store a cover page to send at the beginning of each outgoing fax.

<b>Fax Message From:</b>	
Nov 27 2004 10:12am	
<b>Name:</b>	(Your name)
<b>Fax Number:</b>	(Your fax number)
[(Enter your message)	]
[(Enter your message)	]
[(Enter your message)	]



### Turning the cover page on

- 1 Press **MENU, 3, 2, 1, ENTER.**

– or –

Press **ADVANCED FUNCTIONS** until “**Cover Page**” appears on the LCD then press **ENTER.**

<b>Cover Page</b>	<b>:Off</b>
<b>▼/▲/Enter</b>	

- 2 Press  or  to select on or off, then press **ENTER.**

Now the cover page feature is working but your message line is blank. To enter the message, see “Entering the cover page message,” below.

The usual TTI and your fax number you have entered in the Initial settings (page 1.14 to 1.16) will be filled in the cover page automatically.

---

**NOTE:** If you assigned “Cover Page” to the soft key (page 8.2), you can turn the Cover page on or off by simply pressing that key.

---

### Entering the cover page message

The message can be up to 120 characters divided on the 3 lines.  
Each line can be store up to 40 characters.

- 1 Press **MENU, 3, 2, 2, ENTER.**

<b>Line 1</b>	<b>;Upper</b>
—	

- 2 Use the numeric keys to enter a message for the 1st line.  
(Regarding how to enter the character, see “Entering character,” on page 2.2.)
- 3 Press **ENTER** to save it.
- 4 To enter a message into other line, the procedure is same as the step 2 and 3.
- 5 When you finish entering a message, press **RESET** to exit.

### Printing the cover page

To confirm that the cover page is set correctly, print a sample cover page from your machine. Press **MENU, 5, 1, 1, 1, ENTER.**



## Using alternative telephone network service providers

---

When you make a call, you may want to use alternative telephone network service provider to take advantage of low rates. You can store the access codes in “Dial Prefix” key. The following information describes how to program the access number.

- 1 Press **MENU, 2, 2, 1, 6, ENTER**.

**Dial Prefix No**  
—

- 2 Enter the telephone network access number using the numeric keys.

You can enter access numbers up to 40 digits.

If you must wait for another dial tone at the dialing, enter a pause there in the number by pressing **ADVANCED FUNCTIONS** repeatedly until “**Pause /Dial Opt.**” appears and press **ENTER** or press the soft key to which “**Pause /Dial Opt.**” is assigned. (Refer to “Special dialing characters,” page 3.2.)

- 3 Press **ENTER** to save it.
- 4 Press **RESET** to exit and return to standby mode.

---

**NOTE:** “**Pause /Dial Opt.**” is assigned to a soft key in F-300 model in the default setting.

---

### *Sending faxes with Dial prefix feature*

To dial using the numeric keys

- 1 Place the document on the ADF or document glass.
- 2 Press **ADVANCED FUNCTIONS** repeatedly until “**Dial Prefix(/N)**” appears then press **ENTER** to enter an “/N” in the LCD.  
— or —

If you assigned “Dial Prefix” to the soft key (page 8.2), simply press that key.

This symbol indicate the access to the alternative telephone network.

**Press Start**  
/N—

- 3 Enter the fax number using the numeric keys.
- 4 Press **START**.

---

**NOTE:**

- You must enter the full National Code telephone number when dialing telephone numbers via any network.
- You can assign the “Dial prefix” to a soft key (page 8.2) to enter an “/N”, but it cannot be combined with any one-touch key or speed-dial number for dialing. In order to send faxes using the one-touch key or speed-dial number, you must instruct your machine to access the alternative telephone network when you store the fax number into your autodialer.

To enter the access number into your autodialer:

Before entering a fax number, press **ADVANCED FUNCTIONS** repeatedly until “**Dial Prefix(/N)**” appears then press **ENTER** to enter an “/N”. And then, enter the fax number.

- The document glass is available only for MFX-1330 model.
-



# Chapter

# 5

## Receiving faxes

---

Receiving a fax .....	5.2
Selecting the reception mode.....	5.2
Manual reception mode.....	5.2
Automatic reception mode .....	5.2
Answering calls manually.....	5.4
Switch the Automatic or Manual reception mode .....	5.4
If the paper runs out while fax reception.....	5.5
Settings for fax reception.....	5.6
Setting the number of rings.....	5.6
Print settings.....	5.6
Advanced receiving functions.....	5.8
Block Junk Fax .....	5.9
Polling receiving .....	5.11
Fax forwarding .....	5.12
Separator page .....	5.14



# Receiving a fax

## Selecting the reception mode

---

- 1 Press **MENU**, **9**, and then press **ENTER** four times.  
The machine shows your current fax reception mode:

**Fax Ready**  
▼/▲/Enter

- 2 Press  or  to select your desired reception mode.  
Your machine has five different reception modes:
  - Tel Ready (see “Manual receive mode,” below)
  - Fax Ready (see “Automatic receive mode,” below)
  - Fax/Tel Ready (see next page)
  - Tel/Fax Ready (see next page)
  - Ans/Fax Ready (see next page)
- 3 Press **ENTER** to save the setting.
- 4 Press **RESET** to exit.

---

**NOTE:** If you assigned “**Auto Rx**” to the soft key (page 8.2), you can toggle Manual reception (Tel Ready) and Automatic reception (you have set) by pressing that key.

---

## Manual reception mode

---

### *Tel Ready mode*

*Use it if:*

- You want to use the same line for both fax and phone calls
- You receive mainly a voice call and sometimes faxes.

*In this mode:*

Your machine never answers calls automatically. You must answer each call as described in “Answering calls manually” (page 5.4).

*You will need to:*

- Connect an external phone. (See page 1.8.)

## Automatic reception mode

---

### *Fax Ready mode*

*Use it if:*

Your machine uses its own phone line and doesn’t share it with a phone or an answering machine.

*In this mode:*

Your machine answers each call and attempts to receive a fax.

## ***Fax/Tel Ready mode***

*Use it if:*

- You want to use the same line for both fax and phone calls
- You are using the machine as both a fax machine and a telephone and you want to receive a fax primarily.

*In this mode:*

Your machine receives faxes silently but also alerts you when a regular voice call comes in. (Your machine also beeps once at the end of each reception.)

When a voice call comes in, your machine sounds a special ring (but the telephone connected to your machine will not ring). If you hear it, answer using your handset.

*You will need to:*

- Connect an external phone. (See page 1.8.)

## ***Tel/Fax Ready mode***

*Use it if:*

- You want to use the same line for both fax and phone calls
- You are using the machine as both a fax machine and a telephone and you want to receive a voice call primarily.

*In this mode:*

Your machine rings the number of times you have set (the default setting is twice).

If you don't answer the call while ringing, your machine answers the call automatically. If a caller sends a fax, your machine begins receiving it. If a voice call comes in, your machine sounds a special ring, telling you to answer using the handset. (But the telephone connected to your machine will not ring.)

*You will need to:*

- Connect an external phone. (See page 1.8.)

## ***Ans./Fax Ready mode***

*Use it if:*

You are using an answering machine connected to your machine.

*In this mode:*

An answering machine connected to your machine answers each call.

If a voice call comes in, the answering machine begins to record the incoming message.

If your machine hears a fax tone, it begins receiving the fax message.

*You will need to:*

- Connect an answering machine. (See page 1.8.)

*Using an answering machine with your machine:*

- 1** Set the machine to Ans./Fax Ready. (See page 5.2.)
- 2** Set your answering machine to answer calls after no more than two rings.
- 3** Create a new outgoing message on your answering machine.  
Your answering machine's outgoing message should be no longer than 10 seconds.

Here is a suggested message:

*Hello! You are reached [your name or telephone number]. To leave a voice message, please wait for the beep. To send a fax, press **START** on your fax machine. Thanks for calling!*

## Answering calls manually

---

- NOTE:**
- To answer a call manually, you must install an external phone to your machine.
  - Make sure the document is not set on the ADF.
- 

### *Receiving a call manually with an external phone*

In “Tel Ready” or “Tel/Fax Ready” mode, when the external phone rings, pick up handset:



- If you hear someone speaking to you, speak back.
- If you hear fax tones (“beep — beep — beep”), put the handset down, but do not hang up. Walk to your machine and press **START**. After you press **START**, hang up the external phone’s handset. Because remote fax machines will wait several seconds to hear reception tones from your machine, you have about 30 seconds to walk to your machine and press **START**.

## Switch the Automatic or Manual reception mode

---

- 1 Make sure that the machine is in the fax mode. If not, press **COPY ▶ FAX ▶ SCAN** to switch to the Fax mode.
- 2 Press **ADVANCED FUNCTIONS** until “**Auto Rx**” appears on the LCD then press **ENTER**.

<b>Auto Rx</b>	<b>: Off</b>
<b>▼/▲/Enter</b>	

- 3 Press  or  to select on or off.
  - To switch to manual reception mode, select “Off”
  - To switch to automatic reception mode, select “On”
- 4 Press **ENTER** to save the setting.

---

**NOTE:** If you assigned “**Auto Rx**” to the soft key (page 8.2), you can toggle Manual reception (Tel Ready) and Automatic reception (you have set) by pressing that key.

---

## If the paper runs out while fax reception

---

When your machine runs out of paper, it beeps, the **ALARM** light glows and the machine shows which source has run out of paper — the 1st cassette, 2nd cassette (optional) or the bypass tray.

In this example, the machine runs out of paper in 1st cassette:

**1st Cassette**  
**Please Supply Paper**

### *Out-of-paper reception*

If your machine runs out of paper, it stores up to 250 fax receptions in its memory. This is called “out-of-paper reception.” Once you refill the paper supply, the machine prints the stored messages automatically.

---

**NOTE:** The number of pages (not receptions) your fax machine can store for out-of-paper reception will vary. It depends on:

- Your machine’s memory capacity
  - Types of documents sent to your machine
  - Fax resolution of documents sent to your machine
-

# Settings for fax reception

## Setting the number of rings

---

Default setting: Twice.

You can set how many times your machine will ring before answering a call. Choose from 1 to 10 rings.

- 1 Press **MENU**, **2**, **2**, **0**, **3**, **ENTER**.

# of Rings (01-10)      02 times
-------------------------------------

- 2 Use the numeric key to enter the number of rings you want.

- 3 Press **ENTER** to save the setting.

- 4 Press **RESET** to exit.

## Print settings

---

You can set three parameters for printing received fax documents:

- Print reduction rate
- Reduction margin
- Paper save function

You set all three in the same procedure, mentioned on next page.

Each description is as follows:

### Print reduction rate:

Print reduction lets you set the machine to reduce large incoming documents to a size that fits the paper in your machine. (This setting doesn't affect copies you may make with your machine.)

Below are the options for the print reduction rate for fax reception:

Setting	Description
Auto	Automatically reduces printouts at variable rates down to a minimum of 50%. Tries to reduce printout to fit on one sheet of your selected paper size. If it cannot, print the image at 100% size on two or more pages.
100%	Does not reduce documents. (Due to the sender's TTI, this may print two pages when receiving a one-page fax document.)

### Reduction margin:

Your machine's reduction margin is measured in millimeters (mm). We will define reduction margin by explaining how it is used:

When a fax message enters your machine's memory, the machine measures the message's length and compares it to **(a)** the length of your selected paper (not include the print margins) plus **(b)** the reduction margin you set. If the length of the incoming message is shorter than **(a)** plus **(b)**, your machine prints the message on just one sheet.

If it is longer, your machine prints the message on two or more sheets.

An Auto reduction setting and a reduction margin setting of 24 mm will print most incoming faxes as single pages. Try this combination first and then, only if you have problems with it, select different settings.



## Paper save function:

### •Half-page reception

Half-page reception can conserve paper if some of the faxes you receive are half-page, “Memo-sized” messages. When activated, this feature tells the machine to combine two of these half-page receptions onto a single sheet.

Half-page reception only combines half-page messages sent back-to-back during the same transmission. It won't combine two half-page faxes from separate transmissions.

### •Duplex reception

Duplex reception can save paper by duplex printing of the received faxes.

When activated, this feature tells the machine to combine and print the received two pages onto both sides of a single sheet. This feature is available only for the MFX-1330 model with the optional duplex unit installed.

## To adjust the print settings

*Default setting:*

Rx reduction rate: *Auto*, Reduction margin: *40 mm*, Half-page reception: *Off* (Paper save: *Off*).

- 1 Press **MENU**, **2**, **2**, **0**, **2**, **ENTER**.  
The machine shows the current reduction rate for fax reception:

<b>Rx Reduc. Rate :Auto</b> <b>▼/▲/Enter</b>
---

- 2 Press **⏏** or **⏏** to select the reduction rate.
- 3 Press **ENTER** to save the setting.  
The machine shows the current reduction margin:

<b>Margin</b> <b>(00-85) :           40 mm</b>
---

- 4 Use the numeric keys to enter the reduction margin you want.
- 5 Press **ENTER** to save the setting.  
The machine shows the current setting for half-page reception:

<b>Half Page Recpt. :Off</b> <b>▼/▲/Enter</b>
--

**When the optional duplex unit is installed in MFX-1330 model**, the machine shows the current setting for the paper save function.



<b>Paper Save :Off</b> <b>▼/▲/Enter</b>
--

- 6 Press **⏏** or **⏏** to select the paper save function.
- 7 Press **ENTER** to save the setting.
- 8 Press **RESET** to return to the standby mode.

# Advanced receiving functions

The function that are not assigned to the soft key can be selected by using advanced functions key.

To select the fax function using advanced functions key:

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Press **ADVANCED FUNCTIONS**.
- 3 Press  or , or **ADVANCED FUNCTIONS** repeatedly to select the function. Then press **ENTER**.

The table below lists the advanced functions that can be used in fax mode and order of display. Refer to the pages indicated for detail of function.

**NOTE:** You can assign a function that you use frequently in the following table to the soft key to shorten the operation. (See page 8.2.)

Advanced function	Descriptions	Reference
Broadcast	Use this to make a broadcasting.	p. 4.12
Report	Prints the transmit confirmation report for only the next transmission.	p. 11.5
Monitor	Obtains a dial tone to on-hook dialing.	—
Pause/Dial Opt.	Enter the special dialing character.	p. 3.2
Delayed	Use this to make a delayed transmission.	p. 4.13
Batch Tx	Stores a document for batch transmission.	p. 4.14
Select TTI	Choose the TTI to be sent. Also it can cancel TTI sending.	p. 4.17
Cover Page	Whether or not attach the cover page.	p. 4.20
Fax Forward	Enable or cancel the fax forwarding.	p. 5.12
Fax & Copy	Enable or cancel the Fax&Copy.	p. 4.19
Security	Enable or cancel the security reception.	p. 9.3
Separator Page	Enable or cancel the separator page.	p. 5.14
Memory Tx	Enable or cancel the memory Tx.	p. 4.3
Auto Rx	Enable or cancel the auto reception.	p. 5.2
F-Code Tx	Use this to make a F-code transmission.	p. 6.11
F-Code Polling	Use this to make a F-code polling.	p. 6.12
Polling	Use this to make a polling reception.	p. 5.11
Dial Prefix	Enter a “/N” symbol.	p. 4.21
Bypass	Use this to set the paper size on the bypass tray.	p. 2.16
Page Counter	Display total printed and scanned page.	p. 8.8
Energy Save	Enable or cancel the Energy save mode.	p. 1.17
Online	Cancels PC printing.	*
Mode Switch	Switches the machine's mode.	p. 2.2

\* For details of printer settings, refer to the PDF manual on the Printer & Scanner driver CD.

## Block Junk Fax

Your machine's Block Junk Fax feature lets you bar the gates against unauthorized incoming faxes ("Junk fax"). But before you block junk fax, first understand how this feature works, to determine if it is right for you.

There are four possible settings for Block Junk Fax:

- **Off** — The feature is not activated.
- **Mode1** — Your machine checks whether the last four digits of any phone number in your autodialer matches the last four digits of the remote fax's phone number. If it does not find a match, your machine disconnects the call.
- **Mode2** — This mode rejects any call from a number whose last eight digits match any number in the blocked numbers list. Your machine can hold up to 50 blocked numbers.
- **Mode3** — This mode rejects numbers that are not in the autodialer and also rejects numbers that are in the blocked numbers list. This mode lets you keep a number on your autodialer for transmission to it, while still blocking its incoming calls by putting it in the blocked numbers list.

But before you activate the Block Junk Fax feature, please consider:

- *Not all fax machine owners enter their phone numbers in their machine.* — With Block Junk Fax activated, your machine would reject faxes from these machines.
- *Access codes can cause confusion.* — If an autodialer entry ends with extra codes, such as long-distance codes, Block Junk Fax will block out calls from those faxes.

### To set the mode for Block Junk Fax:

- 1 Press **MENU, 2, 2, 1, 0, ENTER**. The machine shows the current setting:

Block Junk Fax:Off  
▼/▲/Enter

- 2 Press  or  until the mode you want appears.



- 3 Press **ENTER** to save the setting.



What you do next depends on what you selected in step 1:

- If you selected "Off" or "Mode1", press **RESET** to return to standby mode.
- If you selected either "Mode2" or "Mode3", go on to step 4.

- 4 The machine shows:

Select BlockJunk No.  
01:

- 5 Press  or  until you find an empty position in the list, then press **ENTER**.



If you want to modify an existing entry in the blocked numbers list, press  or  until you see the number you want to modify, then press **ENTER**.

To clear a number from the list, see "Erasing a number from the blocked numbers list," next page.

- 6 Use the numeric keys to enter the last eight-digit number of a fax number you want to block. You can reject the fax reception by minimum entering the last four-digit number of a fax number, but we recommend entering the last eight-digit number maximum to more specify the fax number you want to block.

For example, if you want to block a fax from someone with a number of 123-456-7890, you should enter 4, 5, 6, 7, 8, 9, 0:

01:Enter Fax Number  
4567890\_

To change a specific digit, press  to move left or  to move right until the cursor is under the digit, then use the numeric key to enter the correct number.

- 7 Press ENTER to save the setting.
- 8 If you do want to enter other number, repeat procedures from step 5.  
To exit, press RESET.

### ***Erasing a number from the blocked numbers list***



To clear a number from the list:

- 1 Press MENU, 2, 2, 1, 0, ENTER.

**Block Junk Fax:Mode2**  
▼/▲/Enter

- 2 Press ENTER.

**Select BlockJunk No.**  
01:5553038\_

- 3 Press  or  until you see the number you want to clear.

- 4 Press CANCEL.

**01:Erase Junk Fax**  
Yes → Enter

**01:Erase Junk Dial**  
No → Cancel

- 5 Press ENTER to erase the number. If you want to cancel the erasing, press CANCEL.
- 6 To clear another number, repeat procedures from step 3.
- 7 Press RESET to return your machine to standby mode.

### ***Printing a list of the blocked numbers:***

To print a list of the blocked numbers, press MENU, 5, 1, 1, 0, ENTER.

## Polling receiving



Polling allows someone to fax a document to you without having to make the call or pay for it. There are two kinds of polling:

- Regular polling — Your machine retrieves a document from a remote fax machine.
- F-Code polling — Your machine retrieves a document stored in a F-code boxes of the remote fax machine. To do this, you must be communicating with another F-code-compatible machine. For more information of the F-code communication, see “Using F-code box features,” page 6.1.

**NOTE:** For polling to work, the remote machine must also be set up to be polled.

### Regular polling

To set up your machine for regular polling:

- 1 Make sure the document is inserted in the remote fax machine.
- 2 Press **ADVANCED FUNCTIONS** until “**Polling**” appears on the LCD then press **ENTER**. Use  or  to select “On”.

<b>Polling</b> : On ▼/▲/Enter
----------------------------------

– or –

Press the soft key to which “**Polling**” is assigned.

- 3 Enter the remote fax machine’s number.

<b>Enter Fax Number</b> _
------------------------------

- 4 To perform the regular polling now, skip to step 7.  
To perform delayed regular polling, go on to step 5.
- 5 Press **ADVANCED FUNCTIONS** until “**Delayed**” appears on the LCD then press **ENTER**.

<b>Delayed</b> <b>Enter Time:</b> <u>15</u> ,17:05
---

- 6 Use the numeric keys to enter the date and time (use the 24-hour format) when your machine should perform the delayed regular polling. Then press **ENTER**.
- 7 Press **START**.

When your machine polls for documents, it dials the number and, upon making contact with the other machine, begins receiving the document as if the other machine had placed the call.

## Fax forwarding

---

This feature tells the machine to forward the received document automatically to the other fax machine. You can set the time period for the machine continue this process.

- NOTE:**
- Fax forwarding will not forward a polling reception and F-code reception documents.
  - Fax forwarding is not available with the “Tel Ready” reception mode.
- 

### *Turning the fax forwarding ON or OFF*



---

**NOTE:** To turn on the Fax forwarding, you must create at least one transfer rule.

---

- 1 Press **MENU, 3, 6, 1, ENTER**.  
– or –  
Press **ADVANCED FUNCTIONS** until “**Fax Forward**” appears on the LCD then press **ENTER**.

**Fax Forward :Off**  
**▼/▲/Enter**

- 2 Press  or  to select on or off.  
To activate the fax forwarding, select “On”.
- 3 Press **ENTER**.

### *Create or modify the transfer rule*

You can make up to 10 transfer rules.

- 1 Press **MENU, 3, 6, 2, ENTER**.



**Select Fax Forward #**  
**01:No Number Stored**

- 2 If you set up a transfer rule at your first time, skip to step 4.  
If you have already set up any transfer rules, proceed to step 3.
- 3 Select the number of the transfer rule you want to create or modify, then press **ENTER**.

**01:Forwarding Number**  
—

- 4 Enter the fax number for the remote fax machine to which you want documents to be transferred. Use either a one-touch number, a speed-dial number, a call group or regular number dialed from the numeric keys.
- 5 To add more fax numbers, enter the number as described in step 4. You can specify up to 201 numbers for transferring.

**01:Forwarding Number**  
**[01],S002,G12,1234\_**

- By using the numeric keys, you can enter only one destination.
  - If you want to erase an existing number, press  or  to move the cursor, then press **CANCEL** to erase the number.
- 6 Press **ENTER**.

**Fax Forward :On**  
**▼/▲/Enter**

- 
- 01:Enter Time
- \* \*\*:\*\*\*- \* \*\*:\*
- Start transferring day
- Start transferring time
- End transferring day
- End transferring time

- 10** Press **ENTER**.

Auto Print : Off  
▼/▲/Enter

**On:** A copy of every document received and transferred is printed at your machine.

**Off:** Received and transferred documents are not printed at your machine.

**NOTE:** If the security reception (page 9.3) feature is activating, the machine dose not print received document even if this setting is on.

- 11** Press **ENTER**.
- To create or modify another transfer rule, repeat the procedure from step 3.
- To finish, press **RESET**.

### *Erasing a transfer rule*

- 1** Press **MENU**, **3**, **6**, **3**, **ENTER**.

Select Fax Forward #  
01:1234

- 2** Select the number of the transfer rule you want to erase, then press **ENTER**.

01:Erase Fax Forward Yes → Enter	01:Erase Fax Forward No → Cancel
-------------------------------------	-------------------------------------

- 3** Press **ENTER** to erase the rule.
- 4** To erase another transfer rule, repeat procedure from step 2.  
To return to the standby mode, press **RESET**.

**NOTE:** To print a list of transfer rules, press **MENU**, **5**, **1**, **1**, **7**, **ENTER**. (See page 11.3.)

## Separator page



---

The separator page function can separate each received document by inserting the blank paper on the top of the received document. For example, if you use the colored paper for the separator page, it is easy to see the individual received document.

### Setting the Separator page

- 1 Press **MENU**, **2**, **2**, **1**, **2**, **ENTER**.

Separator Page :Off  
▼/▲/Enter

- 2 Press  or  to select the mode you want.  
To turn the Separator page on, select “On” and proceed to step 3.  
To turn it off, select “Off” and skip to step 6.

- 3 Press **ENTER**.

1st Cassette  
▼/▲/Enter

---

**NOTE:** The paper source which has not been attached to your machine will be not displayed on the LCD.

---

- 4 To select the paper source for the separator page using the cursor key.

- 5 Press **ENTER**.


Print on S. Page :Off  
▼/▲/Enter

Determine if the separator page will be printed blank or not.


If you wish that the separator page will be printed blank, select “Off”.

If you wish to print the first page of the received documents on the separator page, select “On”.

Separator page separates each received document.

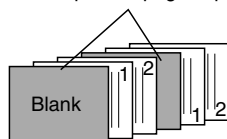

Print on the separator page: OFF

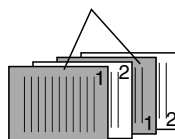

Print on the separator page: ON

- 6 Press **ENTER** to save the settings.

To return to the standby mode, press **RESET**.

---

**NOTE:** After setting, you can turn on or off by pressing **ADVANCED FUNCTIONS** until “**Separator Page**” appears on the LCD and press **ENTER**. Then select on or off and press **ENTER**.  
– or –

If you assigned “**Separator Page**” to the soft key (page 8.2), you can turn the Separator page function on or off by simply pressing that key.

---



# Chapter

# 6

## Using F-code box features

---

F-code: an introduction .....	6.2
Creating or modifying a F-code box.....	6.2
Printing a list of F-code boxes .....	6.7
Printing a list of documents stored in your F-code boxes .....	6.7
Erasing an empty F-code box .....	6.7
Storing a document in a bulletin box for being polled .....	6.8
Printing a document stored in a bulletin box .....	6.9
Erasing a document stored in a bulletin box .....	6.9
Printing a document you received in the security box .....	6.10
Sending a document with a subaddress and password.....	6.11
Polling a document with a subaddress and password.....	6.12

## F-code: an introduction

---

The ITU-T, the United Nations agency that standardizes international telecommunications, has created a fax industry standard for using subaddressing and password-based communication.

With subaddressing, your machine can send secure transmissions, polling documents, and even perform relay broadcast initiations regardless of manufacturer.

One name for the subaddressing is F-code, and that's what we will call it in these instructions and on your machine's LCD.

### *Guidelines for using F-code*

- (1) Before creating a F-code box, you must know the remote fax machine is compatible with the ITU-T subaddressing and they are using this feature.
- (2) To permit the other party send or polling the documents from your F-code boxes, you must create F-code box in your machine and the other party must know your F-code box's subaddress and password.
- (3) To send or polling the document to remote fax machine's F-code boxes, you have to know their subaddress and password.

## Creating or modifying a F-code box

---

The elements of the creating a F-code box are as follows:



<b>Box Number</b>	Enter a two-digit number (01-20) of the F-code box you want to create. (Up to 20 F-code boxes can be created.)
<b>Box Name</b>	You can assign an identifier name for the F-code box. (A name can be up to 16 characters in length.)
<b>Sub-address</b>	<p>This is the ITU-T subaddress need to perform the F-code fax transaction. (A subaddress and password can be up to 20 digits in length and consists of numbers, *, or #.)</p> <p>Only when the subaddress and password (if you set) that is sent from remote fax machine are matched with your F-code box's subaddress (and password), the remote fax machine can use your F-code box's feature.</p>
<b>Password</b>	<p>This is a password for ITU-T subaddressing.</p> <p>Assigning a password is optional, but using a password will make your F-code communication much more secure.</p>
<b>Box feature</b>	<p>You can set up the F-code box as a bulletin box, a security reception box or a relay transmission box.</p> <ul style="list-style-type: none"><li>• <b>Bulletin box</b> — Holds scanned or received documents and wait for a polling request from another F-code compatible fax machine.</li><li>• <b>Security box</b> — The received documents in the security box are held in specified days you have set and they are not printed automatically. You will need to enter the I.D. code to print them.</li><li>• <b>Relay box</b> — The received documents are relayed to other destinations. If you set the Auto print mode to on, your machine also print them.</li></ul>
<b>I.D. code</b>	This is a 4-digit I.D. code protects the F-code box settings from unauthorized access. Assigning the I.D. code is optional for a bulletin box and a relay box, but required for the security box.

## Creating or modifying a F-code box:

**NOTE:** If you want to change an existing F-code box type, you first must erase the old box, then create a new one.

- 1 Press **MENU, 3, 4, 1, ENTER.**

Select F-Code Box  
01:No Number Stored

- 2 Press  or  to select the F-code box. Then press **ENTER.**  
What you do next depends on whether you are creating or modifying the F-code box:
  - If creating — skip to step 4.
  - If modifying — go to the next step.

- 3 Use the numeric keys to enter the 4-digit I.D. code and press **ENTER.**  
(If you have not set the I.D. code for operation protect, you can skip this step.)



01:Set F-Code Box  
Enter I.D. Code:\*\*\*\*

- 4 The machine is now asking you a name for this F-code box.

01:Box Name;Upper  
—

Enter or modify a name by using the numeric keys.  
An F-code box's name can be stored up to 16 characters.


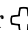
(Regarding how to enter the character, see “Entering character” on page 2.2.)

To change a name, press  or  to move the cursor, press **CANCEL** to erase a name.  
Then re-enter a correct name.

- 5 Press **ENTER.**

01:Sub-Address No.  
—

You must enter the ITU-T sub-address for the F-code box. This is the numerical identifier you must enter in order to communicate with any remote F-code compatible fax. The same subaddress cannot be set to other F-code box.

- 6 Use the numeric keys to enter a sub-address.  
The sub-address can be up to 20 characters in length and include any combination of numbers and the **\*** and **#** characters (but no other non-numeric characters).  
To change a number, press  or  to move the cursor, press **CANCEL** to erase it. Then re-enter the number correctly.

- 7 Press **ENTER.**

01:Password  
—

This is the password for ITU-T-compatible F-code fax transactions.  
You don't need to have a password for the F-code box. However, using a password will make your F-code communication much more secure.

If you do not want to enter ITU-T password, skip to step 9.

- 8 Use the numeric keys to enter the ITU-T-compatible password for this box. This password can be up to 20 characters in length and include any combination of numbers and the \* and # characters (but no other non-numerical characters).

To change a number, press  $\leftarrow$  or  $\rightarrow$  to move the cursor, press CANCEL to erase it. Then re-enter the number correctly.

- 9 Press ENTER.

Box Type	:Bulletin
	▼/▲/Enter

- 10 Press  $\leftarrow$  or  $\rightarrow$  to select the box type, then press ENTER.

If you chose “**Bulletin**,” go on to step 11.

If you chose “**Relay**,” skip to step 13.

If you chose “**Security**,” skip to step 19.

### *If you setup a Bulletin box:*

- 11 The bulletin box has the following settings:

- **Rx Protect** — Determines whether or not the document is received in the bulletin box.

Rx Protect	:Off
	▼/▲/Enter

**On** (Rx protection is on): Documents are **not** received in the box.

**Off** (Rx protection is off): Document are received in the bulletin box and you can set the two additional settings — “Auto print” and “Overwrite Doc.” below.

Press  $\leftarrow$  or  $\rightarrow$  to select on or off, then press ENTER.  
Go on to the next one.

- **Auto Print** — Determines whether to print a received document.

This setting appears only when the “Rx protect” is set to off.

Auto Print	:Off
	▼/▲/Enter

**On:** A document will be printed automatically when it is received in the bulletin box.

**Off:** Received documents are not printed. You will have to print them manually.  
(See page 6.9.)

Press  $\leftarrow$  or  $\rightarrow$  to select on or off, then press ENTER.  
Go on to the next one.



- **Overwrite Doc** — Determines whether to overwrite existing (erase) the documents when the box receives a new one.

This setting appears only when the “Rx protect” is set to off.

Overwrite Doc.	:Off
	▼/▲/Enter

**On:** The currently stored documents in the box will be replaced with a new received document.

**Off:** A received document will be added in the box. Up to 30 documents (each document can include one or more pages) can be stored in each box.



Press  or  to select on or off, then press ENTER.  
Go on to the next one.

- **Erase Tx Doc** — Determines whether to erase a document from the box after it is sent to a polling request.

<b>Erase Tx Doc.</b>	<b>:Off</b>
<b>▼/▲/Enter</b>	

**On:** Your machine erases the document from the box as soon as it sends it. If you choose “On”, this box can be polled only once per document.

**Off:** Your machine does not erase a document from the box when it is polled. As long as your machine holds AC power and you do not erase the document from the box, the document is available indefinitely for polling.

Press  or  to select on or off, then press ENTER.

- 12** Go on to step 22.

### *If you setup a Relay box:*

- 13** The machine asks the fax number where it relays the received documents.

<b>Enter Relay Number</b>
—

- 14** Press the one-touch key or press the **SPEED DIAL/TEL INDEX** followed by the three-digit identifier to enter the fax number. You cannot use the numeric keys to enter these numbers.

To add each fax number, press a soft key which assigned “**BROADCAST**” between each one. You can specify up to 200 numbers. For detail of the soft key, see page 8.2.

- 15** Press ENTER.

<b>Select TTI</b>	<b>:Sender</b>
<b>▼/▲/Enter</b>	

The machine asks the TTI you want to appear on the top line of faxes relayed to other destinations.



- **Sender** — Relay the document with originator’s TTI.
- **Both** — Relay the document with both the originator’s TTI and your TTI.
- **Yours** — Relay the document with your TTI instead of the originator’s TTI.

- 16** Press  or  to select TTI. Then press ENTER.

<b>Auto Print</b>	<b>:Off</b>
<b>▼/▲/Enter</b>	

**On:** A document will be printed automatically when it is received in the box.

**Off:** Received documents are not printed, only relayed to other destinations.

- 17** Press  or  to select on or off, then press ENTER.

- 18** Go on to step 22.

### *If you setup a Security box:*

- 19** The machine asks how long you want to keep a document stored in your machine's F-code security box.

<b>F-Code Doc Hold Time</b> <b>(00-31)            00 days</b>
--

- 20** Use the numeric keys to enter a two-digit number indicating how many days (01-31), you want your machine to keep received documents in this security box.

Your machine can store incoming documents in security boxes (up to 30 documents) as long as 31 days, after which it automatically erases the documents. But if your machine has plenty of memory, you may want to override the 31-day limit in order to keep the documents indefinitely. If so, enter **00**. If you choose this, you will have to delete documents manually.

- 21** Press **ENTER**.

- 22** The machine asks for your F-code box's four-digit security I.D. code.

<b>01:Set F-Code Box</b> <b>Enter I.D. Code: 0000</b>
--

This is the I.D. code protects the F-code box setting from unauthorized access. After you enter it, you will have to enter this I.D. code to access the F-code box next time.

If you are using the bulletin box or relay box, assigning an I.D. code is optional. However, if you are using the security box, an I.D. code is required to print the received document.

**Do not forget your I.D. code.**

- 23** Use the numeric keys to enter the four-digit I.D. code. (0001-9999)  
Then press **ENTER**.

Cannot use "0000" for the I.D. code. This number is used for canceling the I.D. code for bulletin box or relay box.

- 24** To create or modify another F-code box, repeat procedures from step 3.  
To finish, press **RESET**.

## Printing a list of F-code boxes

---

To print a list of your F-code boxes, press MENU, **5, 1, 1, 3**, ENTER.

## Printing a list of documents stored in your F-code boxes

---

To print a list of documents stored in F-code boxes, press MENU, **5, 1, 1, 4**, ENTER.

## Erasing an empty F-code box



---

An F-code box must be empty in order to erase it. (If you select an F-code box in these steps which is not empty, the machine beeps. If this happens, print all documents in that box before erasing it.)

To erase an empty F-code box:

- 1 Press MENU, **3, 4, 2**, ENTER.

Select F-Code Box  
01:Bulletin box 1

- 2 Press  or  to select the F-code box you want to erase. Then press ENTER.

03:Erase F-Code Box  
Enter I.D. Code:\*\*\*\*

- 3 Use the numeric keys to enter the four-digit I.D. code.  
(If you have not set the I.D. code for operation protect, you can skip this step.)

- 4 Press ENTER.  
The following two displays will appear alternately:

01:Erase F-Code Box  
Yes → Enter

01:Erase F-Code Box  
No → Cancel

- 5 Press ENTER to erase the F-code box.  
If you want to cancel the erasing this box, press CANCEL and go back to step 2.
- 6 Press RESET to return to the standby mode.



## Storing a document in a bulletin box for being polled

---

In each bulletin box can hold up to 30 documents.

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Place a document on the ADF or document glass and make any necessary adjustments.
- 3 Press **MENU, 4, 1, 2, ENTER**.

Select F-Code Box  
01:Bulletin box 1

- 4 Press  or  to select the bulletin box. Then press **ENTER**.

01:F-Code Document  
Enter I.D. Code:\*\*\*\*

(If the I.D. code is not set for this box, you can skip to step 6.)

- 5 Use the numeric keys to enter the four-digit I.D. code.
- 6 Press **ENTER**.

Overwrite Doc. :Off  
▼/▲/Enter

**On:** The currently stored documents in the box will be replaced with a new scanned document.

**Off:** A scanned document will be added in the box. Up to 30 documents (each document can include one or more pages) can be stored in each box.

- 7 Press  or  to select on or off.

- 8 Press **ENTER**.

- 9 If you have set the document on the document glass, select document size and press **ENTER**. If you are using the ADF, skip to next step.

Scan Size :Ltr  
▼/▲/Enter

- 10 Your machine starts scanning the document into the bulletin box.

F-Code Doc. File: 1  
Ltr Mem 99%

The file number (shown above as 1) tells you how many documents are in the bulletin box. You need to know the file's number to erase or print it.

---

**NOTE:** The document glass is available only for MFX-1330 model.

---





## Printing a document stored in a bulletin box

1 Switch to the Fax mode by pressing COPY ▶ FAX ▶ SCAN.

2 Press MENU, 4, 3, 2, ENTER.

Select F-Code Box  
01:Bulletin box 1

3 Press  or  to select the bulletin box. Then press ENTER.



01:F-Code Document  
Enter I.D. Code:\*\*\*\*

(If the I.D. code is not set for this box, you can skip to step 5.)

4 Use the numeric keys to enter your F-code box's four-digit I.D. code.

5 Press ENTER.

01:Select File No.  
00:All Documents

6 Press  or  to select the file number (1-30) of the document you want to print.  
If you want to print all documents stored in the bulletin box, enter 0 (zero).

7 Press ENTER.



Your machine prints the chosen document, then returns to the standby mode.

## Erasing a document stored in a bulletin box

1 Switch to the Fax mode by pressing COPY ▶ FAX ▶ SCAN.

2 Press MENU, 4, 2, 2, ENTER.

Select F-Code Box  
01:Bulletin box 1

3 Press  or  to select the bulletin box. Then press ENTER.



01:F-Code Document  
Enter I.D. Code:\*\*\*\*

(If the I.D. Code is not set for this box, you can skip to step 5.)

4 Use the numeric keys to enter your F-code box's four-digit I.D. code.

5 Press ENTER.

01:Select File No.  
00:All Documents

6 Press  or  to select the file number (1-30) of the document you want to erase.  
If you want to erase all documents stored in the bulletin box, enter 0 (zero).

7 Press ENTER. The following two displays will appear alternately:

01:F-Code Document  
Erase → Enter

01:F-Code Document  
Not Erase → Cancel

8 Press ENTER to erase the document and to return to the standby mode.  
Press CANCEL to quit without erasing and to return to the standby mode.

## Printing a document you received in the security box

---

When your machine receives a document via ITU-T subaddressing to an F-code security box, your machine prints a message to let you know.

The message lists: (1) the F-code box number that received the document, (2) the Box name, (3) the remote machine's name (if any), and (4) the file numbers stored in the F-code box.



You then have a certain number of days (see steps 19 to 21 on page 6.6) in which to print out the document before your machine automatically erases it.

To print a received documents:

**1** Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.

**2** Press **MENU, 4, 3, 2, ENTER**.

**Select F-Code Box**  
**01:Security box**

**3** Press  or  to select the security box. Then press **ENTER**.

**01:F-Code Document**  
**Enter I.D. Code:\*\*\*\***

**4** Use the numeric keys to enter your security box's four-digit I.D. code.

**5** Press **ENTER**.

Your machine prints all documents in the F-code security box and then erases them.

- If there is no documents in the security box, the machine briefly displays the “No Document Stored” message on the LCD before returning to step 2.
- If you have entered an incorrect I.D. code, your machine aborts the operation and returns to the standby mode.

## Sending a document with a subaddress and password

---

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Place the document on the ADF or document glass.  
Adjust the document mode and contrast if necessary.
- 3 Press **ADVANCED FUNCTIONS** until **"F-Code Tx"** appears on the LCD then press **ENTER**.

**F-Code Tx**  
▼/▲/Enter

– or –

Press the soft key which assigned **"F-Code Tx"**.

**Enter Sub-Address**  
—

- 4 Use the numeric keys to enter the appropriate ITU-T subaddress.  
Then press **ENTER**.

**Enter Password**  
—

The password setting is optional, but required if the other party has set a password on their F-code box.

- 5 Use the numeric keys to enter the ITU-T password.  
Then press **ENTER**.

If you do not need to enter ITU-T password, press **ENTER** without entering any number.

**Enter Fax Number**  
—

- 6 Enter the fax number.  
You may use a one-touch key, speed-dial number or the numeric keys to enter the fax number.
- 7 Press **START**. Your machine begins scanning the document.

**== Command:01 ==**

Then, your machine dials and sends the document with the subaddress and password.

To cancel the sending in progress, press **FAX CANCEL** and **CANCEL, CANCEL**.

To cancel the delayed sending, press **FAX CANCEL**, search the command number you want to cancel using the cursor key, then press **CANCEL, CANCEL**. (See also "Reviewing or canceling command" on page 4.8.)

---

**NOTE:**

- The document glass is available only for MFX-1330 model.
- If you frequently dial the same destination with subaddress (and password), use the macro key at your convenience. For details of the macro key, see page 8.4.

---

## Polling a document with a subaddress and password

---

- 1 Switch to the Fax mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Press **ADVANCED FUNCTIONS** until “**F-Code Polling**” appears on the LCD then press **ENTER**.

**F-Code Polling**  
▼/▲/Enter

– or –

Press the soft key which assigned “**F-Code Polling**”.

**Enter Sub-Address**  
—

- 3 Use the numeric keys to enter the appropriate ITU-T subaddress.  
Then press **ENTER**.

**Enter Password**  
—

The password setting is optional, but required if the other party has set a password on their F-code box.

- 4 Use the numeric keys to enter the ITU-T password.  
Then press **ENTER**.

If you do not need to enter ITU-T password, press **ENTER** without entering any number.

**Enter Fax Number**  
—

- 5 Enter the fax number.  
You may use a one-touch key, speed-dial number or the numeric keys to enter the fax number.
- 6 Press **START**.

**== Command:01 ==**

Your machine dials the number and polling the document from the remote F-code compatible machine.

To cancel the polling in progress, press **FAX CANCEL** and **CANCEL, CANCEL**.

To cancel the delayed polling, press **FAX CANCEL**, search the command number you want to cancel using the cursor key, then press **CANCEL, CANCEL**. (See also “Reviewing or canceling command,” on page 4.8.)

# Chapter

# 7

## Copying

---

Before copying .....	7.2
Document and paper handling .....	7.2
Changing your machine to the Copy mode .....	7.2
Display in the copy standby mode .....	7.2
Memory overflow message .....	7.2
Making copies.....	7.3
Making copies using the ADF .....	7.3
Making copies using the Document glass .....	7.3
Basic copy settings .....	7.4
Selecting document type .....	7.4
Scanning contrast.....	7.4
Zoom ratio.....	7.4
Number of copies .....	7.5
Sorting copies .....	7.5
Selecting paper size.....	7.5
Selecting document size .....	7.6
Advanced copy functions .....	7.7
Combine .....	7.8
Duplex copy .....	7.9
Copy resolution.....	7.10

# Before copying


## Document and paper handling

---

Before you begin making copies, please read the information of the document and paper handling mentioned on pages 2.10 to 2.16.

## Changing your machine to the Copy mode

---

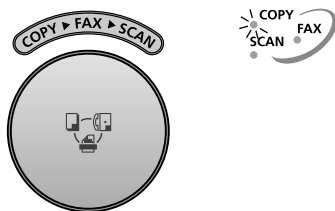


Press the COPY > FAX > SCAN key until COPY light glow.

## Display in the copy standby mode

---

Press COPY > FAX > SCAN to change the machine to the copy mode.  
(For MFX-1330 model, Copy mode is the default standby mode.)  
When the machine is in the Copy mode, the machine shows:

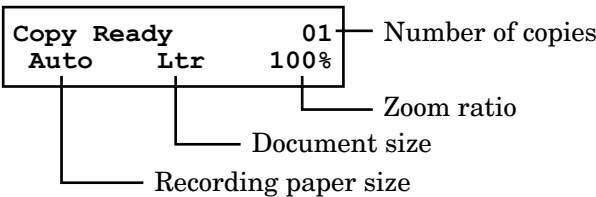

To change the settings, refer “Basic copy settings” on page 7.4.

## Memory overflow message

---

If you have stored too much information in your machine’s memory, a “Memory Overflow” message will appear on the LCD:



This appears because (1) too many pages have been stored in the memory, **or** (2) the stored pages have too much information for your machine to remember.

If this message appears, press **START** to tell your machine to copy as many pages in memory, or press **CANCEL** to delete from memory all pages stored during the current operation (but not previous operations).

---

**NOTE:** If you do not operate your machine within 3 minutes, the machine will automatically print the document stored in the memory during the current operation.

---

# Making copies

## Making copies using the ADF

---

- 1 Switch the machine to copy mode by pressing **COPY ▶ FAX ▶ SCAN**.

Copy Ready	01
Auto Ltr	100%

- 2 Place your document **face up** on the ADF and adjust document guides to the document size.
- 3 As needed, set the copy settings including the document type and scanning contrast, number of copies, zoom ratio and sort setting. See “Basic copy settings” on page 7.4.  
To clear the settings, press **RESET**.
- 4 Press **START** to begin copying.  
To stop copying, press **STOP**.


## Making copies using the Document glass

---

The document glass is available only for MFX-1330 model.

- 1 Switch the machine to copy mode by pressing **COPY ▶ FAX ▶ SCAN**.

Copy Ready	01
Auto Ltr	100%

- 2 Make sure that there is no document on the ADF. If a document is on the ADF, it takes priority over the document on the document glass.
- 3 Place your document **face down** on the document glass and align it to the left upper corner. Then close the platen cover.
- 4 Press **DOC. SIZE** to select the document size, Letter, Half-letter  or Legal.
- 5 As needed, set the copy settings including the document type and scanning contrast, number of copies, zoom ratio and sort setting. See “Basic copy settings” on page 7.4.  
To clear the settings, press **RESET**.
- 6 Press **START** to begin copying.  
To stop copying, press **STOP**.

# Basic copy settings

 
## Selecting document type



---

- **Text** — Select this when copying letters.
- **Photo/Text** — Select this when copying documents containing photographs or drawings with letters.
- **Photo** — Select this when copying photographs or drawings.

To select the document type:

- 1 Press **DOC.RESOLUTION**.



- 2 Press  or  to select the document type.

## Scanning contrast


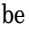
---

Setting the scanning contrast allows you to adjust the excessive lightness or darkness of document pages you are copying.

To change the contrast setting:

- 1 Press **CONTRAST**.



- 2 Press  to be light, press  to be dark, or press **CONTRAST** repeatedly to select the contrast.

To avoid confusing the Light and Dark settings, just remember — “Light lightens” and “Dark darkens” — to keep it straight.

## Zoom ratio



---

There are three ways to enter the zoom ratio below.

**NOTE:** For enlargement copy, you can only use the document glass. The document glass is available only for MFX-1330 model.

---

### Using preset ratios

Press  or  to select the following preset ratio.

- 50%: Min.
- 64%: Letter (8.5" × 11") → Half-letter (5.5" × 8.5")
- 78%: Legal (8.5" × 14") → Letter (8.5" × 11")
- 100%
- 129%: Half-letter (5.5" × 8.5") → Letter (8.5" × 11")
- 200%: Max.



Adjusting the ratio in 1% steps

- 1 Press ADVANCED FUNCTIONS until “Zoom” appears and press ENTER.  
– or –  
Press the soft key (page 8.2) to which “Zoom” is assigned.
- 2 Adjust the ratio by using ⏏ or ⏏.  
(25 to 400% for the document glass, 25 to 100% for the ADF.)

Directly enter the ratio

- 1 Press #.
- 2 Use the numeric keys to enter your desired ratio.  
(25 to 400% for the document glass, 25 to 100% for the ADF.)
- 3 Press # again.

Number of copies

You can make up to 99 copies.  
Use the numeric keys to enter the desired number of copies (01-99).

Sorting copies

**NOTE:** You can use only the ADF for sorting copy.

- The copies can be assembled as sets in sequential order.
- To make the sorting copy available  
For MFX-1330 model — Press SORT COPY. The light of SORT COPY will illuminate, which means the sorting copy is turned on.  
For F-300 model — Press ADVANCED FUNCTIONS once and press ENTER. And turn on “Sort Copy” using the cursor key and press ENTER.
  - To turn off the sorting copy  
For MFX-1330 model — Press SORT COPY again to light off the LED.  
For F-300 model — Press ADVANCED FUNCTIONS again and press ENTER. And turn off “Sort Copy” using the cursor key.

Selecting paper size

As default, your machine selects the paper size automatically.  
The machine will show “Auto” for paper size when you set the paper both in the paper cassette and bypass tray or the optional second paper cassette. And the light of available paper source will be lit.

Copy Ready	01
Auto Ltr	100%

However, if the bypass tray has no paper or the optional 2nd paper cassette has not been installed, the machine will show the “[Paper size]” instead of “Auto”.

Copy Ready	01
[Ltr ] Ltr	100%


Also, you can select the paper source manually by pressing **PAPER SIZE /NEXT DOC.**.  
The LCD toggles the paper size in the 1st cassette, in the 2nd cassette (if installed) and on the bypass tray.


Copy Ready	01
Auto Ltr	100%
Ltr [Ltr ]	100%
Legl [Legl ]	100%
None Ltr	100%

If the bypass tray has no paper, the machine shows **“None”** for the paper size of the bypass tray.

## Selecting document size

---

When using the document glass, select the document size by pressing **DOC. SIZE** repeatedly until your desired document size appears. You can choose the Letter, Half-letter  or Legal:

Copy Ready	01
Auto Ltr	100%
Auto Legl	100%
Auto HLtr 	100%

- NOTE:**
- The document glass is available only for MFX-1330 model.
  - When the document size selection is set to “Auto” (see “Copy Auto” of “Copy settings” on page 10.6), you cannot select the document size by pressing **DOC. SIZE**. In this mode, the machine will set the document size automatically according to the paper size and zoom settings.

Copy Ready	01
Ltr [Ltr ]	100%



[*(Document size)*] means the machine automatically sets the document size.

---

# Advanced copy functions

The function that are not assigned to the soft key can be selected by using advanced functions key.

To select the copy function using advanced functions key:

- 1 Switch to the copy mode by pressing **COPY ▶ FAX ▶ SCAN**.
- 2 Press **ADVANCED FUNCTIONS**.
- 3 Press  or , or **ADVANCED FUNCTIONS** repeatedly to select the function. Then press **ENTER**.

The table below lists the advanced functions that can be used in copy mode and order of display. Refer to the pages indicated for detail of function.

**NOTE:** You can assign a function that you use frequently in the following table to the soft key to shorten the operation. (See page 8.2.)

For MFX-1330 model

Advanced function	Descriptions	Reference Page
Zoom	Adjusts a zoom ratio in 1% steps.	7.4
Duplex Copy <sup>*1</sup>	Enable or cancel the duplex copy.	7.9
Page Counter	Display total printed and scanned page.	8.8
Energy Save	Enable or cancel the energy save mode.	1.17
Online	Cancels PC printing.	*2
Mode switch	Switches the machine's mode.	2.2

\*1 Appears only when the optional duplex unit is installed in MFX-1330 model.

\*2 For details of PC printing, refer to the PDF manual on the Printer & Scanner driver CD.

For F-300 model


Advanced function	Descriptions	Reference Page
Sort Copy	Enable or cancel the sort copy.	7.5
Combine	Enable or cancel the combine copy.	7.8
Zoom	Adjusts a zoom ratio in 1% steps.	7.4
Bypass	Selects the paper size in the bypass tray	2.16
Page Counter	Display total printed and scanned page.	8.8
Energy Save	Enable or cancel the energy save mode.	1.17
Online	Cancels PC printing.	*
Mode Switch	Switches the machine's mode.	2.2

\* For details of PC printing, refer to the PDF manual on the Printer & Scanner driver CD.

## Combine

---

This feature allows you to copy from two one-sided document to one sheet of Letter-sized paper.

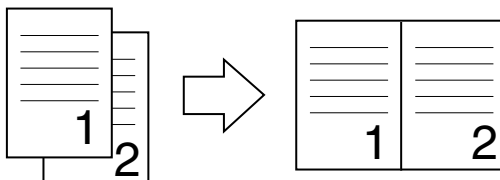

- 1 Make sure the machine is in the Copy mode.
- 2 Place your document on the ADF face up or on the document glass face down.
- 3 To make the combine copy available  
For MFX-1330 model — Press **COMBINE**. The light of **COMBINE** will illuminate, which means the combine key is turned on.  
For F-300 model — Press **ADVANCED FUNCTIONS** repeatedly until “**Combine**” appears, then press **ENTER**. And turn on “**Combine**” using the cursor key and press **ENTER**.
- 4 As needed, set the followings. (See “Basic copy settings” on page 7.4.)
  - Document type and scanning contrast
  - Number of copies
  - Zoom ratio (25 to 400% for the document glass, 25 to 100% for the ADF.)To reset the copy parameter to default setting, press **RESET**.
- 5 Press **START**.  
To stop the copying, press **STOP**.

---

**NOTE:** The document glass is available only for MFX-1330 model.


---

## Duplex copy

---

This feature can be used when the optional duplex unit is installed in MFX-1330 model.

### *Duplex copying of one-sided document*

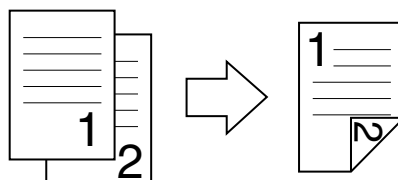

- 1** Make sure the machine is in the Copy mode.
- 2** Place your document on the ADF face up or on the document glass face down.
- 3** Press **ADVANCED FUNCTIONS** until “**Duplex Copy**” appears and press **ENTER**. Choose one from the followings and press **ENTER**.  
– or –  
Press the soft key (page 8.2) to which “**Duplex Copy**” is assigned and choose one from the followings.  
Off: Cancel the duplex copy.  
L&R: Binding the duplex copy on the left side or on the right side.  
Top: Binding the duplex copy on the top.
- 4** Press **START**.  
To stop copying, press **STOP**.

## Copy resolution

---

It offers the highest copy quality available. However, this feature also requires more memory than the normal copy resolution. If you try to copy many pages at a time, memory overflow may occur.

- 1 Make sure the machine is in the Copy mode.
- 2 Place your document in ADF face up, or on the document glass face down.
- 3 Press **DOC. RESOLUTION**.

<b>Resolution</b>	:	<b>300dpi</b>
◀	<b>Text</b>	▶

- 4 Press ,  or **DOC. RESOLUTION** to select “**600dpi**”.

<b>Resolution</b>	:	<b>600dpi</b>
◀	<b>Text</b>	▶

- 5 As needed, set the followings. (See “Basic copy settings” on page 7.4.)
  - Document type and scanning contrast
  - Number of copies

To reset the copy parameter to default setting, press **RESET**.

- 6 Press **START** to begin copying.  
To stop copying, press **STOP**.

---

**NOTE:** The document glass is available only for MFX-1330 model.

---

# Chapter

# 8

## Special features

---


Soft keys .....	8.2
Functions you can assign to the soft key .....	8.2
Programming the Soft key .....	8.3
Macro keys.....	8.4
Steps you can program into a macro key .....	8.4
Creating or modifying a Macro.....	8.5
Erasing a Macro key .....	8.6
Setting the speed for Macro .....	8.6
Fax dialing with the Macro key .....	8.7
Copying with the Macro key .....	8.7
Printing lists using the Macro key .....	8.7
Storing fax documents with the Macro key .....	8.7
Viewing counters.....	8.8

# Soft keys

The soft key is a shortcut key. You can assign a function that you frequently use to the soft key to activate or not activate that function by pressing the soft key.

When the function that assigned to the soft key is activated, the light above the soft key is lit. However, according to the function you assigned, the light above the soft key will be not used.

The default setting for soft keys differs between MFX-1330 model and F-300 model.

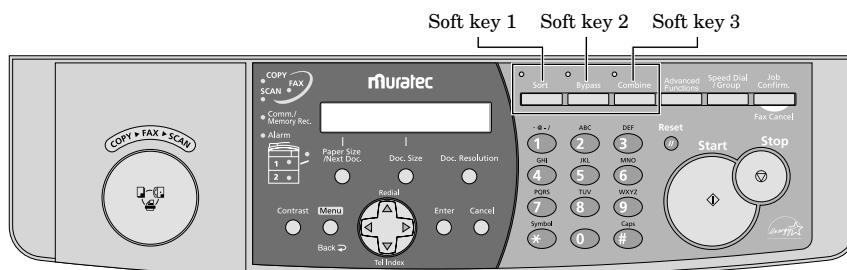

This panel is of MFX-1330 model.

## Functions you can assign to the soft key

The following table lists the functions you can assign to the soft key.

Function name	Descriptions	Light indication	Reference page
Sort Copy	Makes on /off setting for sort copying.	on	7.5
Combine	Makes on /off setting for fax forward.	on	7.8
Zoom	Use this to adjust a zoom ratio by 1% steps.	on	7.4
Broadcast	Use this to make a broadcasting.	—	4.12
Address Entry <sup>Note 1</sup>	Use this to enter a e-mail address.	—	—
Report	Makes on /off setting for print the transmit confirmation report.	on	11.5
Monitor	Use this to obtain a dial tone for on-hook dialing.	on	—
Pause /Dial Opt.	Use this to enter a dialing character.	—	3.2
Delayed	Use this to make a delayed transmission.	—	4.13
Batch Tx	Use this to store a document for batch transmission.	—	4.14
Select TTI	Select the TTI to be sent. Also it can disable TTI sending.	on	4.17
Select Line <sup>Note 2</sup>	Select telephone line when sending a fax.	—	—
Cover Page	Makes on /off setting for cover page.	on	4.20
Fax Forward	Makes on /off setting for fax forward.	on	5.12
Fax & Copy	Makes on /off setting for Fax&Copy.	on	4.19
Security	Makes on /off setting for security reception.	on	9.3
Separator page	Makes on /off setting for separator page.	on	5.14
Memory Tx	Makes on /off setting for memory transmission.	on	4.3
Auto Rx	Makes on /off setting for automatic reception.	on	5.2
F-code Tx	Use this to make a F-code transmission.	—	6.11
F-code Polling	Use this to make a F-code polling.	—	6.12
Polling	Use this to make a polling reception.	—	5.11



Function name	Descriptions	Light indication	Reference page
Dial Prefix	Use this to enter a “N” symbol.	—	4.21
Bypass	Use this to set the paper size on the bypass tray.	—	2.16
Duplex Copy <sup>Note 3</sup>	Use this to set the duplex copy.	on	7.9
Page Counter	Displays total printed and scanned page.	—	8.8
Energy Save	Switches to the energy save mode immediately.	on	1.17
Online	Cancels PC printing.	on	<sup>Note 4</sup>
Mode Switch	Switches the machine’s mode.	—	2.2

Note 1: The optional NIC (network interface card) is required.

Note 2: The optional 2nd phone kit is required.

Note 3: The optional duplex unit is required. (MFX-1330 model only)

Note 4: For details of PC printing, refer to the PDF manual on the Printer & Scanner driver CD.

The following functions are pre-assigned as default:

	MFX-1330	F-300
Soft key 1	Sort Copy	Report
Soft key 2	Bypass	Monitor
Soft key 3	Combine	Pause /Dial Opt.

**NOTE:** It will be available only for the next transmission when you change the on/off setting of “Report”, “Fax & Copy”, “Memory Tx”, “Cover Page” or “Select TTI” by pressing the soft key. Once that transmission is complete, the setting returns to its default setting. If you want to change the default setting, see “User settings” on pages 10.1 to 10.8.

## Programming the Soft key

- 1 Press **MENU**, **2**, **1**, **0**, **3**, **ENTER**.



Select Soft Key No.  
1:Sort Copy

The machine shows the function currently assigned to the soft key.

- 2 Press  or  to select the soft key (1 to 3) you want to change appears.

- 3 Press **ENTER**.

1:Sort Copy  
▼/▲/Enter

- 4 Press  or  to select the function you want to assign.

- 5 Press **ENTER**.

- 6 If you want to program another soft key, repeat procedures from step 2.  
To exit the operation, press **RESET**.


- 7 Use the soft key labels supplied with your machine to label the soft key with the assigned function for easy reference.

**NOTE:** The function already assigned to a soft key can not be assigned to another soft key.

# Macro keys

If you perform the same operation repeatedly, you can automate the operation using a macro. A macro is a series of the several steps that you group together as a single command to accomplish the operation automatically.

A macro key faithfully records up to 60 steps you performed to teach the macro.

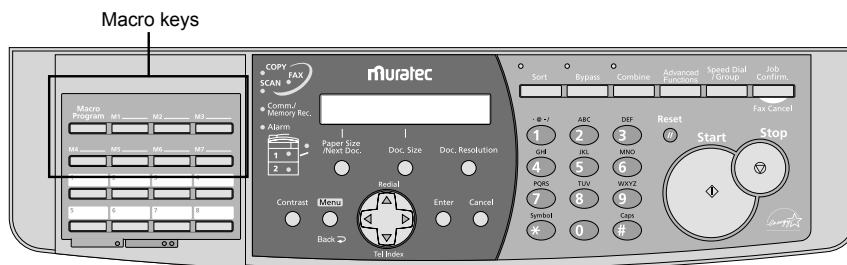

This panel is of MFX-1330 model.

---

## Steps you can program into a macro key

---

You can “teach” the Macro keys to carry out any of the following jobs, but you cannot teach the operation regarding the machine settings.

### ***Copy:***

- All of copying procedures

### ***Printouts:***

- All of lists you can print out (MENU, 5, 1, 01 to 19)
- Document stored for polling (MENU, 4, 3, 1)
- F-code document stored in bulletin box (MENU, 4, 3, 2)
- Document stored in a batch box (MENU, 4, 3, 3)
- Security receive document (MENU, 4, 3, 4)
- Document stored for delayed command (MENU, 4, 3, 5)

### ***Document storage:***

- Regular polling documents (MENU, 4, 1, 1)
- F-code box (bulletin box) documents (MENU, 4, 2, 2)

### ***Communications functions:***

- Delayed transmission (pages 4.13)
- Broadcasting (page 4.12)
- Regular polling (page 4.18)
- Batch transmission (page 4.14)
- F-code transmission (page 6.11)
- F-code polling (page 6.12)

---

**NOTE:** One Macro key can hold only one job. It cannot combine two or more jobs.

---

## Creating or modifying a Macro

- 1 Press **MACRO PROGRAM**.

1. Set Macro  
▼/▲/Enter

- 2 Press **ENTER**.

Select Macro Key  
M1: No Command Stored

- 3 Press the Macro key you want to create or modify.  
Then press **ENTER**.

- 4 If you are creating a new macro, skip to next step.  
If you are modifying the macro already stored, the following two displays will appear alternately.

M1: Overwrite?  
Yes → Enter

M1: Overwrite?  
No → Cancel

- To overwrite the recording, press **ENTER**.
- To change only the macro name, press **CANCEL** and go to the step 9.

- 5 The copy standby display appears and the machine begins to beep which indicates the machine is in the macro programming mode.

Copy Ready                      01  
Auto            Ltr            100%

- 6 Press the keys exactly as you operate the job you want to program into a macro key.
- The machine beeps during programming to confirm macro programming mode.
  - You can program up to 60 steps. When it comes over 60 steps, the machine asks if you want to register the operations you have entered.

Too Many Steps  
Yes → Enter

Too Many Steps  
No → Cancel

If you want to register them, press **ENTER**.

If you want to abort, press **CANCEL**.

- When you press **ENTER** or **START** at the end of operation you are programming, the machine shows:

Include Start/Enter?  
Yes → Enter

Include Start/Enter?  
No → Cancel

If you want the machine to start the programmed operation immediately by pressing the macro key, press **ENTER**.

If you want the machine to prompt you press **START** or **ENTER** before starting the recorded operation, press **CANCEL**. Then go to the step 8.

- 7 Press **MACRO PROGRAM**.

M1: Name                      ;Upper  
—

The machine prompts you to enter the name of macro.  
If you do not want to enter or change it, skip to the step 9.

- 8 Enter the macro name by using the numeric keys. (If necessary, review “Entering character,” page 2.2) It can be store up to 130 characters.
- 9 Press **ENTER** to finish.

---

**NOTE:** To print a list of macro keys, press **MENU, 5, 1, 1, 8, ENTER**.

---

## Erasing a Macro key

---

- 1 Press **MACRO PROGRAM** twice.

**2.Erase Macro**  
▼/▲/Enter

- 2 Press **ENTER**.
- 3 Press the macro key you want to erase.
- 4 Press **ENTER**. The following two displays will appear alternately:

**M1:Erase Macro**  
**Yes → Enter**

**M1:Erase Macro**  
**No → Cancel**

- 5 Press **ENTER** to erase the macro.  
If you want to quit without erasing, press **CANCEL**.
- 6 To erase another macro, repeat procedures from step 3.  
Press **RESET** to return to standby mode.


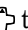
## Setting the speed for Macro

---

You can adjust the speed of one step in the Macro key.

- 1 Press **MACRO PROGRAM** three times.

**3.Macro Speed**  
▼/▲/Enter

- 2 Press **ENTER**.
- 3 Press  or  to select the mode you want appears. The possible settings are “Normal”, “Slow” or “Fast”.
- 4 Press **ENTER** to save the setting.
- 5 Press **RESET** to exit.

## Fax dialing with the Macro key

---

To dial a fax call using a Macro key:

- 1 Place the document.
- 2 Press the Macro key in which you have stored the fax communication command.
- 3 Press **START**, if you have not registered **START** in the Macro key.  
Your machine will perform the operation now, or at whatever time you programmed.  
If you programmed this key to delay its operation, the LCD shows:

<b>** Reserved **</b>
<b>Nov 27 2004 2:15pm</b>

If you programmed this key to perform the operation immediately after you press it, the LCD shows the number:

<b>9-1-972-55-4335</b>
<b>Ltr Mem 99%</b>

## Copying with the Macro key

---

To copy using a Macro key:

- 1 Place the document.
- 2 Press the Macro key in which you have stored the copy command.
- 3 Press **START**, if you have not registered **START** in the Macro key.

## Printing lists using the Macro key

---

To print a list using a Macro key:

- 1 Press the Macro key that is programmed for the printing lists.
- 2 Press **ENTER**, if you have not registered **ENTER** in the Macro key.

## Storing fax documents with the Macro key

---

To store a fax document for either polling or F-Code polling using a Macro key:



- 1 Place the document.
- 2 Press the Macro key that is programmed for the storing operation you want to use.
- 3 Press **ENTER**, if you have not registered **ENTER** in the Macro key.

# Viewing counters

You can view the following counters.



Total Print	Shows the total number of copies, fax reception, list printing and PC printouts made.
Copy	Shows the total number of copies made.
Fax/List	Shows the total number of fax reception and list printings.
PC Print	Shows the total number of printouts made.

Total Scan	Shows the total number of pages that have been scanned.
Copy	Shows the total number of pages scanned for copies.
Fax	Shows the total number of pages scanned for faxes.
PC Scan	Shows the total number of pages scanned for PC scanner.

- 1 Press **MENU**, **2**, **1**, **1**, **1**, **ENTER**.
- Press  or  to toggle the total printed pages and the total scanned pages.

TotalPrint:100000000  
▼/▲/Enter

Total Scan:100000000  
▼/▲/Enter

- Press **ENTER** and then  or  to confirm the details.

Copy :030000000  
Fax/List:040000000 ▼

Copy :030000000  
Fax :040000000 ▼

PC Print:030000000 ▲

PC Scan :030000000 ▲

- 2 Press **RESET** to the exit and return to the standby mode.

# Restricting use of the machine

---

Security features.....	9.2
The protection passcode .....	9.2
Security reception .....	9.3
Masking the PIN .....	9.5
Using department codes .....	9.8
Turning department code protection on and off .....	9.8
Entering a department code .....	9.8
Erasing a department code.....	9.9
Turning the department code setting on and off.....	9.9
Fax charge setting .....	9.10
Copy charge setting.....	9.10
Sending a fax using a department code .....	9.11
Making a copy using a department code.....	9.11
Printing the department code list .....	9.12
Resetting the counter for department code list .....	9.12
Copy protection .....	9.13

# Security features

Your machine has a number of security features to keep your private fax documents private, avoid unwanted outside communication and even protect against unauthorized use of your machine.

These security features include:

(1) Security reception, (2) PIN mask, (3) Block junk fax, and (4) Department codes.

## The protection passcode

---

Your machine has a passcode protection system which must be turned on in order to use the security features listed below:

- Security reception
- PIN mask
- Department code protection

To set the passcode:

- 1 Press **MENU**, **2**, **1**, **0**, **2**, **ENTER**.

<b>Protect Passcode</b> <b>Old Passcode</b> : ****
---

- 2 If you are creating a passcode, use the numeric keys to enter 0000.  
If you want to change or turn off the passcode, enter the current passcode.

- 3 Press **ENTER**.

<b>Protect Passcode</b> <b>New Passcode</b> : 0000
---

- 4 Enter the new four-digit passcode between 0001 to 9999 and press **ENTER**.

– or –

To turn off the passcode protection, enter 0000 and press **ENTER**.

- 5 Write down the passcode, and put it in a safe place.

- 6 Press **RESET** exit and to return to the standby mode.



## Security reception

Security reception tells your machine to keep all received faxes in memory (but not print them). Then you can print them out later at your convenience. For example, you could use this if you are concerned about workers reading documents intended for your eyes only.

**NOTE:** For this feature to work, you must have activated the passcode protection as described on left column. You must also know the passcode.

### Activating security reception

- 1 Press MENU, 2, 2, 1, 1, ENTER.

Security Rx  
Enter Passcode :\*\*\*\*

- 2 Use the numeric keys to enter the protection passcode.

- 3 Press ENTER.


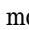
Security Rx :Off  
▼/▲/Enter

- 4 Press  or  to select "On".

- 5 Press ENTER. The machine shows the machine's current clock setting:

Security Rx  
Enter Time: 15:42

- 6 Use the numeric keys to enter the time (use a 24-hour format) for the machine enter the security reception mode in every day.

To change a digit, press  to move to the left, or  to move right.  
Then enter the correct digit.

- 7 Press ENTER.

### Turning the security reception on immediately

The machine will enter the security reception mode automatically at the time you have set. However, if you want to put the machine in the security reception mode immediately, you can do this by the following procedure:

**NOTE:** To enable the following procedure, the security reception feature must be set to active. (See "Activating security reception" above.)

To turn the security reception immediately:

- 1 Press ADVANCED FUNCTIONS repeatedly until "Security" appears, then press ENTER.  
– or –  
Press the soft key in which "Security" is assigned.

Security  
Enter Passcode :\*\*\*\*

- 2 Enter the four-digit passcode.  
If you are using the soft key, skip to step 5 after you entered the passcode.

- 3 Press ENTER.

Security	:Off
▼/▲/Enter	

- 4 Press  or  to select "On".

- 5 Press ENTER. The machine briefly shows the following display and begins the security reception mode.

<b>** Sec. Rx Active **</b>
-----------------------------

### ***Turning security reception off and Printing the document stored in memory***

During security reception mode, an incoming fax goes directly into your machine's memory and the memory receive light comes on. But the incoming fax message is not printed. To print the documents received during the security reception mode (and to return your machine to normal reception until the security reception beginning time):

- 1 Press MENU, 4, 3, 4, ENTER.

If you are using the soft key, press the soft key.

In which way, the machine shows:

Security Rx Doc.
Enter Passcode :****

- 2 Use the numeric keys to enter the four-digit passcode and press ENTER.

- Your machine will print all the documents received in the memory and then erase them from the memory. Then the machine turns the security reception off until the next time you have scheduled security reception.

---

**NOTE:**

- If you enter incorrect passcode, your machine refuses to print, and security reception remains on.
- To turn the security reception off completely, select "Off" in step 4 of "Activating security reception," on page 9.3.

---

## Masking the PIN

To prevent unauthorized long-distance calls, some PBX (private branch exchanger) systems require PIN (personal identification number) entry when dialing a number.

Your machine's PIN mask feature helps you keep that PIN number private. With the PIN mask feature activated, you can dial a number plus a PIN, but the PIN will not appear in a journal, error message printout, delayed command list or a TCR (transmit confirmation report).

There are three possible settings for the PIN mask:

- **Off** — Turns off the PIN mask feature. Any PIN you enter will appear on any display or printout which shows the number you dial.
- **Mode 1** — Each remote fax unit has a departmental PIN access code.
- **Mode 2** — Each fax user has a departmental PIN access code.

**NOTE:**

- If you select Mode 1 and you will use a one-touch key or speed-dial number, you must store the remote unit's PIN access code within that number. (See "Autodialing while using the PIN mask," below for further details.)
- If you select either Mode 1 or Mode 2 and will be using batch transmission, you must store the PIN access code within the appropriate batch box.

### Activating the PIN mask



**NOTE:** For this feature to work, you must have activated the passcode protection as described on page 9.2. And you must know the passcode.

- 1 Press **MENU, 2, 2, 1, 4, ENTER**.

**PIN Mode**  
**Enter Passcode :\*\*\*\***

- 2 Use the numeric keys to enter the four-digit passcode and press **ENTER**.

**PIN Mode : Off**  
**▼/▲/Enter**

- 3 Press  or  until the mode you want appears.

- 4 Press **ENTER**.

### Autodialing while using the PIN mask

**NOTE:** The following instructions presume you understand how to set and use your machine's autodialer. If you need to review, see pages 3.4 and 3.7.

#### If you chose "Mode 1"

In Mode 1, before autodialing a number for the first time, you must add the PIN to the stored one-touch key or speed-dial number.

- 1 Begin by creating or changing an entry in the autodialer (see page 3.4 and 3.7). While you are setting this up, the machine asks you to enter the PIN:

**Set PIN Number**  
**Enter Passcode :\*\*\*\***

- 2 Use the numeric keys to enter the four-digit protection passcode and press **ENTER**.

001 : PIN Number

—

- 3 Use the numeric keys to enter the PIN and press **ENTER**.
- 4 When you finish, press **RESET**.

---

**NOTE:** While in Mode 1, any autodialer numbers you use must include the PIN. This also applies to autodialer numbers used with batch transmission (see page 4.14).

---

### **If you chose “Mode 2”**

In Mode 2, you do not have to add the PIN to the autodialer setting. Instead, you enter the PIN manually each time you autodial:

- 1 Dial the number as you normally would, using the autodialer.  
The machine now asks for the PIN:

Enter PIN Number

—

- 2 Use the numeric keys to enter the PIN and press **START**.  
Your machine dials the number.

## ***Dialing from the numeric keypad while using the PIN mask***

### **If you chose “Mode 1”**

- 1 Enter the phone number, then press the **\*** key and enter the PIN.  
The PIN always goes last.  
For example, to dial 19725550911 with a PIN of “123456,” enter 19725550911\*123456:

Press Start  
13725550911\*123456\_

- 2 Press **START**. The PIN disappears from the display, and your machine dials the desired phone number.

### **If you chose “Mode 2”**

- 1 Enter the phone number as usual.

Press Start  
13725550911\_

- 2 Press **START**.

Enter PIN Number

—

- 3 Use the numeric keys enter the PIN and press **START**.  
Your machine dials the number.

*Performing batch transmission while using the PIN mask*

**NOTE:** The following instructions presume you are familiar with how to set and use both your machine's autodialer and its batch transmission feature. If you need to review, see pages 3.1 to 3.12 for more on the autodialer and/or pages 4.14 to 4.16 for more on batch transmission.

**If you chose “Mode 1” or “Mode 2”**

**NOTE:** Any autodialer number you use with batch transmission must include the PIN. (To review how to include this information in an autodialer number, review the Mode 1 instructions under “Autodialing while using the PIN mask,” page 9.5.)

Before sending a batch transmission the first time, you must store the PIN within its batch box.

- 1 Follow the steps for creating or modifying a batch box (page 4.14).  
The machine asks for the fax number.

1 : Fax Number

- 2 Enter an autodialer number or use the numeric keys to enter the fax number, to which the batch transmission should go.

**NOTE:** If you are entering a number using the numeric keys, enter the fax number, followed by the \* key and then the PIN.

- 3 Press ENTER to save the setting.
- 4 Continue with the steps for creating or modifying a batch box.

Now you can perform batch transmission to this box while the PIN mask is activated.

# Using department codes

When the department code setting is activated, the machine reminds each user to enter the department code before sending a document or making copies. With this feature, the fax transaction time and the copy charge can be managed by department.

After you turn on this setting, assign specific code to your office's machine users and tell them to enter these department codes before sending faxes or making copies.

## Turning department code protection on and off

---

This feature protects the department code settings from unauthorized access. After you set it, you will have to enter passcode to access the department code settings next time.

**NOTE:** This feature will work only if you have activated the passcode protection (see page 9.2).

---



- 1 Press MENU, 3, 3, 1, ENTER.

Set Dept. Protect  
Enter Passcode: \*\*\*\*

- 2 Use the numeric keys to enter the four-digit passcode.

- 3 Press ENTER.

Dept. Protect :Off  
▼/▲/Enter

- 4 Press  or  to select on or off.

- 5 Press ENTER.

To stop entering department codes, press RESET.

## Entering a department code

---

Your machine can hold up to 100 separate department codes.

To enter a department code:

- 1 Press MENU, 3, 3, 2, ENTER.

Select Department No  
001:

**NOTE:** If department code operation is protected, the machine beeps briefly and then returns to the standby mode. You will have to turn off the protection first (see page 9.8).

---



- 2 Press ENTER.

001:Enter Dept. Code  
00000000

- 3 Use the numeric keys to enter the department code.

- 4 Press ENTER.

01 : Name ; Upper  
\_



- 5 Use the numeric keys to enter the name for the one-touch key.  
The name can be stored up to 20 characters.  
(Regarding how to enter the character, see “Entering character” on page 2.2.)  
To change a name, press  or  to move the cursor, press CANCEL to erase the name.  
Then re-enter the correct name.
- 6 Press ENTER to save the setting.
- 7 To enter another department code, repeat procedures from step 2.  
To stop entering department codes, press RESET.

## Erasing a department code

- 1 Press MENU, 3, 3, ENTER.

Select Department No  
001 : 987654321

**NOTE:** If department code operation is protected, the machine beeps briefly and then returns to the standby mode. You will have to turn off the protection first.

- 2 Press  or  to select the code you want to erase.
- 3 Press ENTER. The following two displays will appear alternately:

001 : Erase Dept. Code  
Yes → Enter

001 : Erase Dept. Code  
No → Cancel

- 4 Press ENTER to erase the code.  
To cancel the erasing, press CANCEL.
- 5 To erase another department code, repeat procedures from step 2.  
To stop erasing department code, press RESET.



## Turning the department code setting on and off

**NOTE:** To turn the department code setting on, at least one department code must be existed in your machine.

- 1 Press MENU, 3, 3, 4, ENTER.



Fax Department : Off  
▼/▲/Enter

**NOTE:** If department code operation is protected, the machine beeps briefly and then returns to the standby mode. You will have to turn off the protection first.

- 2 Press  or  to select on or off for fax department management.

- 3 Press ENTER.

<b>Copy Department :Off</b> ▼/▲/Enter
--

- 4 Press  or  to select on or off for copy department management.
- 5 Press ENTER to save the setting.  
To exit and return to the standby mode, press RESET.

## Fax charge setting

---

You can manage the print charge of fax reception for each department code.

To enter the charge per page:

- 1 Press MENU, 2, 2, 1, 5, ENTER.

<b>Fax Charge</b> (00.00–99.99) : <u>00</u> .00
--

- 2 Use the numeric keys to enter the charge per page.
- 3 Press ENTER.

## Copy charge setting

---

You can manage the copy charge for each department code.

To enter the copy charge per page:

- 1 Press MENU, 2, 3, 8, ENTER.

<b>Copy Charge</b> (00.00–99.99) : <u>00</u> .00
---

- 2 Use the numeric keys to enter the charge per page.
- 3 Press ENTER.



## Sending a fax using a department code

---

For this operation to work, make sure:

- The department code should exist on your machine
- You should know the department code

- 1 Place your document on the ADF or the document glass.  
(See page 2.11 for details.)
- 2 Adjust document resolution and contrast, if necessary.
- 3 Enter the fax number by either pressing a one-touch key, entering a speed-dial number or dialing from the numeric keys.
- 4 Press **START**. (If you pressed a one-touch key, no need to press **START**.)

**Enter Dept. Code**

- 6 Use the numeric keys to enter the appropriate department code.
- 7 Press **START**.

---

**NOTE:** The document glass is available only for MFX-1330 model.

---

## Making a copy using a department code

---

For this operation to work, make sure:

- The department code should exist on your machine
- You should know the department code

- 1 Place your document on the ADF or the document glass and set any settings you want.
- 2 Use the numeric keys to enter the number of copies.
- 4 Press **START**.

**Enter Dept. Code**

- 6 Use the numeric keys to enter the appropriate department code.
- 7 Press **START**.

---

**NOTE:** The document glass is available only for MFX-1330 model.

---

## Printing the department code list

---

The department code list includes the following information for each department code:

- Each department code
- Each department name
- Total communication time (in hours, minutes and seconds; h:mm:ss)  
Counts the communication time up to 999:59:59 (999 hours:59 minutes:59 seconds). If the fax exceeds the maximum time, it does not count further.
- Total printed pages of fax reception  
Counts the pages up to 999999 pages. If the fax exceeds the maximum page, it does not count further.
- Total print charge of fax reception  
Counts the charge up to 99.99. If the fax reception exceeds the maximum charge, it will not count further.
- Total printed pages of copying  
Counts the pages up to 999999 pages. If the copy exceeds the maximum page, it does not count further.
- Total copy charge  
Counts the copy charge up to 99.99. If the copy exceeds the maximum charge, it does not count further.
- Total charge of copy and fax reception  
The sum of copy charge and print charge of fax reception will be printed.

---

**NOTE:** If you want to reset the total counts of each department code, see “Resetting the counter for department code list” below.

---

### *To print the list:*

Press **MENU, 5, 1, 1, 2, ENTER**. The department code list will be printed.

---

**NOTE:** If department code operation is protected (see page 9.8), the machine beeps briefly and then returns to the standby mode. You will have to turn off the protection first.

---

## Resetting the counter for department code list

---

To clear the current total counts of each department code:

**1** Press **MENU, 3, 3, 5, ENTER**.

**2** The following two displays will appear alternately:

<b>Reset Dept.Count</b> <b>Yes → Enter</b>
---

<b>Reset Dept.Count</b> <b>No → Cancel</b>
---

**3** Press **ENTER** to reset the counter of each department code.  
Press **CANCEL** to cancel the resetting.



**4** Press **RESET** to exit and return to the standby mode.

# Copy protection

With such a versatile copier built right into your machine, you might want to make sure it doesn't become too tempting to make unauthorized copying that could deplete your machine's supplies more rapidly. So, to limit the use of your machine to only sending and receiving faxes — in other words, to activate copy protection:

- 1 Press **MENU**, **2**, **3**, **4**, **ENTER**.

**Copy Protect**  
**Enter Passcode :\*\*\*\***

- 2 Press  or  to select on or off.

**Copy Protect :Off**  
**▼/▲/Enter**

- 3 Press **ENTER** to save the setting.

If the copy protection is active, whenever someone tries to switch the machine to copy mode, the machine will sound a brief alarm tone and display:

**Fax Ready**  
**Copy Off**



## User settings

---

Machine settings.....	10.2
Accessing the machine setting.....	10.2
Fax settings .....	10.4
Accessing the fax setting.....	10.4
Copy settings.....	10.6
Accessing the copy setting .....	10.6
Scanner settings.....	10.8
Accessing the scanner setting.....	10.8

# Machine settings

The machine settings allows you to customize various setting of your machine to match your needs.

## Accessing the machine setting

1 Press **MENU**, **2**, **1**.

[Program]

No.21



1 Machine Settings

2 Press **ENTER**.

[Program]

No.2101

01 Cassette Size

3 Use  or  to search the item you want to set or change and press **ENTER**.

4 Change setting and press **ENTER**. For details of each settings, refer to the following table:

5 When you have finished, press **RESET** to return to the standby mode.

The underlined settings are the factory defaults.

01.Cassette Size	Set the size of paper in the paper cassette. (See page 2.16.)
02.Protect Passcode	Set the protect passcode for using the security features. (See page 9.2)
03.Soft Key	Assign the function you use frequently, so you can turn on or off the function by pressing this key. (See page 8.2)
04.Silent Mode	<div>Mute or select the volume of the ringer, the alarm and the key tones.</div> <div><b>ON</b> After you turn the silent mode ON, you can set the following:<div><b>Ringer Silent</b><div><b>ON</b> The machine will not ring when receiving a call.</div><div><u><b>OFF</b></u> The machine will ring normally.</div></div><div><b>Alarm Silent</b><div><b>ON</b> The machine will not sound any alarms including an error alarm.</div><div><u><b>OFF</b></u> The machine sounds an alarm when an error occurred or makes after receiving or copying.</div></div><div><b>KeyBuzzer Silent</b><div><b>ON</b> The machine will not sound the key touch tone.</div><div><u><b>OFF</b></u> The machine make a sound when the keys are pressed.</div></div><div><b>Alarm &amp; Key Volume</b><div>When the silent mode is OFF, or the “Alarm Silent” or “Key Buzzer Silent” is set to OFF, this optional setting will appear to adjust the volume.<div><b>Max</b> Loudest setting</div><div><u><b>Mid</b></u> Medium setting</div><div><b>Min</b> Low setting</div></div></div><div><b><u>OFF</u></b> Turn off the silent operation mode. The machine will ring and beep as usual. You can select the volume from Max, Mid or Min.</div></div>

05.Energy Save Mode	<p>Set the machine conserves the power when not in use.</p> <p><b>ON</b> The machine saves power consumption after the specified idle time elapsed.</p> <p><b>OFF</b> Cancel the energy save mode.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>•The idle time can be changed in the “Initial setting” mode (see pages 1.14 to 1.16.)</li> <li>•While the machine is in the energy saving mode, the machine shows “Energy Save Mode” on the LCD, but all the LED on the control panel and scanner lamp will not be off.</li> </ul>
06.Fax & Copy	Make a copy of your document each time it transmit. (See page 4.19.)
07.Primary Mode	<p>The machine returns to the primary mode when the standby status continues for longer than 3 minutes after finishing the sending or printing jobs. With this setting, the machine always starts up in the primary mode.</p> <p>In default settings, the <b>Copy mode</b> is set for the primary mode. However, you can change the primary mode to the <b>Fax mode</b> or to the <b>Scan mode</b>.</p>
08.Service Mode	For technical support. Do NOT turn this setting to ON without an authorized technician’s advice.
09.Date & Time	Enter the current date and time using 24-hour system.
10.Paper Source	<p>Set the usage of the paper cassette and bypass tray.</p> <p><b>Cassette1</b> You can choose one of the following for cassette 1.</p> <p><b><u>Fax/Copy</u></b> It is used for fax printing, list printing and copying.</p> <p><b>Not Used</b> Cassette 1 is not used for faxing and copying. It can be used for the separator page function (page 5.14) or PC printing*.</p> <p><b>Fax</b> It is used only for fax printing and list printing.</p> <p><b>Copy</b> It is used only for copying.</p> <p><b>Cassette2</b> You can choose one of the following for cassette 2.</p> <p><b><u>Fax/Copy</u></b> It is used for fax printing, list printing and copying.</p> <p><b>Not Used</b> Cassette 2 is not used for faxing and copying. It can be used for the separator page function (page 5.14) or PC printing*.</p> <p><b>Fax</b> It is used only for fax printing and list printing.</p> <p><b>Copy</b> It is used only for copying.</p> <p><b>Bypass tray</b> You can choose one of the following for Bypass tray.</p> <p><b><u>Fax/Copy</u></b> It is used for fax printing, list printing and copying.</p> <p><b>Not Used</b> Bypass tray is not used for faxing and copying. It can be used for the separator page function (page 5.14) or PC printing*.</p> <p><b>Fax</b> It is used only for fax printing and list printing.</p> <p><b>Copy</b> It is used only for copying.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>•The “Cassette2” appears only when the optional second cassette has been installed.</li> </ul>
11.Page Counter	<p>You can confirm the total number of printed and scanned page. (See page 8.8.)</p>

\* For details of PC printing, refer to the PDF manual on the Printer & Scanner driver CD.

# Fax settings

The fax settings allows you to customize various setting of fax setting to match your needs.

## Accessing the fax setting

- 1

Press **MENU**, **2**, **2**.



[Program]No.22\_

2 Fax Settings
- 2

Press **ENTER**.

[Program]No.2201

01 Scan Parameters
- 3

Use  or  to search the item you want to set or change and press **ENTER**.
- 4

Change setting and press **ENTER**. For details of each settings, refer to the following table:
- 5

When you have finished, press **RESET** to return to the standby mode.

The underlined settings are the factory defaults.

01 Scan Parameters	<p><b>Resolution</b> You can choose one of the following.</p> <p><u>Normal</u> Scan at 8 dots/mm × 3.85 lines/mm.</p> <p><b>Fine</b> Scan at 8 dots/mm × 7.7 lines/mm.</p> <p><b>S-Fine</b> Scan at 8 dots/mm × 15.4 lines/mm.</p> <p><b>Gray</b> Scan at 8 dots/mm × 7.7 lines/mm.</p> <p><b>Contrast</b> You can choose one of the following.</p> <p><u>Normal</u>, <b>Dark</b>, <b>Darkest</b>, <b>Light</b> or <b>Lightest</b>.</p> <p><b>S-Fine Resol.</b> You can choose one of the following.</p> <p><u>400dpi</u>, <b>600dpi</b></p>
02 Print Parameters	<p><b>Rx Reduc. Rate</b> (Refer the page 5.6.)</p> <p><u>Auto</u> Automatically reduces printouts at variable rates down to a minimum of 50%. Tries to reduce printout to fit on one sheet of your selected paper size. If it can't, print the received document at 100% size on two or more pages.</p> <p><b>100%</b> Does not reduce the received documents.</p> <p><b>Margin</b> Set the reduction margin for Auto reduction. (00 to 85 mm)</p> <p><u>40 mm</u></p> <p><b>Half Page Recpt.*</b></p> <p><u>OFF</u> Not combine the half-page receptions.</p> <p><b>ON</b> Combines two of half-page receptions onto a single sheet.</p> <p>* When the optional duplex unit is installed in MFX-1330 model, the following menu is displayd.</p> <p><b>Paper Save</b></p> <p><u>OFF</u> Not perform either half-page receptions or duplex receptions.</p> <p><b>H.Page Rx</b> Combines two of half-page receptions onto a single sheet.</p> <p><b>Duplex Rx</b> Combines and prints the received two one-sided pages onto both sides of a single sheet.</p>



03 # of Rings	Set the number of rings (01 to 10 rings) before your machine answers. <b># of Rings      02 times</b>
04 Redial	Set the number of times (2 to 15 times) and interval (1 to 5 min.) for automatic fax redialing. <b># of Redials      2 times</b> <b>Redial Interval   1 min.</b>
05 Dialing Pause	Set dialing pause length. (02 to 10 sec.) <b>02 sec.</b>
06 Memory Tx	Default setting of Memory transmission (see page 4.3). <b>ON</b> The machine scans all pages into memory before dialing. When it makes contact, the machine transmits the stored document from memory <b>OFF</b> Cancel the Memory Tx.
07 Quick Tx	Default setting of Quick Memory transmission (see page 4.3). <b>ON</b> The machine doesn't wait to scan all pages into memory before dialing. After it scans the first page of the document, the machine start sending. <b>OFF</b> Cancel the Quick memory Tx.
08 Select TTI	Select the TTI that printed to the top of each page you send. See page 4.17.
09 ECM Mode	Default setting of ECM (error correction mode). <b>ON</b> Reduces line errors during sending or receiving with another fax that supports ECM. <b>OFF</b> Cancel the ECM.
10 Block Junk Fax	Reject the fax reception from unauthorized incoming faxes. Default setting is Off. (See page 5.9.)
11 Security Rx	Keep all received fax messages in memory and print them later. Default setting is Off. (See page 9.3.)
12 Separator Page	Partition each received documents by inserting the separator page. Default setting is Off. (See page 5.14.)
13 Receive TimeStamp	Prints the received date and time at the top of the received fax message <b>ON</b> Prints received time at the top of each page you received. <b>OFF</b> Cancel this feature.  
14 PIN Mode	Prevent unauthorized long-distance calls. (See page 9.5.)
15 Fax Charge	Enter the print charge of fax reception per page. (\$00.00-99.99) (See page 9.10.) <b>\$00.00</b>
16 Dial Prefix	Store the appropriate access number to access the alternative telephone service provider. (See page 4.21.)

# Copy settings

The copy settings allows you to customize various setting of copy setting to match your needs.

## Accessing the copy setting



---

- 1 Press **MENU**, **2**, **3**.

[Program]	No.23_
3 Copy Settings	

- 2 Press **ENTER**.

[Program]	No.231
1 Scan Parameters	

- 3 Use  or  to search the item you want to set or change and press **ENTER**.
- 4 Change setting and press **ENTER**. For details of each settings, refer to the following table:
- 5 When you have finished, press **RESET** to return to the standby mode.

The underlined settings are the factory defaults.

1 Scan Parameters	<b>Doc. Type</b> You can choose one of the following for the default. <u>Text</u> , <b>Photo&amp;Text</b> , <b>Photo</b> <b>Contrast</b> You can choose one of the following for the default. <u>Normal</u> , <b>Dark</b> , <b>Darkest</b> , <b>Light</b> , <b>Lightest</b>
2 Auto Reset Time	The machine returns to its initial condition automatically in a certain period of time. You can change this time from 01 to 10 minutes. <u>03 min.</u>
3 Copy Auto	The machine automatically selects the recording paper size according to the document size and enlargement/reduction rate. You can change it to select the document size or enlargement/reduction rate automatically, instead of the recording paper size. <b>Paper Size</b> The paper will be selected automatically according to the document size and copy ratio. <b>Reduction</b> Copy ratio will be set automatically according to the paper size and document size. <b>Doc. Size</b> Document size will be set automatically according to the paper size and copy ratio.
4 Copy Protect	Protects that the switching to the copy mode. See page 9.13.
5 Sort Copy	Default setting of the sort copy. <b>ON</b> The copies can be assembled as sets in sequential order. <u><b>OFF</b></u> The copies will be printed on a page-by-page basis.
6 Combine	Default setting of the combine copy. <b>ON</b> The machine always performs the combine copies. <u><b>OFF</b></u> The machine does not make combine copies until you set it manually.

7 Resolution	<p>Default setting of the copy resolution.</p> <p><b>600dpi</b> The machine makes a copies with high resolution (600 dpi × 600 lpi), but it also requires more memory than the normal copy resolution.</p> <p><b>300dpi</b> The machine makes a copies with normal resolution (600 dpi × 300 lpi).</p>
8 Copy Charge	<p>Set the copy charge per page. (\$00.00-99.99) (See page 9.10.)</p> <p><b>\$00.00</b></p>

 
# Scanner settings

The scanner settings allows you to customize various scanner function to match your needs.


## Accessing the scanner setting



---

1 Press **MENU**, **2**, **4**.

 

2 Press **ENTER**.



3 Use  or  to search the item you want to set or change and press **ENTER**.

4 Change setting and press **ENTER**. For details of each settings, refer to the following table:

5 When you have finished, press **RESET** to return to the standby mode.

The underlined settings are the factory defaults.

1 Scan Parameters	<p><b>Doc. Type</b> You can choose one of the following. <u>Text</u>, <b>Photo&amp;Text</b>, <b>Photo</b></p> <p><b>Resolution</b> You can choose one of the following. <u>200 dpi</u>, <b>300 dpi</b>, <b>600 dpi</b></p> <p><b>Contrast</b> You can choose one of the following. <u>Normal</u>, <b>Dark</b>, <b>Darkest</b>, <b>Light</b>, <b>Lightest</b></p>
3 Auto Reset	<p><b>Auto Reset Time</b> Set the time (minutes) for the scan parameters return to their initial condition. You can change this time from 01 to 10 minutes. <u>03 min.</u></p> <p><b>Reset After Scan</b> You can program the settings to return to their initial condition as soon as the scanning is completed. <u>On</u>, <b>Off</b></p>

For details of scanner settings, refer to the PDF manual on the Printer & Scanner driver CD.

# Chapter

# 11

## Report & Lists

---

Table of the lists and journal.....	11.2
Activity journal .....	11.4
Setting the activity journal.....	11.4
Printing an activity journal manually .....	11.4
Setting the printing order of the activity journal.....	11.5
Transmission confirmation report .....	11.5
Setting the Transmission Confirmation Report .....	11.5
Stored document list.....	11.6
Documents erased notification .....	11.6

# Table of the lists and journal

The following table lists the report and lists that your machine can print out.

Name	Description	Refer page
Function List	Lists the functions available on your machine and the key-strokes needed to complete them. To print this list, press <b>MENU, 5, 1, 0, 1, ENTER.</b>	2.5
Machine Settings List	Lists the currently machine settings. To print this list, press <b>MENU, 5, 1, 0, 2, ENTER.</b>	10.2
Fax Settings List	Lists the currently fax settings. To print this list, press <b>MENU, 5, 1, 0, 3, ENTER.</b>	10.4
Copy Settings List	Lists the currently copy settings. To print this list, press <b>MENU, 5, 1, 0, 4, ENTER.</b>	10.6
Activity Journal	Prints recent fax transactions performed by your machine. To print the activity journal, press <b>MENU, 5, 1, 0, 5, ENTER.</b> You can also set the machine to print activity journal automatically in every 100 fax transactions.	11.4
Commands List	Lists the following items: <ul style="list-style-type: none"><li>• The command number</li><li>• The number or name of the destination</li><li>• The start time (dd, hh:mm format)</li><li>• A note — telling if the command is a polling or F-Code operation.</li></ul> To print this list, press <b>MENU, 5, 1, 0, 6, ENTER.</b>	4.9
One-Touch List	Lists each one-touch key's number, name and fax/phone number you have stored. To print this list, press <b>MENU, 5, 1, 0, 7, ENTER.</b>	3.4
Speed-Dial List	Lists each number's three-digit identifier, name and fax/phone number you have stored. To print this list, press <b>MENU, 5, 1, 0, 8, ENTER.</b>	3.7
Group List	Lists the one-touch numbers and speed-dial numbers you have stored in the group number. To print this list, press <b>MENU, 5, 1, 0, 9, ENTER,</b> then select the group number and press <b>ENTER.</b>	3.9
Block Junk Dial List	Lists the blocked phone numbers. To print this list, press <b>MENU, 5, 1, 1, 0, ENTER.</b>	5.9
Cover Page	Prints a sample cover page. To print this list, press <b>MENU, 5, 1, 1, 1, ENTER.</b>	4.20
Department List	Lists a total communication time, printed pages of fax reception, print charge of fax reception, total copy page, copy charge and the sum of copy charge and print charge of fax reception of each department code. To print this list, press <b>MENU, 5, 1, 1, 2, ENTER.</b>	9.12

Name	Description	Refer page
F-Code Box List	Lists the each box's identifier number, box name (if any), sub-address, password, box type and each box's settings. To print this list, press <b>MENU, 5, 1, 1, 3, ENTER.</b>	6.1 to 6.12
F-Code Doc. List	Lists the each box's identifier number, box name (if any), box type and each file number (or document number) that is stored. To print this list, press <b>MENU, 5, 1, 1, 4, ENTER.</b>	6.1 to 6.12
Batch Box List	Lists the each box's identifier number, destination name, fax number and day and time the transmission should start. To print this list, press <b>MENU, 5, 1, 1, 5, ENTER.</b>	4.14 to 4.16
Batch Doc. List	Lists the documents' file numbers. To print this list, press <b>MENU, 5, 1, 1, 6, ENTER.</b>	4.14 to 4.16
Fax Forward List	List the each transfer rule's identifier number, remote fax's number where you want documents to be transferred, on/off setting, time period and auto print setting. To print a program list, press <b>MENU, 5, 1, 1, 7, ENTER.</b>	5.12 to 5.13
Macros List	Lists the each key's Macro key number and the name of the job stored in the Macro key. To print a program list, press <b>MENU, 5, 1, 1, 8, ENTER.</b>	8.4
Scanner Settings List	Lists the currently scanner settings. To print this list, press <b>MENU, 5, 1, 1, 9, ENTER.</b>	*
Store Doc. List	Prints how much memory each stored document is using. To print this list, press <b>MENU, 5, 1, 2, 0, ENTER.</b>	11.6
Tx confirmation report	Prints after document transmission.	11.5

\* For details of scanner settings, refer to the PDF manual on the Printer & Scanner driver CD.

# Activity journal

Just as a checkbook records your daily financial transactions, your machine keeps an activity journal which records its 100 most recent fax transactions. The activity journal lists the following information for each transaction:

- Assigned number, starting each day at 001
- Remote location called
- Resolution mode
- Starting date and time
- Duration, in minutes and seconds
- Length, in number of pages
- Department code (see page 9.8)
- Result of the call — If preceded by an asterisk (\*), this signifies an ECM communication. If preceded by a pound (#), this signifies communication was via the highspeed V.34 modem.
- Any special operations — For example, a fax call made using an external telephone will appear as “Manual”.



## Setting the activity journal

---

Your fax machine will print the activity journal automatically after 100 transactions. To toggle this automatic printing on or off:

- 1 Press **MENU, 3, 1, 1, ENTER**.

**Journal AutoPrt. :Off**  
▼/▲/Enter

- 2 Press  or  to select on or off and press **ENTER**.



## Printing an activity journal manually

---

To print an activity journal immediately without waiting for 100 transmissions to be completed:

- 1 Press **MENU, 5, 1, 0, 5, ENTER**.

**Tx Report**  
▼/▲/Enter

- 2 Press  or  to select the journal type you want to print.
  - “Tx Report” prints transmission report only.
  - “Rx Report” prints reception report only.
  - “Tx/Rx Report” prints both transmission and reception report.
- 3 Press **ENTER**.



## Setting the printing order of the activity journal

---



Your machine prints the activity journal for every fax transaction. For example, if your machine has to redial a call, it will list those redials on the journal.

If you want to list those activities in the order of their assigned numbers, you can change the printing order of the activity journal.

To change the printing order:

- 1 Press **MENU, 3, 1, 2, ENTER**.

**Journal Line Up :Off**  
▼/▲/Enter

- 2 Press  or  to select on or off.

If you want the activity journal to print in the order of assigned number, choose “On”.

Otherwise, the machine will list every fax transaction of the same command and same location.

- 3 Press **ENTER** to save the setting.

## Transmission confirmation report

### Setting the Transmission Confirmation Report

---

Your machine can print a transmit confirmation report (TCR) after sending every fax to any Group 3 fax machine. The TCR lists the following information for each communication:



- Date and time of the TCR's printout
- Remote location called
- Resolution mode
- Starting date and time
- Duration, in minutes and seconds
- Length, in number of pages
- Result of the call
- Any special operations — For example, a fax call made using an external telephone will appear as “Manual”.
- Sample of the document — An image of the first page of the document

If an error occurs, the TCR tells you the remote location which was called, the error code (page 12.18) and error message (page 12.14).

To set the printing of TCR:

- 1 Press **MENU, 3, 1, 3, ENTER**.

**Report AutoPrint:Off**  
▼/▲/Enter

- 2 Press  or  until the setting you want appears and press **ENTER**.

**NOTE:** You can change the present setting to the opposite for only one transmission by the following procedure.

- Press **REPORT**. (F-300 model only)
- or —
- Press **ADVANCED FUNCTIONS** repeatedly until “**Report**” appears, then press **ENTER**.

# Stored document list

Your machine can print the list of the documents stored in the memory. It will tell you how much memory each document is using.

The list includes:

- Type — The type of the document, such as “Batch box”, will appear.
- Data (in Kbyte) — How much memory is used for the document will appear.
- Page — The number of pages will appear.
- Note — Other information, such as the box number, will appear.

To print the list of documents stored in memory:

Press **MENU**, **5**, **1**, **2**, **0**, **ENTER**.

## Documents erased notification

- When the image data stored in memory is erased by accident, a notification will be printed as soon as the power comes back, listing information about the erased image data.
- The following is an example of a received file that has been erased. In addition, “Command erased”, “Erased Poll Documents” and “F-Code box document erased” may be printed.

NewYork Office

Fax:123-456-4890

Documents Erased

P.1

Sep 24 2004

13:34

No.	Name	Mode	Start Time	Time	Page	Dept	Result	Note
002	L.A Office	Normal	24,13:33	0'25"	1		OK	

1

2

3

4

5

6

7

8

9

1. **No.** — The number of the communication
2. **Name** — Registered in the following order
  - (1) TTI number registered for the destination name
  - (2) Space
3. **Mode** — Resolution in the communication
4. **Start Time** — The time the communication started
5. **Time** — The time required for the communication
6. **Page** — The number of pages received
7. **Dept.** — When “Department code” has been set, the department number is recorded here.
8. **Result** — Communications results.
  - OK: Completed normally
  - \*: Communicated in ECM mode
  - #: Communicated via super G3
  - Error code: Finished abnormally  
(For information regarding error codes, refer to page 12.18.)

9. **Remarks** —
- |            |                                 |
|------------|---------------------------------|
| Polling:   | Polling reception               |
| Manual:    | Manual reception                |
| F-Polling: | Indicates F-Code polling        |
| Security:  | Received in F-code security box |
| Relay:     | Received by F-code relay        |
| Bulletin:  | Received in F-code bulletin box |

# Maintenance and Troubleshooting

---

Maintenance.....	12.2
Cleaning tips.....	12.2
Cleaning the scanning area .....	12.2
Cleaning the ADF rollers .....	12.3
Cleaning the drum charge wire and LED print head .....	12.3
Replace the toner cartridge .....	12.4
Replace the drum cartridge .....	12.6
Troubleshooting .....	12.8
Document jams .....	12.8
Paper jams .....	12.11
LCD error messages .....	12.14
“Check Message” printouts .....	12.17
Error code .....	12.18
Machine problems .....	12.20
Faxing problems .....	12.20
Copying problems .....	12.21
Problems printing from your computer.....	12.21
Scanner problems .....	12.21
Print quality problems .....	12.22
If you cannot solve the problem.....	12.24

# Maintenance

## Cleaning tips

---

Some things to keep in mind about cleaning your machine:


- **Do** clean it! Dust and dirt, especially around the fax machine's air vents can shorten your machine's life.
- **Always** unplug the machine before you clean it.
- **Never spray any cleaner directly onto your machine.** The drifting spray could damage components inside.
- **Never try to clean sealed areas inside your machine.** They are sealed to protect your safety and the machine.
- For cleaning the machine's exterior, use a mild cleaning solution sprayed onto a lint-free cloth.
- In areas you cannot reach with swabs, **always** use dry, dust-free compressed air to gently blow away dust and other material.

## Cleaning the scanning area

---


### MFX-1330 model

- 1 Wipe the document glass, ADF glass and document pad with a clean, soft, lint-free cloth moistened with water.
- 2 Then wipe it with a clean, soft, dry, lint-free cloth until it is clean and dry.

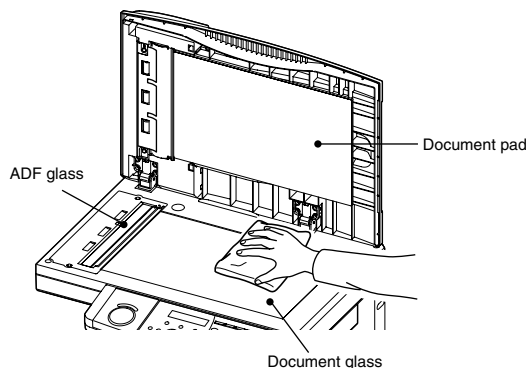

### F-300 model

- 1 Wipe the ADF glass with a clean, soft, lint-free cloth moistened with water.
- 2 Then wipe it with a clean, soft, dry, lint-free cloth until it is clean and dry.

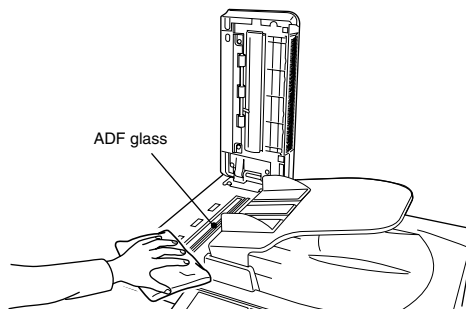


## Cleaning the ADF rollers

---

If you are having trouble with getting your documents to feed properly, try this procedure:

- 1 Turn off the power and disconnect the power cable from the wall outlet.
- 2 Open the ADF cover.
- 3 Use a cloth moistened with a rubber roller cleaner to clean the face of the rollers. Rotate the rollers by hand to allow cleaning of the entire roller surface.

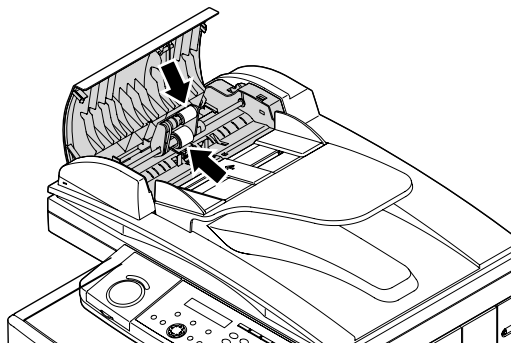


## Cleaning the drum charge wire and LED print head

---

If there are streaks on your print, the drum charge wire and LED print head may require cleaning.

- 1 Open the front cover.
- 2 Gently pull the cleaning rod to and fro fully to the end several times.

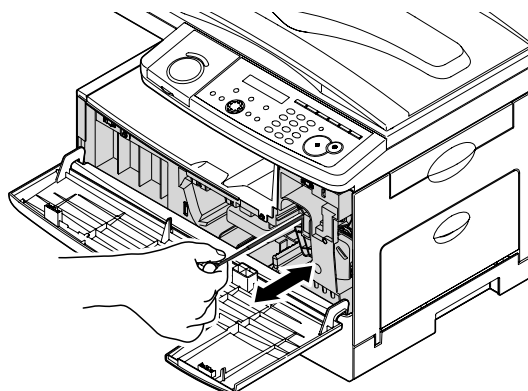

- 3 Close the front cover.


## Replace the toner cartridge

---


When the toner runs out, your machine shows “Toner Empty” on the LCD and it cannot print any page until the toner cartridge is replaced to the new one.

To replace the toner cartridge:


- 1 Open the front cover.

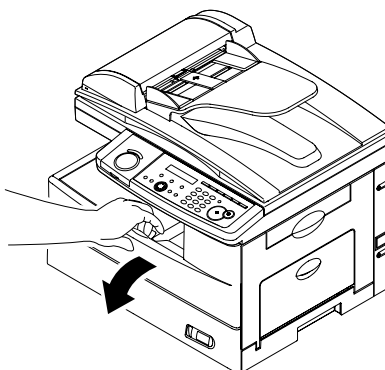

- 2 Turn the toner cartridge locking lever to the leftward (unlock position).

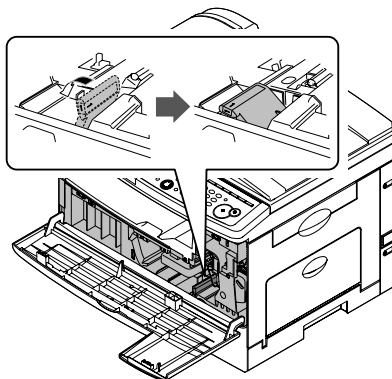

- 3 Pull the used toner cartridge out.

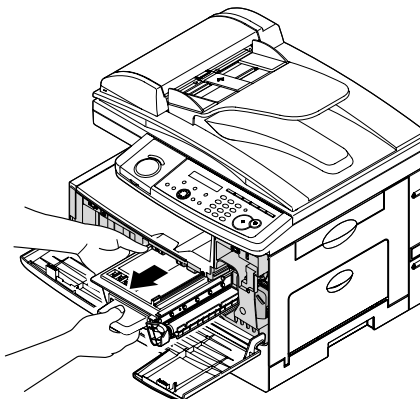


- 4** Unpack the toner cartridge from its carton. Then, holding the toner cartridge with both hands, gently shake it to distribute the toner evenly inside the cartridge.


---

**NOTE:** Do not touch the roller of the toner cartridge.


---

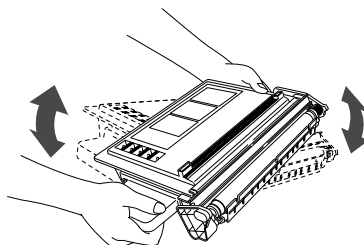

- 5** Slide the toner cartridge into the machine firmly until it locks into place completely.

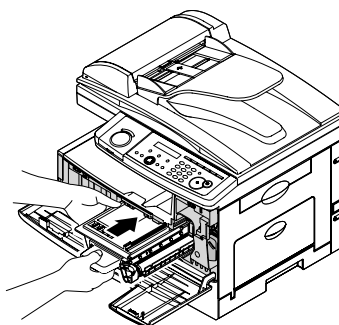

- 6** Turn the cartridge locking lever rightward until it locks into place completely.

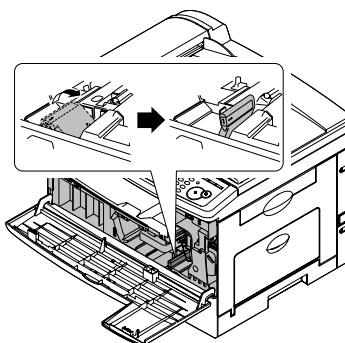

- 7** Clean the drum charge wire and LED print head.  
(See “Cleaning the drum charge wire and LED print head” on page 12.3)
- 8** Close the front cover.


## Replace the drum cartridge

---


The drum cartridge yields approximately 30,000 pages. When the drum is near the end of life, the machine shows “Replace Drum Soon” on the LCD. You should have a replacement drum cartridge soon. When the machine shows “Replace Drum”, it cannot print until the drum cartridge is replaced.

To replace the drum cartridge:


- 1** Open the side cover and front cover.
- 2** Turn the toner cartridge locking lever to the leftward (unlock position), then pull the toner cartridge out. The toner cartridge must be removed to replace the drum cartridge.

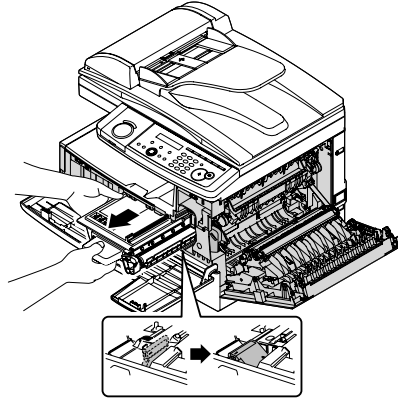

- 3** Pull the used drum cartridge out.

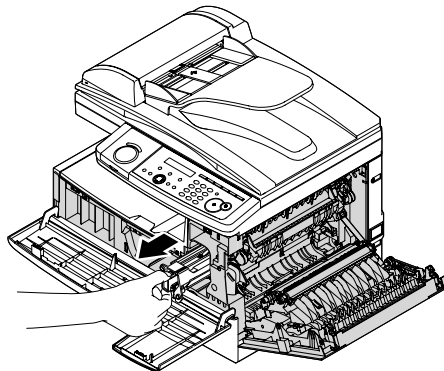


- 4** Unpack the new drum cartridge from its carton and slide it into the machine firmly until it locks into place completely.

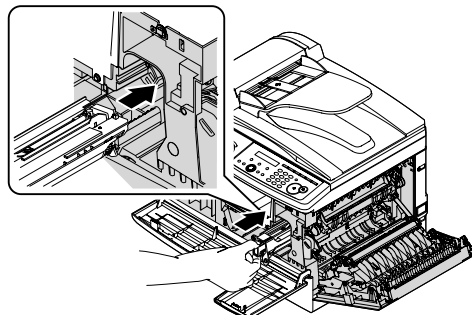




- 5** Reinstall the toner cartridge then turn the cartridge locking lever rightward until it locks into place completely.

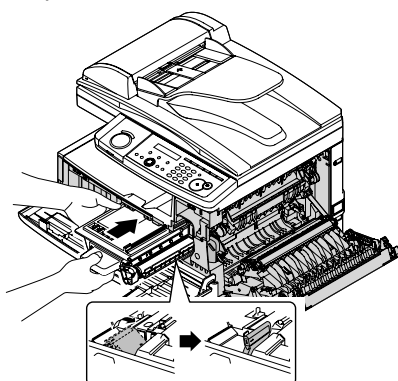

- 6** Close the front cover and side cover.

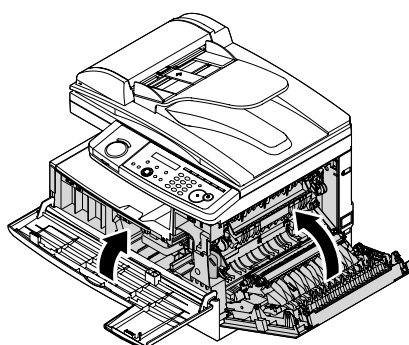

# Troubleshooting

## Document jams


---

### Case 1:

If a document jam in the ADF, the following message will be displayed.

**Open&Close ScanCover**  
**Reset Document**

Also, if a document jam occurs during the quick memory transmission or the real time transmission, the following check message will be printed to tell you which page is jammed.

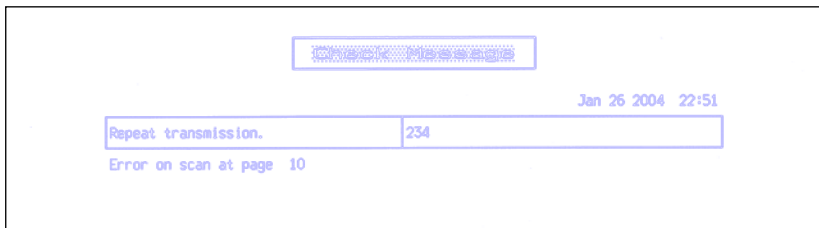

### Case 2:

If a document jams while scanning it into the memory for sorting copy or normal memory transmission, the machine will show:

**Document Jam**  
**ContStor Enter/Cancel**

- 1** If you want to continue the operation, press **ENTER** and proceed to step 2.  
To abort the operation, press **CANCEL**.

---

**NOTE:** If you wait more than 3 minutes without pressing any key, the machine will abort the operation automatically

---

- 2** The machine will show which page (i.e., which page number) is jammed. Clear the document jam and reset document in the ADF from the jammed page forward, then press **START**.

**p 2. Reset Document**  
**Press Start key**

---


**NOTE:**

- If you wait more than 3 minutes without pressing any key, the machine will begin to send or copy the document(s) it has.
- If you wish to cancel this operation, press **STOP**. The machine will delete all pages from memory and then return to the standby mode.


---

### *Jammed in input area*

- 1 Open the ADF cover.

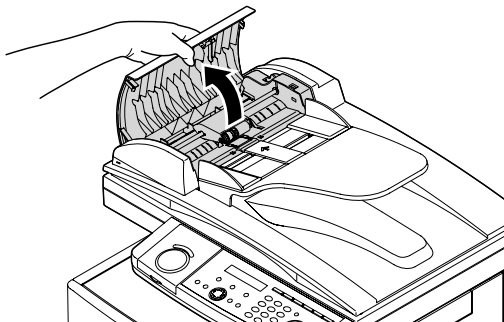

- 2 Pull the document gently and out of the ADF.  
If you cannot remove, turn the release knob to remove the jammed document.

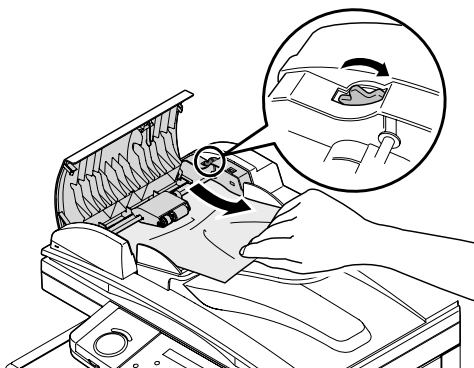

- 3 Close the ADF cover, making sure both sides are snapped down securely.

---


**NOTE:**

- To prevent document jam, use the document glass for wrinkled or torn documents.
- The document glass is available only for MFX-1330 model.

---

### *Jammed in feed area*

- 1 Open the platen cover. Open the ADF cover and turn the release knob to remove the jammed document.

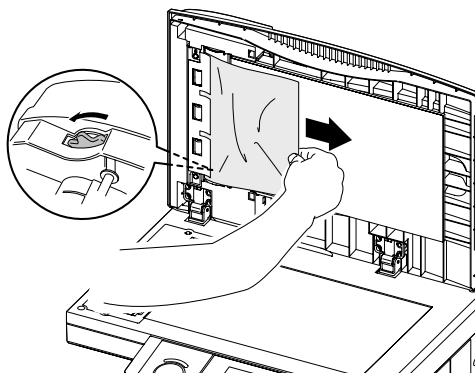

- 2 Close the platen cover and the ADF cover.

---


**NOTE:**

- To prevent document jam, use the document glass for wrinkled or torn documents.
- The document glass is available only for MFX-1330 model.

---

### ***Jammed in exit area***

- 1 Open the platen cover. Gently pull the jammed document. If you cannot it, open the ADF cover and turn the release knob to remove the jammed document.

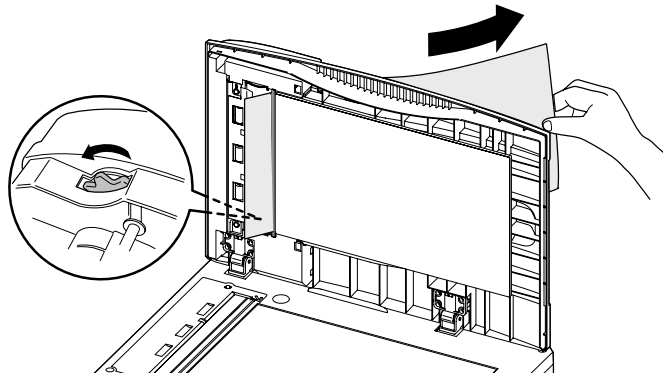

- 2 Close the platen cover and the ADF cover.

---

**NOTE:**

- To prevent document jam, use the document glass for wrinkled or torn documents.
- The document glass is available only for MFX-1330 model.

---

## Paper jams

If paper jams occur, the following message will appear on the LCD.

**Open 1st Side Cover  
Please Remove Paper**

Follow this procedures to clear the paper jam.



If a paper jam occurs during fax reception, the machine will store the received document in the memory and printout them automatically when you clear the paper jam.

**⚠ CAUTION:** When you open the side cover to remove the paper, **DO NOT** touch the fuser roller. The fuser unit is very hot.

**IMPORTANT:** Do not touch the drum cartridge surface. Scratches or smudges will result in poor print quality.

### Removing jammed paper



- 1 Pull the release lever to open the side cover.  
If the optional second cassette is attached, also open the 2nd side cover.

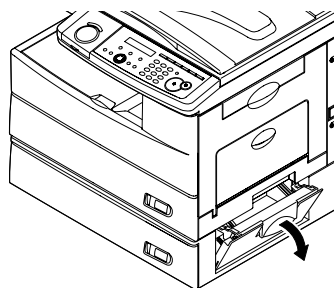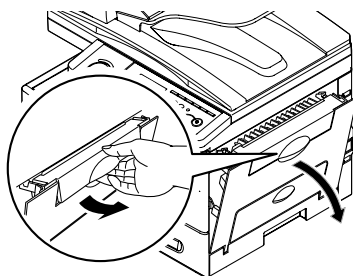


- 2 Carefully remove the jammed paper in the direction shown.

**NOTE:** Avoid getting unfixed toner on your hands and clothes when removing jammed paper.


### Jammed in feed area

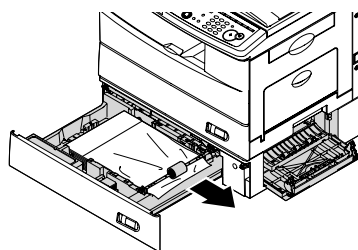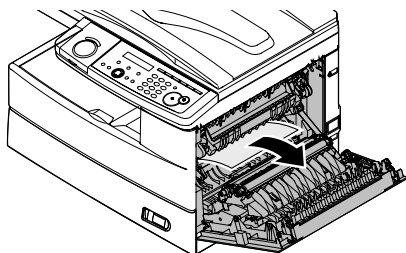

### Jammed in fuser area

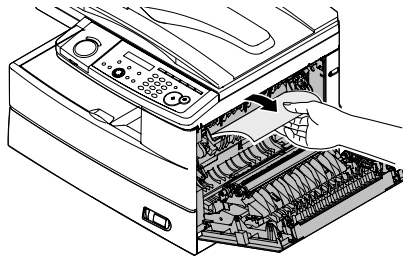


### Jammed in paper exit area

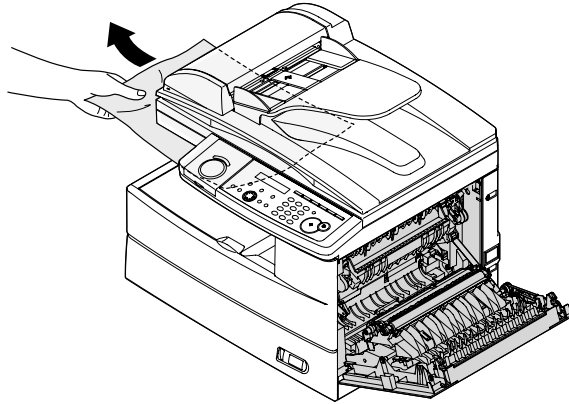


**If the jammed paper was fed a little and you cannot seize it easily:**


- 3** Open the paper cassette. After you pull it out completely, lift the front part of the cassette slightly up to release the cassette from the machine.

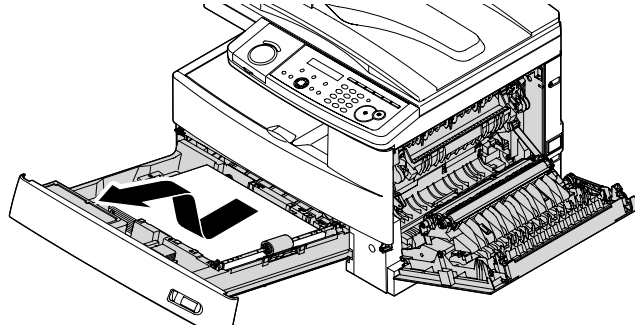

- 4** Carefully remove the jammed paper.

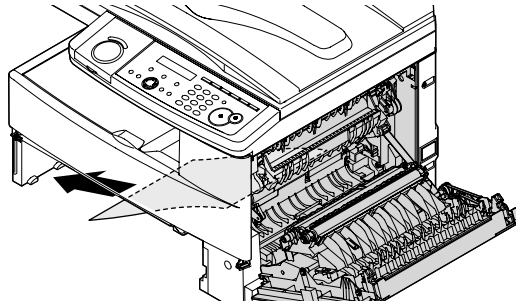

- 5** Close the side cover and insert the paper cassette. Lower the rear part of the cassette to align the rear edge to the slot of the machine, then insert it completely.

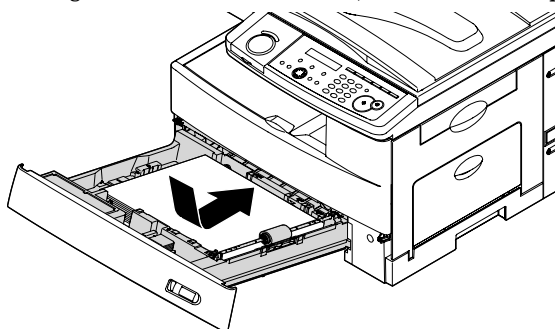


### ***Removing jammed paper from the bypass tray***

If the paper is not properly fed into the machine through the bypass tray, the following message will be displayed.

**Remove Bypass Paper  
Open&CloseFrontCover**

- 1** Pull the flapper release lever and pull the paper out of the machine.

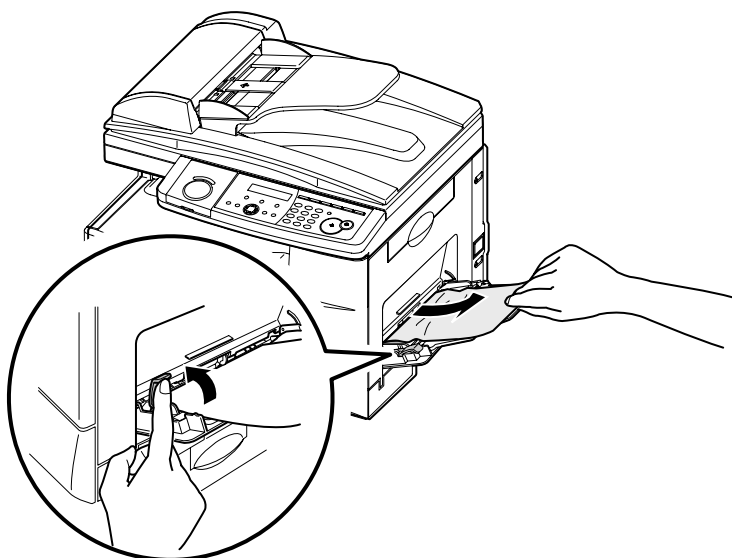

- 2** Open the front cover and then close it to clear the message on the LCD.

## LCD error messages




Occasionally, your machine encounters some trouble transmitting or receiving documents. When it does, it alerts you with an alarm. You can identify the problem with LCD messages and printed check messages.

Message on the LCD	Description / Solution
All Commands In Use	Your machine has all of its 99 possible delayed commands (automatic redialing counts as one) stored in memory and cannot accept another. Wait until your machine has completed one of the delayed commands or delete an existing command (see "Reviewing or canceling commands" on page 4.8).
Already Stored	You tried to enter the same fax (or phone) number already entered in your machine. Enter a different fax (or phone) number.
Box In Use	You tried to erase a F-Code box which contains at least one document. Erase the document(s), then try again.
Call For Service	The scanner lamp is dim or not operating. Make repeated copies to help evaporate any internal moisture. If that doesn't resolve the problem, contact your Muratec dealer.
Change to Fax Mode	You tried to store the document for polling (or for F-Code Box) when the machine is in the Copy mode. You can store the fax document only when the machine is in the Fax mode.
Check Memory Tx	You tried to turn the Fax&Copy feature on, but the memory transmission setting is off. To use the Fax&Copy feature, the memory transmission setting must be set to on. Set the Memory Tx to on (see page 10.5), then try again.
Check Paper Size Open&CloseFrontCover	The difference paper which is not same size you told your machine is loaded. Set correct sized paper or change the paper size setting (see page 2.16). Open and close the front cover to reset the printer.
Close XXX Cover	The cover indicated on the LCD is open or has not been closed securely. Close it properly.
Close XXX Cassette	The paper cassette indicated on the LCD is open or has not been closed securely. Close it properly.
Communication Error	A communication error disrupted the reception or transmission. If you were transmitting, press <b>STOP</b> to clear the error message and then re-try the transmission. If you were receiving a fax, try to contact the other person and have him/her re-try the transmission. (The problem may be entirely with his/her machine, phone line, etc.)
Copy Off	The copy protection feature is on. Turn off the copy protection (see page 9.13).
Department Code Full	You tried to enter department code more than 100. Your machine can store up to 100 department codes.
Document Full	You tried to enter a document into the F-Code box, but the machine has reached its capacity (30 documents). Delete a needless document stored in the F-Code boxes or use other F-code box.
Document Jam ContStor Enter/Cancel	A document jams while you are using the ADF. See pages 12.8 to 12.10 for clearing the document jam.
Document Stored	You tried to erase a batch box which contains at least one document. To erase a batch box, erase all the documents stored in the box.
Enter No. (0-32)	You tried to enter a call group number greater than 32. Your machine can maintain 32 call groups, numbered 1–32 (call group 0 covers all the groups). Enter the correct call group identifier number.
Enter Reduce/Enlarge	You tried to copy your document on the paper other than Letter, Half-letter or Legal size using the bypass tray, or the calculated zoom ratio is out of the acceptable range (25 – 400 %). Enter the zoom ratio manually although a part of the image might be lacked, or change the paper for copying.
Enter Scan Size	When you using the document glass*, you must manually enter the scan size of your document. Press <b>DOCUMENT SIZE</b> to choose the size.

\* The document glass is available only for MFX-1330 model.



Message on the LCD	Description / Solution
Feeder In Use	The command you are trying to enter requires the use of the ADF, which is already in use. Wait for the machine to stop using the ADF, then try again.
Hang Up Phone	The external telephone is not settled completely on its cradle.
In Relay Box or In Secure Box	You tried to store a document into the F-code box which is set to be a relay box or security box. Select the F-code box which is set to be a bulletin box.
Invalid I.D. Code	The F-code box I.D. code you entered is not valid. Try re-entering your F-code box I.D. code.
Invalid Number	You pressed a key which has no function during the current operation.
Invalid Passcode	The protection passcode (see page 9.2) you entered is not valid. Repeat the operation, entering the correct protection passcode.
Line Busy	You tried to erase a document which someone is polling from your machine. Wait for the fax to complete the polling operation.
Macro In Use	You tried to change the function for a Soft key, but that Soft key has been programmed in a Macro key. You cannot change the Soft key function until erase the Macro key that contains the Soft key you want to change. Erase the Macro, then try again.
Memory Overflow Start or Cancel	You tried to enter more pages into memory than your machine could store. Press <b>START</b> to tell your machine to keep as many pages in memory as possible, or press <b>CANCEL</b> to delete from memory all pages stored during this operation (but not previous operations).
Memory Overflow Press Stop	In PC printing, the machine received data more than it can fit in memory. Press <b>STOP</b> to cancel the printing job. Either delete unnecessary documents, retry after more memory becomes available, or split the printing into more than one operation.
Memory Overflow Rx	Memory has overflowed during the fax reception. Press stop to return the standby screen.
Mirror Carriage Error	The mirror carriage of your machine has become inoperable. Contact your Muratec dealer.
Mirror Locked	The transport mode is not turned off. Turn off the transport mode (see page 1.11).
No Command Stored	You pressed <b>JOB CONFIRM./FAX CANCEL</b> to review upcoming commands, but your machine had no stored. – or – You pressed a macro key which is not programmed any command.
No Department Code	You tried to turn on the department code setting but there are no department codes stored in your machine. Store at least one department code. – or – You entered incorrect department code at fax sending while the department feature is on. Enter correct department code.
No Document Stored	You tried to print a document from memory, but your machine had none stored.
No Drum	The drum cartridge is missing or has not been properly installed in your machine. Please properly install the drum cartridge.
No Number Stored	You selected an autodialer, batch box or F-code box number for which there is no fax (or phone) number programmed. Either choose another number or dial a phone number directly from the numeric keys.
No Passcode	You tried to program a security feature (see page 9.2), but there are no protection passcode stored in your machine. Store a protection passcode (see page 9.2).
No PIN Number	You selected “Mode1” in the PIN mask feature and tried to call an autodialer number in which no PIN has been entered, or to call using numeric keys without PIN. Enter a PIN.
No Report	You requested an activity journal or transmit confirmation report, but your machine has no record of any fax jobs having occurred.
No Toner Cartridge	The toner cartridge is missing or has not been properly installed in your machine. Please properly install the toner cartridge.
Not Allowed in Macro	During macro registration, you pressed the key which cannot be registered in Macro.
Open 1st Side Cover Please Remove Paper	The paper jammed in your machine. Open the side cover and remove the jammed paper gently and carefully. (See pages 12.11 to 12.13.)

Message on the LCD	Description / Solution
Open&Close ScanCover Reset Document	Either your document was not inserted correctly, or the fax to which you are sending can not handle the document's page length. Reset the page and try again.
Paper Mismatch Set XXX paper Press Stop	In PC printing, the size of paper in the paper cassette is not match up the paper size you specified by printer driver. Press <b>STOP</b> to cancel a print job. Then set the correct size of paper and try printing again.
Paper Mismatch Roteta the paper Press Stop	In PC printing, the direction of the Half-letter-sized paper on the bypass tray is wrong. Half-letter  is not available for PC printing. Set the Half-letter  on the bypass tray.
Please Call Service XXX	The printer unit of your machine does not work. Contact your Muratec dealer.
Please Supply Paper	The paper cassette or bypass tray is out of paper. Supply paper to the cassette and/or the bypass tray.
Please Wait	Your machine's printer is either warming up or busy. Please wait until the machine is finished printing and then re-try your command or operation.
Polling In Use	You tried to store the regular polling document in your machine, where one already had been stored. Wait for the machine to complete the regular polling operation or delete the stored document.
Printer In Use	The command you are trying to enter requires the use of the printer, which is currently in use. Wait for the machine to finish printing.
Protect Doc. Stored	A received document was in your machine's memory when you tried to turn off the security reception passcode. Print the received document from your machine's memory, then retry the desired operation.
Pull Blue Rod and Close Front Cover	The drum charge wire requires cleaning. Open the front cover, then pull the blue rod to clean the charge wire.
Replace Drum Soon	Your drum will need to be replaced soon. Please contact your Muratec dealer to purchase a new drum cartridge.
Replace Drum Unit Printer Not Usable	Your drum cartridge doesn't work. Your machine cannot print until it is replaced with a new drum cartridge.
Remove Bypass Paper Open&CloseFrontCover	A paper is not properly fed into the machine through the bypass tray. Pull up the flap-per release lever and pull the paper out of the machine. Then open and close the front cover to reset the printer.
Scanner In Use	The command you are trying to enter requires the use of the scanner, which is currently in use. Wait for the machine to complete the scan, then re-try the desired command.
SecurityRx is Off	You tried to turn the security reception on by pressing a soft key to which "security" is assigned, but the security reception setting is not set to on. To set the security reception setting to on, see page 9.3.
Select Paper Size	You tried to make a copy in the following conditions: <ul style="list-style-type: none"> <li>• Paper size selection is set to "Auto".</li> <li>• The bypass tray has the paper other than Letter, Half-letter  or Legal.</li> <li>• Paper cassette runs out of paper.</li> </ul> Press <b>PAPER SIZE /NEXT DOC.</b> to select your desired paper.
Sub-address In Use	You tried to enter a subaddress identical to one already used in another F-code box. Enter a different subaddress.
Toner Almost Empty	Your machine is almost out of toner. Please contact your Muretec dealer soon to purchase a new toner cartridge.
Toner Empty Printer Not Usable	Your toner cartridge is empty. Replace the toner cartridge. Your machine cannot print until it is replaced with a new toner cartridge.
Too Many Characters	You attempted to enter too many numbers or other characters in the current operation. Press <b>CANCEL</b> to delete the extra characters, then try again.
Too Many Locations	You tried to enter too many numbers for a broadcast. You can enter up to 200 autodialer number and up to 30 numbers entered through the numeric keys. Press <b>CANCEL</b> to delete the extra numbers.

Message on the LCD	Description / Solution
Too Many Steps	You tried to enter too many steps for a macro. You can enter up to 60 steps into a macro key.
Try Again When Printing Is Over	You tried to use the real time transmission while the machine is printing. To use the real time transmission, please try again after the printing is over.
Unable to Reduce	In the reduction copy using the ADF, if the calculated ratio is smaller than minimum reduction ratio (25%), this message will appear and you cannot make the reduction copy. Use the document glass*, though parts of the image might not be copied.
Unable to Sort Start/Stop	In PC printing, the data is too large to sorting. Press <b>START</b> the machine makes a print without collation. Press <b>STOP</b> the current PC printing job will be canceled.
Use FBS Glass	You tried to enlargement copy using the ADF. Your machine cannot enlargement copy from the ADF. Please set your document on the document glass* to make the enlargement copy.

\* The document glass is available only for MFX-1330 model.

## “Check Message” printouts

When there is a problem with a fax call and your machine detects an error, it produces an error printout headed by the words “Check Message”. This printout lists the following information about the fax transaction:

- The resulting error code (See “Error code” next page.)
- A communications error message (See “What error messages can mean” below.)
- The TTI (or phone number) of the fax machine with which your machine had attempted to communicate.

### What error messages can mean

The error messages on Check Message printouts can mean a variety of things. Here is a brief summary:

Error message	Possible meanings
Check condition of remote fax.	<ul style="list-style-type: none"> <li>• Remote machine malfunctioned</li> <li>• No “Handshake” signals from remote fax</li> <li>• Wrong phone number reached</li> </ul>
Repeat transmission.	<ul style="list-style-type: none"> <li>• Poor phone line conditions</li> <li>• No “Handshake” signals from remote fax</li> <li>• Document misfeed or miscount</li> <li>• Unable to reach remote machine after attempting specified number of redial tries</li> </ul>
Line is busy.	<ul style="list-style-type: none"> <li>• Remote machine’s line was busy</li> <li>• Remote machine’s line didn’t answer</li> </ul>
Check received documents.	<ul style="list-style-type: none"> <li>• Remote confirmation signal not received from remote fax</li> <li>• Poor line conditions caused a poor image</li> </ul>
Memory full.	<ul style="list-style-type: none"> <li>• Remote fax’s memory is full</li> </ul>
Dialing number is not set.	<ul style="list-style-type: none"> <li>• Stored phone number failed to dial properly</li> </ul>
Stopped.	<ul style="list-style-type: none"> <li>• Someone pressed <b>STOP</b> at the remote fax in the middle of the “Handshake”</li> </ul>

## Error code

---

### *Dialing errors*

- D.0.3,**  
**D.0.8** The remote unit didn't respond, the call couldn't be completed or **STOP** was pressed during dialing. Re-try the call. If your machine repeats the message, call the remote fax unit's operator and verify that unit is operating properly.
- D.0.2** The remote unit is busy. Try the call again.
- D.0.6,**  
**D.0.7** Either the remote unit didn't respond, the call somehow didn't go through or **STOP** was pressed during dialing. Try the call again.

### *Reception errors*

- R.1.1** The calling fax machine didn't respond to your fax machine. This can happen if someone dials a wrong number or if the remote machine restricts access through use of a passcode.
- R.1.2** The two fax machines were incompatible. Your machine sends and receives only ITU-T Group 3 fax communication, the industry standard since the early 1980s.
- R.1.4** **STOP** was pressed at the receiving fax machine.
- R.2.3** Poor phone line conditions made fax communication impossible. Call someone at the remote machine's location.
- R.3.1** The sending fax machine detected too many errors from the receiving fax machine.
- R.3.3** The sending fax machine is incompatible or had a document feeder problem during transmission.
- R.3.4** Poor phone line conditions may have prevented your fax machine from properly printing some or all of the pages it received.
- R.4.1** The machine received too large length data that over your machine's limit.
- R.4.2** Either the line disconnected before transmission or the transmitting fax machine needs maintenance.
- R.4.4** The machine has reached its memory capacity.
- R.5.1,**  
**R.5.2** ECM reception failed (perhaps due to line noise).
- R.8.1** A compatibility error occurred.
- R.8.10** Line noise or other problems prevented line probing.
- R.8.11** The fax machine timed out while waiting for the retrain signal.

### *Transmission errors*

- T.1.1** The remote fax machine didn't respond to your machine. Call someone at the remote machine's location.
- T.1.4** **STOP** was pressed during transmission.
- T.2.1** Either the phone line disconnected during transmission or fax communication became impossible due to bad phone line conditions. Try the call again.
- T.2.2** The two fax machines were incompatible. Your machine sends and receives only ITU-T Group 3 fax communication, the industry standard since the early 1980s.
- T.2.3** Bad phone line conditions made fax communication impossible. Conditions can change rapidly, so try the call again later.
- T.3.1** The page counter in your fax machine detected a document feeder error during transmission. Carefully re-insert the document into the feeder and re-try the call.

- T.4.1**      The telephone line disconnected during transmission because of excessive modem errors or because remote unit ran out of paper. Try the call again.
- T.4.2**      After transmission began, poor line conditions developed. Try the call again.
- T.4.4**      Poor line conditions prevented transmission. Try the call again.
- T.5.1,**  
**T.5.2,**  
**T.5.3**      ECM transmission failed (perhaps due to line noise). Conditions can change rapidly, so try the call again later.
- T.8.1**      A compatibility error occurred.
- T.8.10**     Line noise or other problems prevented line probing.
- T.8.11**     The remote fax machine didn't complete the equalizer training phase.

## Machine problems

Symptom	Suggested solutions
The LCD shows nothing, and the keys are not working.	Check that the power switch is turned on.
The machine is not activated when the power switch is turned on.	Check that the power cord is connected properly.
The machine beeps and shows an error message.	See “LCD error messages,” on page 12.14.
Frequently document jams	<ul style="list-style-type: none"><li>• Check for the ADF cover is closed properly.</li><li>• If there is a foreign matter in the ADF, remove it.</li><li>• Ensure that the document is the proper weight. (See “Document handling,” page 2.10.)</li><li>• Clean the ADF rollers (see page 12.3.)</li></ul>
Frequently paper jams	<ul style="list-style-type: none"><li>• Ensure that the paper is the proper paper weight. (See “Paper handling,” page 2.12.)</li></ul>

## Faxing problems

Symptom	Suggested solutions
Cannot sending	<ul style="list-style-type: none"><li>• Check that the phone line is connected properly.</li><li>• Check that the number stored in your autodialer is correct.</li><li>• Make sure that the machine is in fax mode. If not, change to the mode to the fax mode by pressing <b>COPY</b> ▶ <b>FAX</b> ▶ <b>SCAN</b>.</li></ul>
Cannot stop the sending	Your machine cannot cancel a sending by pressing <b>STOP</b> . To cancel a sending, press <b>FAX CANCEL</b> and select a job you want to cancel, then press <b>ENTER</b> . (See “Reviewing or canceling commands,” page 4.8 for more details.)
Cannot receive automatically	<ul style="list-style-type: none"><li>• Check that the phone line is connected properly.</li><li>• Check that the machine is in the automatic receiving mode (page 5.2).</li><li>• The memory may be full. If there is no paper in the cassette, set a paper to print the received document stored in the memory.</li></ul>
Cannot receive manually	<ul style="list-style-type: none"><li>• Make sure that the external phone is attached to your machine to receive a fax manually.</li><li>• In manual receive mode, you must press <b>START</b> before you hang up the phone.</li><li>• The memory may be full. If there is no paper in the cassette, set a paper to print the received document stored in the memory.</li></ul>
Cannot store a document into the memory	<ul style="list-style-type: none"><li>• Make sure that the machine is in fax mode. If not, change to the mode to the fax mode by pressing <b>COPY</b> ▶ <b>FAX</b> ▶ <b>SCAN</b>.</li><li>• The memory may be full. If there is no paper in the cassette, set the paper to print the received document stored in the memory.</li><li>• The number of document can be stored in the current operation is full. Delete unnecessary document.</li></ul>

## Copying problems

Symptom	Suggested solutions
Cannot make a copy	<ul style="list-style-type: none"> <li>Make sure that the machine is in copy mode. If not, change to the copy mode by pressing <b>COPY ▶ FAX ▶ SCAN</b>.</li> <li>Make sure that the document is loaded correctly. If placing the document on the document glass, the side to be copied should be face down*. If placing the document in the ADF, the side to be copied should be face up.</li> </ul>
Copy quality is poor	See "Print quality problems," on page 12.22.

\* The document glass is available only for MFX-1330 model.

## Problems printing from your computer








Symptom	Suggested solutions
Cannot print from your computer	<ul style="list-style-type: none"> <li>The USB cable or IEEE-1284 parallel cable is not connected properly. Check the cable connection.</li> <li>The port setting is incorrect. Check the printer port setting in the Windows Control Panel.</li> <li>The printer driver may not be installed properly. Reinstall the printer driver.</li> </ul>
Printing is too slow	<ul style="list-style-type: none"> <li>Computer may not have enough memory. Install more RAM in your computer.</li> <li>The print job is large or complex. The machine takes a lot of times when printing a large print jobs. Please wait the machine finish the job.</li> </ul>
Print quality is poor	See "Print quality problems," on page 12.22.
The printing option does not effect for the printouts.	Some software applications overwrite the option set on the printer property page. Choose your printing options from the application.

## Scanner problems

Symptom	Suggested solutions
Cannot scan a document	<ul style="list-style-type: none"> <li>The TWAIN driver may not be installed properly. Reinstall the printer driver.</li> </ul>
"Muratec Color TWAIN Scanner" does not appear in the list of the available scanner device on your application software.	<ul style="list-style-type: none"> <li>The TWAIN driver may not be installed properly. Reinstall the printer driver.</li> </ul>
Cannot retrieve the scanned document from the scan box.	<ul style="list-style-type: none"> <li>Make sure a scanning application is installed on your computer.</li> <li>The USB cable or IEEE-1284 parallel cable is not connected properly. Check the cable connection.</li> <li>The TWAIN driver may not be installed properly. Reinstall the printer driver.</li> </ul>
Scanned image looks dirty	<ul style="list-style-type: none"> <li>The document glass* or ADF glass may be dirty. Clean the glass (see page 12.2.)</li> <li>Change the scanning contrast by pressing <b>CONTRAST</b>.</li> <li>Change the scanning resolution by pressing <b>DOC. RESOLUTION</b>.</li> </ul>




\* The document glass is available only for MFX-1330 model.
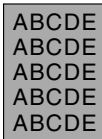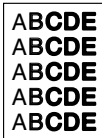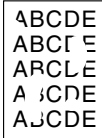
## Print quality problems

<p>Pages are blank</p> 	<ul style="list-style-type: none"> <li>The document is loaded incorrectly. Set the document face up on the ADF or face down on the document glass*.</li> <li>The toner cartridge may be defective. Remove the toner cartridge and check it for damage. If the problem persists, replace the toner cartridge.</li> </ul>
<p>Pages are black</p> 	<ul style="list-style-type: none"> <li>The toner cartridge may be defective. Remove the toner cartridge and check it for damage. If the problem persists, contact Muratec dealer.</li> </ul>
<p>Printouts are too light</p> 	<ul style="list-style-type: none"> <li>Too light contrast is selected in the scanning setting. Select a darker contrast setting.</li> <li>The toner cartridge may be out of toner, or the toner may be very low. Remove the toner cartridge and shake it a few times to redistribute the toner inside. If the problem persists, replace the toner cartridge.</li> <li>The paper is damp. Replace the paper.</li> </ul>
<p>Printouts are too dark</p> 	<ul style="list-style-type: none"> <li>A scanning contrast setting that is too dark is selected. Select a lighter contrast setting.</li> </ul>
<p>Printouts have a blurred background</p> 	<ul style="list-style-type: none"> <li>The document glass* or ADF glass is dirty. Wipe the glass with a dry soft cloth.</li> <li>The toner cartridge may be defective. Remove the toner cartridge and check it for damage. If the problem persists, replace the toner cartridge.</li> </ul>
<p>Printouts are of uneven density</p> 	<ul style="list-style-type: none"> <li>The toner may be unevenly distributed inside the toner cartridge. Remove the toner cartridge and shake it a few times to redistribute the toner inside.</li> <li>The drum cartridge may be defective. Remove the drum cartridge and check it for damage. If the problem persists, replace the drum cartridge.</li> </ul>
<p>Printouts have irregularities</p> 	<ul style="list-style-type: none"> <li>The paper you are using may have absorbed moisture, perhaps due either to high humidity or water having been spilled on the paper supply. Toner will not adhere well to wet paper. Replace the paper with dry paper.</li> </ul>

\* The document glass is available only for MFX-1330 model.

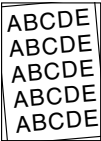

<p>Printouts have white and/or black lines</p> 	<ul style="list-style-type: none"> <li>• The ADF glass or rollers of the ADF may be dirty. Clean the ADF glass and/or the rollers of the ADF. (See pages 12.2 to 12.3.)</li> <li>• The drum charge wire may be dirty. Open the front cover, then gently pull and push back the blue rod to clean the drum charge wire. (See page 12.3.)</li> <li>• The toner cartridge or drum cartridge may be defective. Remove the cartridges and check them for damage. If the problem persists, replace either or both of the cartridges as indicated.</li> </ul>
<p>Printouts have toner smudges</p> 	<ul style="list-style-type: none"> <li>• The document glass* is dirty. Wipe the document glass* with a dry soft cloth.</li> <li>• The document pad* is dirty. Clean the document pad* with a soft cloth dampened with a mild detergent.</li> <li>• The toner cartridge or drum cartridge may be defective. Remove the cartridges and check them for damage. If the problem persists, replace either or both of the cartridges as indicated.</li> <li>• If you find smudges on the back of the printouts, the transport roller may be dirty. Your machine normally cleans the transport roller automatically. If other solutions fail, please contact your Muratec dealer.</li> </ul>
<p>The image is not aligned properly on the paper.</p> 	<ul style="list-style-type: none"> <li>• The document is not positioned correctly. Correctly position the document against the document scales. If you are using the ADF, correctly adjust the document guides for the size of the document.</li> <li>• The ADF glass is dirty (while using the ADF). Wipe the ADF glass with a dry soft cloth. (See page 12.2.)</li> <li>• The document guides are not slid up against the edges of the document. Slide the document guides against the edges of the document.</li> <li>• Curled paper was loaded into the paper cassette. Flatten the paper before loading it.</li> </ul>

\* The document glass and the document pad is available only for MFX-1330 model.

## If you cannot solve the problem

---

If you have a problem with your machine that you cannot solve with the information provided in this chapter, contact your local Muratec dealer or call the Muratec Customer Support Centre at (800) 347-3296 (from U. S. only ).

---

**⚠ CAUTION:** If the machine makes strange noises, emits smoke or strange smells, unplug it immediately and contact your local Muratec dealer. Do not attempt to disassemble or repair the machine yourself.

---


---

**IMPORTANT:** Attempting to repair the machine yourself may void the limited warranty.

---

If you contact the Muratec Customer Support Centre, make sure you have the following information ready;

- Product name: MFX-1330 or F-300
- Serial number (located on the label located at the back of the machine)
- Details of the problem
- Steps taken to try resolve the problem and the results

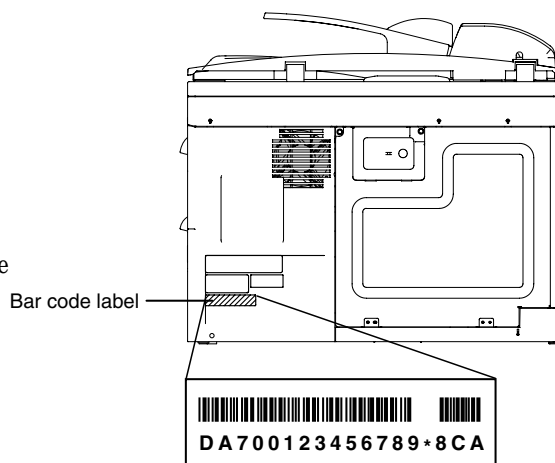

Close up, the bar code label looks something like this, but with a different set of numbers.

# Appendix & Index


---

Specifications.....	AI.2
General .....	AI.2
Fax.....	AI.3
Copy .....	AI.3
Printer.....	AI.3
Scanner .....	AI.4
Consumable items .....	AI.4
Index .....	AI.5

# Specifications

## General

Multitasking	Quad access		
Scanning method	Flatbed CCD		
Printing method	LED scanning, Electrophotographic printing		
Acceptable document size	(See page 2.10)		
Document weight	(See page 2.10)		
Printing paper size	(See page 2.12)		
Power requirement	230V AC 50/60 Hz.		
Power consumption	MFX-1330 model	F-300 model	
	Energy save mode:	?? W	?? W
	Standby:	?? Wh	?? Wh
	Maximum:	?? W	?? W
Environmental temperature	10 °C to 32 °C		
Relative humidity	20 to 80% RH		
LCD	20 characters × 2 lines		
Image memory capacity	8 MB (650 pages* approx.) plus optional 32MB (additional 2,720 pages* approx.) <small>*Using the ITU-T test document 1 with normal resolution.</small>		
Image memory backup time	8 MB: 72 hours* 40 MB: 24 hours* <small>*Must be charged for at least 24 hours to reach full charge</small>		
Weight	Approx. 22.9 Kg (including consumables)		
ADF capacity	Up to 80 sheets (Letter, 75 g/m <sup>2</sup> or 20lb. paper)		
Paper cassette capacity	Paper cassette; 500 sheets (80 g/m <sup>2</sup> or 20lb. paper) Bypass tray; 50 sheets (80 g/m <sup>2</sup> or 20lb. paper)		
Exit paper tray capacity	250 sheets (60 to 90 g/m <sup>2</sup> or 20-24lb. paper)		
Dimensions (WxDxH)	520 × 450 × 446 mm (20.5 × 17.7 × 17.6 in.)		

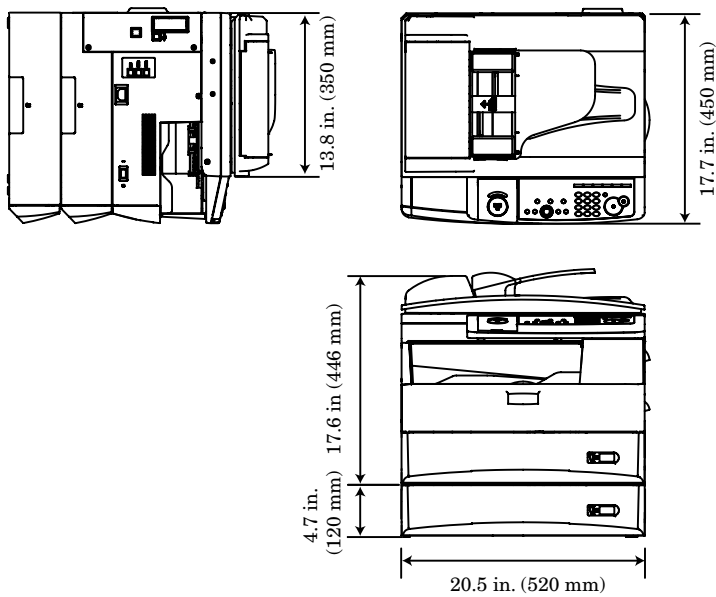

## Fax

<b>Compatibility</b>	ITU-T Group 3 and Super Group 3
<b>Applicable line</b>	Public Switched Telephone Network (PSTN) or equivalent
<b>Coding method</b>	ITU-T-standard MMR, MR, MH and JBIG
<b>Modem speed</b>	33,600, 31,200, 28,800, 26,400, 24,000, 21,600, 19,200, 16,800, 14,400, 12,000, 9,600, 7,200, 4,800, 2,400 bps Automatic fallback
<b>One-touch dial</b>	40 destinations
<b>Speed-dial</b>	160 destinations
<b>Call group</b>	32 groups
<b>Broadcasting</b>	230 destinations
<b>Transmission speed</b>	Approx. 2 seconds/page.* * Based on memory-to-memory transmission of ITU-T test document 1 to a Muratec fax machine. Your transmission times will vary, but your machine always will provide the fastest transmission speeds possible under ITU-T guidelines and phone-line conditions.
<b>Scanning width</b>	8.2 in. (208 mm)
<b>Grayscale</b>	256-levels
<b>Scanning resolution</b>	Normal (8 dots/mm × 3.85 lines/mm) Fine (8 dots/mm × 7.7 lines/mm) Super-fine (16 dots/mm × 15.4 lines/mm) * * In the case that the remote fax has the ability of "16 dots/mm × 15.4 lines/mm". If not, the superfine resolution is "8 dots/mm × 15.4 lines/mm".
<b>Receive reduction ratio</b>	Grayscale (8 dots/mm × 7.7 lines/mm) Auto (50% to 100%) or Fixed (100%)

## Copy

<b>Scanning resolution</b>	600 dots/in. × 300 lines/in.
<b>Scanning width</b>	8.5 in. (216 mm)
<b>First copy time</b>	Approx. 12 seconds (using Letter-sized paper in 1st paper cassette)
<b>Print speed</b>	13 cpm (using Letter-sized paper in 1st paper cassette)
<b>Zoom ratio</b>	ADF: 25% to 100 % Document glass*: 25% to 400 %
<b>Preset ratio</b>	ADF: 100%, 78%, 64%, 50% Document glass*: 154%, 129%, 121%, 100%, 78%, 64%, 50% * The document glass is available only for MFX-1330 model.

## Printer

<b>Print resolution</b>	600 dpi
<b>Print speed</b>	13 ppm (using A4-sized paper in 1st paper cassette)
<b>Color /Mono</b>	Monochrom
<b>Operating system</b>	Windows 95, 98, Me, NT 4.0, 2000, XP (English version)
<b>Printer driver</b>	GDI, PCL (option)
<b>Interface</b>	USB port Ethernet port (option)

## Scanner

---

<b>Compatibility</b>	TWAIN (Version 1.9)
<b>Color/Mono</b>	Color or Monochrome
<b>Scanning resolution</b>	600 dpi, 300 dpi, 200 dpi
<b>Scanning width</b>	208 mm
<b>Grayscale</b>	256-level
<b>Scan boxes</b>	20 boxes
<b>Operating system</b>	Windows 98, Me, 2000, XP (English version)

## Consumable items

---

<b>Drum cartridge life</b>	Approx. 30,000 pages*
<b>Toner cartridge life</b>	Approx. 16,000 pages*
<b>Starter toner cartridge life</b>	Approx. 3,000 pages*

\*Based on 6% document coverage and letter-sized two-page interval printing.

---

**NOTE:** Specifications are subject to change without notice.

---

# Index

## A

Activity journal .....	11.4
Advanced functions	
copying .....	7.7
fax reception .....	5.8
fax sending .....	4.11
Auto Reset .....	10.8
Auto Reset Time .....	10.6

## B

Back key .....	2.4
Batch transmission .....	4.14
Broadcasting .....	4.12
Bulletin box. <i>See</i> "F-code box"	

## C

Call group dialing .....	3.9
Cassette size .....	10.2
Character	
correcting .....	2.3
entering .....	2.2
Cleaning	
ADF rollers .....	12.3
drum charge wire .....	12.3
LED print head .....	12.3
scanning area .....	12.2
Combine .....	7.8
Commands .....	4.8
Confirmation report .....	11.5
Copy Auto .....	10.6
Copy charge setting .....	9.10
Copy protection .....	9.13
Counters .....	8.8
Cover page .....	4.20

## D

Date & Time .....	1.14, 10.3
Delayed transmission .....	4.13
Department code .....	9.8
Dialing pause setting .....	10.5
Document handling .....	2.10
acceptable document .....	2.10
Document type .....	7.4
Drum cartridge	
replace .....	12.6
Duplex copy .....	7.9

## E

ECM Mode .....	10.5
Energy save mode .....	1.17, 10.3
Error code .....	12.18
Error messages .....	12.14
external phone .....	1.8

## F

F-code box .....	6.2
Fax & Copy .....	4.19
Fax charge setting .....	9.10
Fax reception mode .....	1.14, 5.2
Function table .....	2.5

## I

Idle time setting .....	1.16
Initial settings	
Date & Time .....	1.14
Fax reception mode .....	1.14
Idle time setting .....	1.16
Language .....	1.14
TTI (Your name) .....	1.15
Usual TTI .....	1.16
Your fax number .....	1.15

## J

Journal .....	11.4
---------------	------

## L

Language setting .....	1.14
Lists	
Batch box list .....	11.3
Batch document list .....	11.3
Block junk dial list .....	11.2
Commands list .....	11.2
Copy settings list .....	11.2
Department list .....	11.2
F-code box list .....	11.3
F-code document list .....	11.3
Fax forwarding list .....	11.3
Fax settings list .....	11.2
Function list .....	11.2
Group list .....	11.2
Machine settings list .....	11.2
Macros list .....	11.3
One-touch dial list .....	11.2
Scanner settings list .....	11.3
Speed dial list .....	11.2
Stored document list .....	11.3, 11.6

Loading paper	
in bypass tray .....	2.15
in cassette .....	2.13
Loading the documents.....	2.11

## M

Machine setting.....	10.2
Macro keys.....	8.4
Memory overflow message .....	4.3, 7.2
Memory transmission .....	4.3, 10.5
sending using the ADF .....	4.4
sending using the document glass ...	4.5
Mixing document resolution and contrast...	4.2

## N

Non memory transmission .....	4.6
Number of rings .....	10.5

## O

One-touch keys.....	3.4
Out-of-paper reception.....	5.5

## P

Page counter.....	8.8
Paper handling.....	2.12
acceptable paper .....	2.12
paper size setting .....	2.16
Paper Source.....	10.3
Phone directory dialing.....	3.11
Polling receiving.....	5.11
Polling transmission .....	4.18
Primary Mode.....	10.3
Print parameters.....	10.4
Protection passcode.....	9.2, 10.2

## Q

Quick memory transmission .	4.3, 10.5
-----------------------------	-----------

## R

Real time transmission.....	4.3, 4.6
Receive time stamp.....	10.5
Redialing.....	4.7
Redial setting .....	10.5
Relay box. <i>See</i> "F-code box"	
Report .....	11.5
Resetting the counter	
for department code list.....	9.12

## S

Scanning contrast .....	4.2, 7.4
Scanning resolution .....	4.2
Scan parameters .....	10.4, 10.6, 10.8
Searching the function.....	2.4
Security box. <i>See</i> "F-code box"	
Short-cut operation .....	2.4
Silent mode.....	10.2
Soft keys .....	8.2
Sort .....	7.5
Speaker volume.....	1.12
Special dialing characters .....	3.2
Speed-dial numbers .....	3.7
Subaddressing and password.	
<i>See</i> "F-code box"	
Symbol	
entering .....	2.3

## T

Toner cartridge	
replace .....	12.4
Transport mode.....	1.11
Troubleshooting .....	12.8
TTI (Your name).....	1.15
TTI sending .....	4.17

## U

Usual TTI selection .....	1.16
---------------------------	------

## Y

Your fax number.....	1.15
----------------------	------

## Z

Zoom ratio.....	7.4
-----------------	-----





**Muratec America, Inc.**

3301 E, Plano Parkway, Suite 100  
Plano, Texas 75074

UPC barcode